

ELBA

THERMO POT

MODEL: ETP-D4013(WH)/

ETP-D5013(WH)/

ETP-D6013(WH)

Owner's Manual

Please read this manual carefully before operating your set.

Retain it for future reference.

Record model number and serial number of the set.

See the label attached on the set and quote this information to your dealer when you require service.


For The Warranty Terms & Conditions, Please Refer To Warranty Certificate.

IMPORTANT SAFEGUARDS


When using this appliance, basic precautions should always be followed, including the following:

1. Read all instructions before use.
2. Do not touch on the hot surfaces, especially the area near steam vent.
3. To avoid the hazard caused by the overload of the circuit, do not use the extension cord.
4. Do not immerse the appliance, power cord or plug in water or any other liquids.
5. To reduce the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. Return the appliance to the nearest authorized service center for examination, repair or adjustment.
6. Do not use foreign accessory attachments that ELBA does not recommended as it may result in fire, electric shock or personal injury.
7. Always use the appliance on a flat, stable and heat resistant surface.
8. Do not let the power cord hang over the edge of table or counter, or touch on hot surface.
9. Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
10. Do not place the appliance on unstable surfaces or surfaces that can be affected by heat, near walls or furniture.
11. Extreme caution must be taken when moving the appliance containing hot water.
12. Always connect the receptacle to the appliance first, and then connect the power plug to the wall outlet.
13. Do not lift, tilt, or shake the appliance or carry it by the lid.
14. Close the lid securely and firmly.
WARNING: Do not open the lid or dispense hot water while boiling.
15. Do not fill the water more than the full line marking. Please refer to the maximum water level marking under the product description. If the appliance is overfilled, it may cause splashing, which may pose a hazard to the user.
16. Do not block the steam vent.
17. Do not rotate the appliance while dispensing hot water.
18. Always unplug from the wall outlet when not in use. Let the appliance to cool down before cleaning and before detaching the lid.
19. Do not use the appliance outdoors.
20. Never overfill boiling water as it may cause splash out! Always make sure that the lid is clipped in place during use.
21. Keep hands off from the water outlet as splashing may occur due to continuance of water emission for a second or two right after selecting the cup switch, dispense button and manual pump.
22. This appliance is for boiling water only. Never boil milk or any other liquids with this appliance.
23. Use this appliance for its intended use only.
24. This product has been designed for domestic and household use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the warranty will not apply.
25. Children must be supervised to ensure that they do not play with the appliance.
26. This appliance is not designed to be used by people (including children) with a physical, sensory or mental impairment, or people without knowledge or experience, unless they are supervised or given prior instructions concerning the use of the appliance by someone responsible for their safety.

WARNING

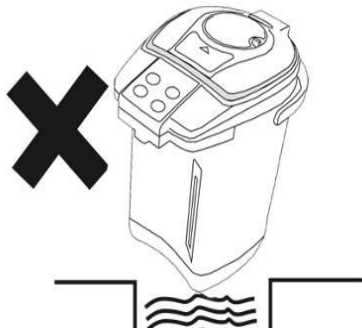


To protect against electric shock, do not immerse the appliance, power cord or plug in water or any other liquids.

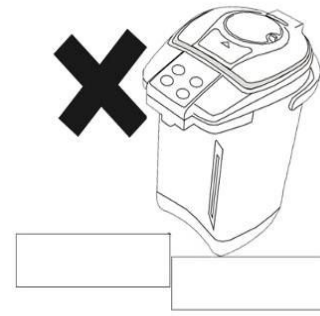


Do not place the appliance on unstable surfaces. Always use the appliance on a flat, stable and heat resistant surface.



This appliance is for boiling water only. Never boil milk or any other liquids with this appliance.


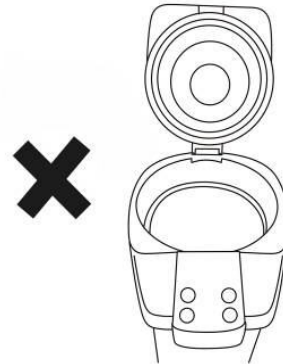


Do not fill the water more than the full line marking. Please refer to the maximum water level marking under the product description. If the appliance is overfilled, it may cause splashing, which may pose a hazard to the user.

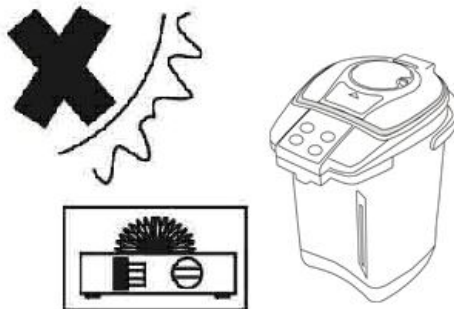


Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.

PRODUCT DESCRIPTION

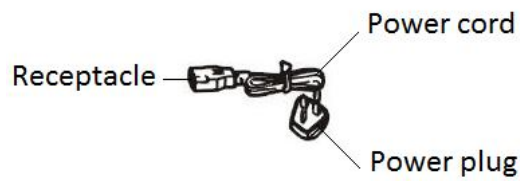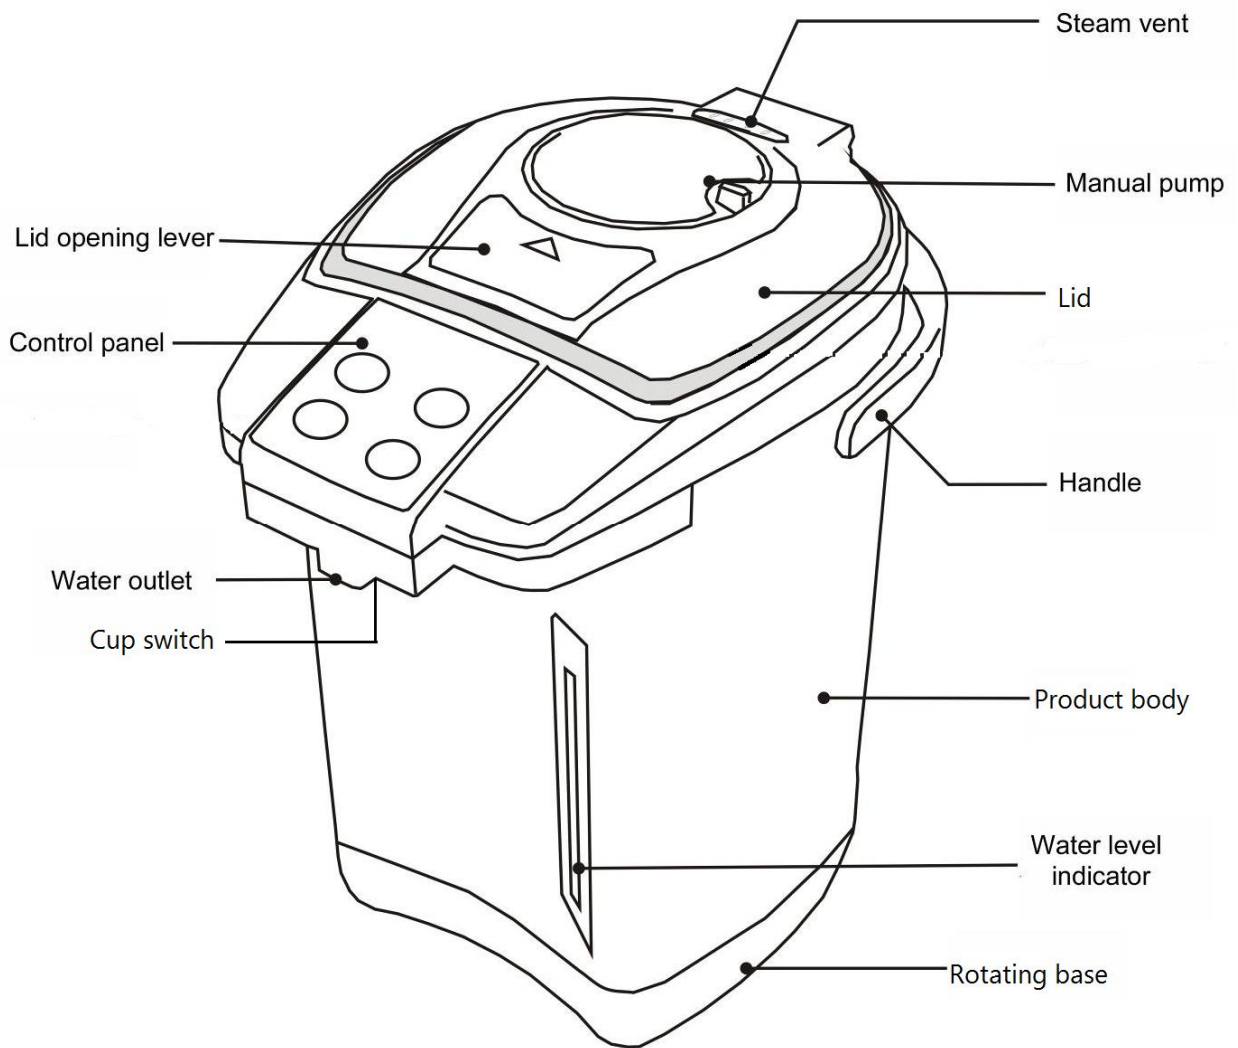

(MAXIMUM WATER LEVEL- FULL LINE MARKING)

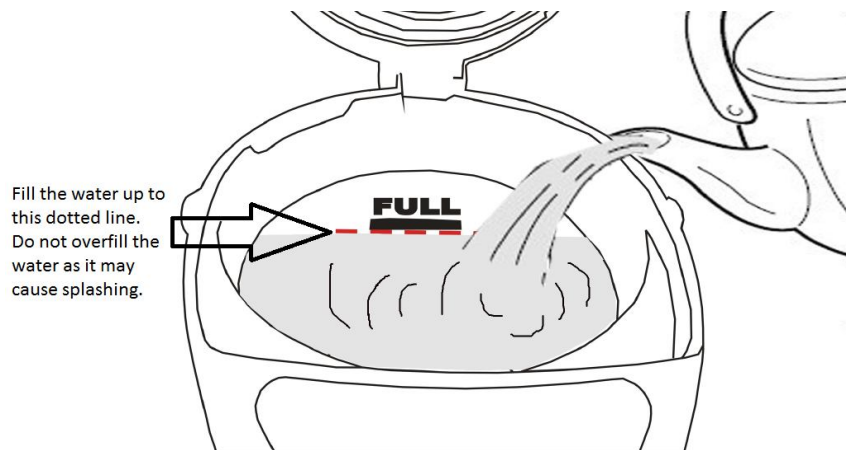

CONTROL PANEL




HOW TO ATTACH AND REMOVE THE LID

Detaching Lid


Press the lid opening lever, and then lift it up. Hold the lid opening lever up (beware of hot steam emitted from the water tank and steam vent) and position the lid at a 45° angle and pull out the lid from the hinge holder by pressing the hinge lock downward.

NOTE: Never remove the lid while the appliance is operating.

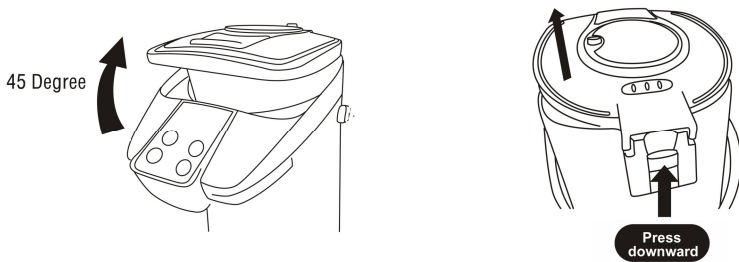

Attaching Lid





Hold the lid opening lever up, press the hinge lock downward then and insert the shaft of the hinge on the lid into the hinge holder. Ensure that lid is attached properly. Close and press on lid until it clicks.

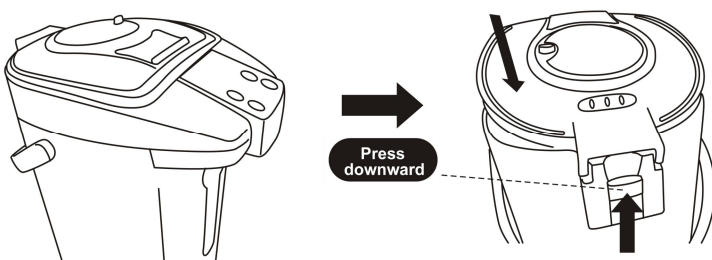

OPERATING THE APPLIANCE FOR THE FIRST TIME

1. Wash and rinse the water tank with clean water.
2. Do not fill the water more than the full line marking. Please refer to the maximum water level marking under the product description. If the appliance is overfilled, it may cause splashing, which may pose a hazard to the user.

OPERATING THE APPLIANCE
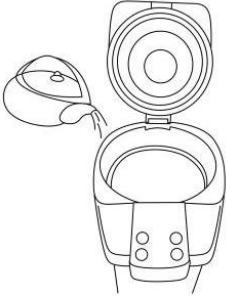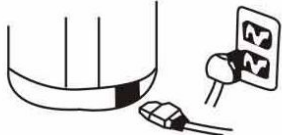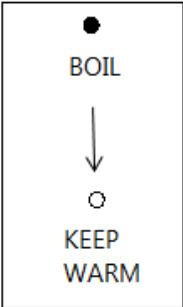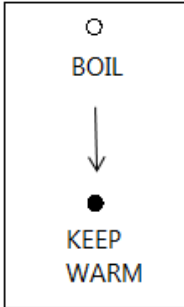
<p>To open the lid Press the lid opening lever, and then lift it up to open the lid. Fill water into the water tank.</p> 	<p>Place the appliance on a flat and stable surface.</p>
<p>To close the lid Carefully close the lid by pressing down until a click sound is heard.</p>	<p>Do not fill water more than the full line marking. Please refer to the maximum water level marking under product description.</p>
<p>To power on the appliance Connect the receptacle to the appliance first, and then connect the power plug to the wall outlet.</p> <p>Do not power on the appliance when the water tank is empty.</p> 	<ol style="list-style-type: none"> 1. Connect the receptacle to the appliance horizontally. 2. When rotating the product body after inserting the receptacle, be careful of the connection and make sure it is not loosen.
<p>To boil water When switching on the power, the “BOIL” light indicator will turn on and the water will start to boil. After the boiling process, the “KEEP WARM” light indicator will be on.</p> <div style="display: flex; justify-content: space-around;"> <div data-bbox="121 1668 304 1973">  <p>(when boiling)</p> </div> <div data-bbox="352 1668 536 1973">  <p>(after boiling)</p> </div> </div>	<p>WARNING:</p> <ol style="list-style-type: none"> 1. Do not open the lid while the appliance is operating. 2. Do not add or dispense the water while water is boiling. 3. Do not contact the steam vent. 4. Do not place cloth or any other items to cover the steam vent.

To dispense hot water

1. Dispense button

Press on the "DISPENSE" button to dispense hot water.

2. Cup switch

Push up the cup switch to dispense hot water.

3. Manual pump

Slide the lock "🔒" and unlock "🔓" button at the manual pump to dispense the hot water manually.

Adjust to "🔓" and followed by pressing the "MANUAL PUMP" button to dispense the hot water. This dispense function can be used while the appliance is power off.

Adjust to "🔒" to lock the function. At this stage, the "MANUAL PUMP" cannot be operated.

Note: The hot water may not be able to dispense out smoothly right after boiling.

CAUTION:


 
1. Always keep the lid away from you as hot steam may trap under the lid.
2. Do not press the "DISPENSE" button when the water tank is empty.
3. Hot water cannot be dispensed by pressing the "DISPENSE" button and cup switch if the appliance is unplugged.

To refill water


When the water level drops to the refill line "👉", add water for automatic boiling. Refer to the water level indicator for the marking.



Boiling water below the refill line "👉" may cause malfunction to the appliance.
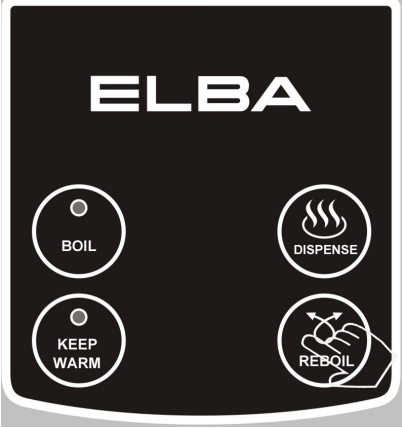
<p>To reboil water under keep warm mode</p> 	<ol style="list-style-type: none"> 1. Reboil a full tank of water will take about 3 minutes. 2. Before reboiling, make sure the water level is above the refill line “”,. Refer to the water level indicator for the marking. 3. The “REBOIL” button may not function right after the water has boiled. 4. When adding water to the water tank, be careful of the hot steam while opening the lid. 5. Once the “REBOIL” button is pressed, the boiling process cannot be reset until the appliance automatically switches to the “KEEP WARM” mode. 6. Do not press the “REBOIL” button repeatedly, as the continuous reboiling process will cause malfunction to the appliance.
<p>When not in use When the appliance is not in use, unplug and remove the remaining water from the water tank.</p>	<ol style="list-style-type: none"> 1. Press the manual pump to pour out the remaining hot water slowly from the water tank. 2. Allow the appliance to dry thoroughly. 3. Do not place the appliance in a dishwasher or dish dryer as this will cause damage to the appliance. 4. If not in use, seal in a plastic bag to protect it from dust and insects.

AUTO-CUT OFF FUNCTION


1. When the water boil-dry, the appliance will automatically cut off the power.
2. The auto cut-off function will also operate when:
 - The power is switched on, but no water inside the water tank.
 - Water level is below the refill line “”. Refer to the water level indicator for the marking.

CLEANING AND MAINTENANCE

1. Always allow the appliance to cool down before cleaning.
2. Remember to unplug the receptacle from the product body.
3. Detach the lid and pour out remaining water.
4. If mineral deposits are accumulated, loud noises may be heard during boiling and you may face difficulties in dispensing hot water. Regular cleaning will avoid such problems.

The product body

Wipe the appliance body with a damp cloth.

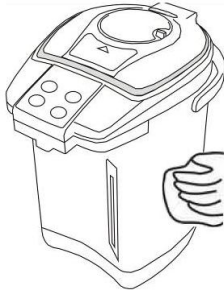

1. Never immerse any part of the appliance in water or any other liquids.
2. Never splash water on the control panel.
3. Do not use abrasive materials to clean the appliance.

Maintenance of the water tank

1. Discoloration of the water tank and white particles floating in the water.

Red rust-like spots, milky or black discoloration on the water tank, and white floating objects are caused by minerals in the water and are not caused by discoloration or deterioration of the water tank itself.

Although this is not a hygiene problem, it is advisable to clean the inner of the water tank periodically.

1. Insert about 15-20g of store brought citric acid into the water tank. Add water until the water level reaches full line marking. Close the lid.
Note: Do not fill the water more than the full line marking. Please refer to the maximum water level marking under the product description. If the appliance is overfilled, it may cause splashing, which may pose a hazard to the user.
2. Connect the receptacle to the appliance first, and then connect the power plug to the wall outlet. Power on the appliance.
3. Let the appliance to boil. After the boiling process, unplug from the wall outlet. Wait until the appliance to cool down and then empty the water tank.
4. Remove the remaining water by pressing the manual pump.
5. Cut a lemon into four pieces, wrap the lemon in a clean cloth and place it inside the water tank.
6. Fill water until the water level reaches full line marking. Let the appliance to boil and retain the heat for about one hour.
7. Pour out the water and use a sponge to clean the water tank.
8. To remove the smell of the lemon, fill the water until the water level reaches the full line marking and boil the water again, then dispose all the boiled water.

<p>2. Stainless steel water tank.</p>	<p>1. Wash with a sponge and then rinse with clean water.</p> <p>IMPORTANT: Do not use the following to clean the water tank.</p> <ul style="list-style-type: none">• Dishwashing detergent (the tank may be smelly), scrubbing powder or brush, benzene, thinner or cleanser (it will erode the water tank surface and damage the plastic of the lid and inner casing).
--	---

ENVIRONMENT-FRIENDLY DISPOSAL



You can help to protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre.



ELBA