



ELBA

WATER DISPENSER

MODEL: EWD-Q2533D(BG)

Owner's Manual

Please read this manual carefully before operating your set.

Retain it for future reference.

Record model number and serial number of the set.

See the label attached on the set and quote this information to your dealer when you require service.

For The Warranty Terms & Conditions, Please Refer To Warranty Certificate.

IMPORTANT SAFEGUARDS


When using the appliance, basic precautions should always be followed, including the following:

1. Read all instructions before using.
2. Do not operate the appliance with a damaged power cord or plug or after the appliance malfunctions, or it is dropped or damaged in any manner. Return the appliance to the nearest authorized dealer or after-sales service centre for examination, repair or mechanical adjustment.
3. Do not let the power cord hang over edge of table or hot surface.
4. To protect against electric shock, do not immerse power cord, plug, or the product body of the appliance in water or any other liquids.
5. Unplug the plug from wall outlet when not in use.
6. The use of accessories that are not recommended may cause injuries to persons.
7. Be careful when moving the appliance especially when it contains hot water.
8. Do not use this appliance outdoors.
9. Do not operate the appliance for other than its intended use.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of appliance by a person responsible for their safety.
11. Children should be supervised to ensure that they do not play with the appliance.
12. Close supervision is necessary when your appliance is being used near children or infirm persons.
13. This appliance is for household or domestic use only.
14. Save these instruction for future reference.

Warning: Never open the lid when water is boiling!

PRODUCT DESCRIPTION


Parts Introduction

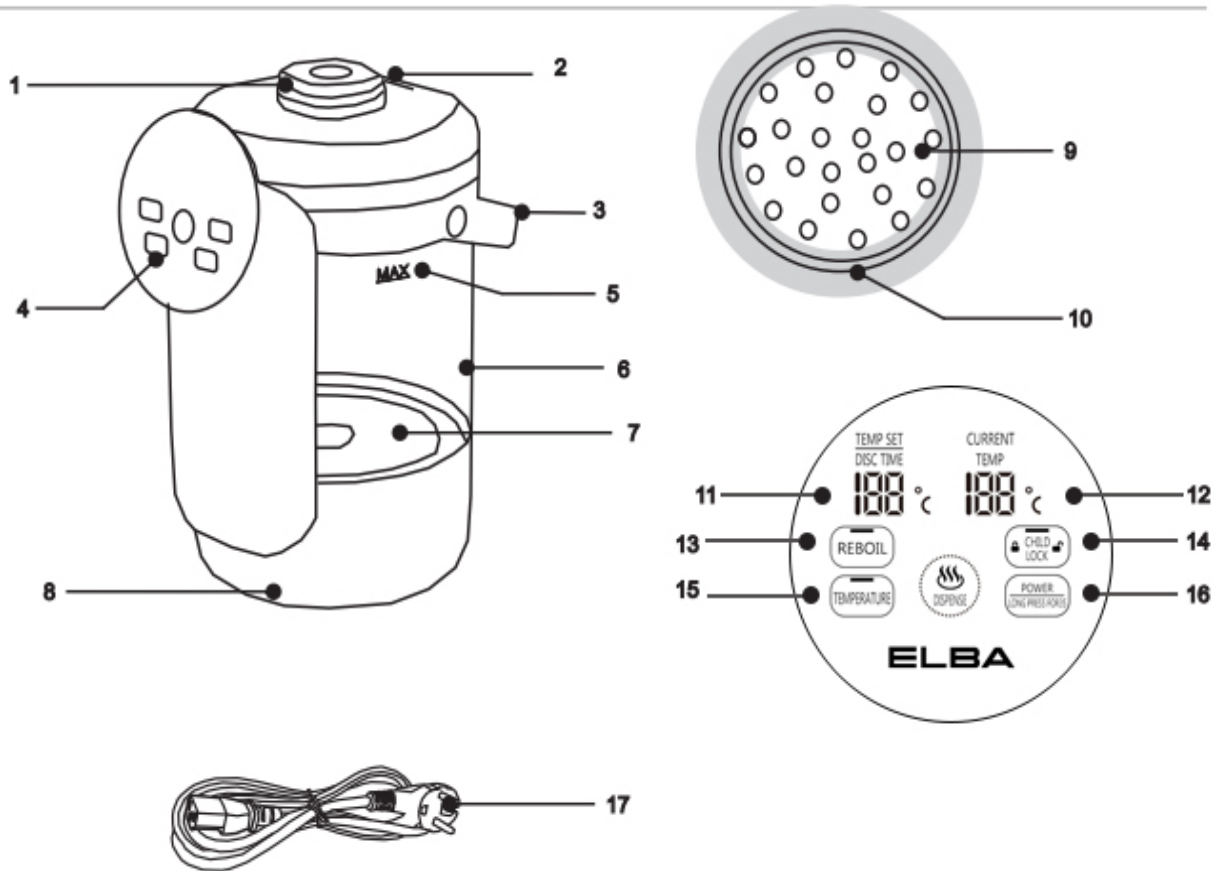


1. Top Cover
2. Steam Escape Vents
3. Handle
4. Control Panel
5. MAX level
6. Glass pot
7. Heater
8. Base
9. SUS304 inner cover
10. Rubber ring
11. Setting Temp display
12. Current Temp display
13. Reboil
14. Child lock button
15. Temperature
16. ON/OFF button
17. Power plug

How To Operate Water Dispenser

- HAZARDS

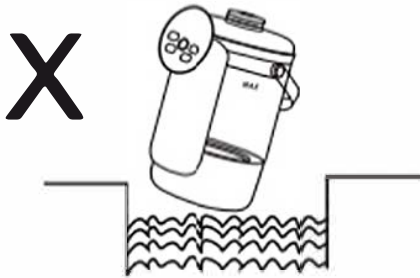


To protect against electric shock. Do not immerse base, cord or plug in water or other liquid.

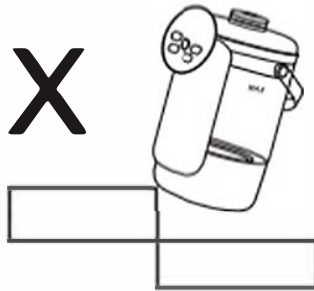


Do not place the Water Dispenser on unstable surfaces.



Only fill with pure water (not milk or anything similar.)

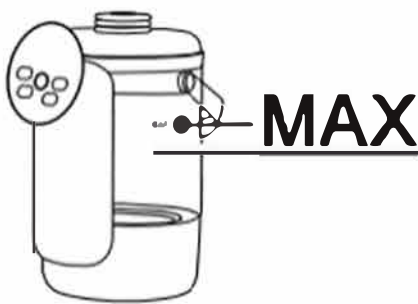

Do not fill the Water Dispenser above the maximum level mark inside the tank or lower than the minimum level to avoid damage to the product.

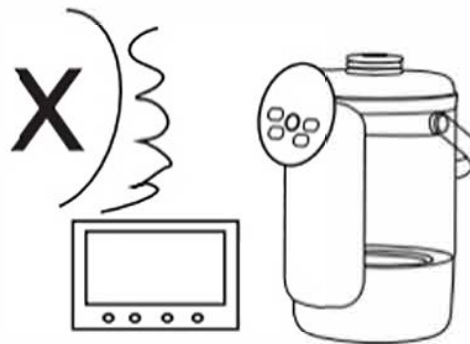

Do not place on or near a hot gas or electric burner, or a heated oven.

OPERATING THE APPLIANCE FOR THE FIRST TIME

- Wash and rinse water tank with water.
- Fill water up to full mark.
- Boil once and discard the water (press the dispense button).

HOW TO FILL THE WATER INTO GLASS WATER POT

- Set Water Dispenser on table top. Open top lid and fill water to desired capacity.



Noted:


- Always fill water above the minimum mark but below the maximum water level line indicator.
- Do not wet the machine body when adding water.

CLOSE THE TOP COVER

- Please close the top cover completely. (Hot water may splash out and cause burns.)
- Do not cover the steam hole on the cover block, so as to avoid danger.

HOW TO CONNECT THE POWER

- Connect the power plug to the machine socket.
- Connect another power plug to the power socket.

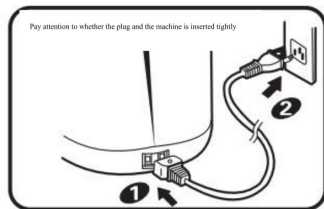


Noted:

- Do not switch on. When the container is empty
- When rotating the body, be careful that the power cord does not get in the way.

HOW TO START BOILING WATER


Choose REBOIL mode

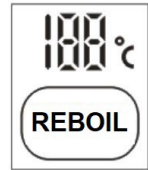

1. Press on "**POWER**" button for 3 seconds.
2. Press on "**REBOIL**" button

The default temperature is 45°C. Press again to adjust the temperature between 40 - 100°C. Wait for the light flashes for 3 times, then the water dispenser starts to heat. When water is heated to 100°C the water dispenser will work for 2 minutes intermittently. When the temperature drops to the set temperature the water dispenser will enter into the preservation state. The heat preservation time is 24 hours, it will auto turn off after 24 hours. The heat preservation period will calculate based on the last operate time.

Choose TEMPERATURE mode

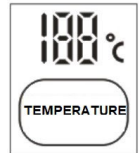

1. Press on "**POWER**" button for 3 seconds.
2. Press on "**TEMPERATURE**" button

The default temperature is 45°C. Press again to adjust the temperature between 40 -100°C. Wait the light flashes for 3 times, then the water dispenser starts to heat. When water is heated to the set temperature the water dispenser will enter into the preservation state. The heat preservation time is 24 hours, it will auto turn off after 24 hours. The heat preservation period will calculate based on the last operate time.

COMPLETE BOILING AND HOW TO DISPENSE WATER

Press the "CHILD LOCK" button to unlock, and the water unlock indicator lights up, Press the "DISPENSER" button to dispense water.

Adjustable DISPENSE button able to set 5 to 30seconds with every 5 seconds interval. (5、10、15、20、25、30 seconds can choose.)

Notes:

1. If no water function is used within 10 seconds, the key lock will be locked automatically.
2. If the water is boiling for a period of time without use, air bubbles may enter the electric pump and lead to no water. Please open the upper cover at this time to eliminate this problem.

DRY BOIL PREVENTION FUNCTION

If there is no water in the water dispenser the anti-dry boil prevention function will be started within 1 minute to avoid the danger caused by overheating. If dry burning occurs or the water volume is too low for a long time, it may cause discoloration and peculiar smell in the inner container. Therefore, please always pay attention to whether the water level in the water dispenser is too low.

CLEANING AND MAINTENANCE

Unplug the power plug before cleaning, pour out the remaining water, and cool down the water dispenser before cleaning.

■ Cleaning and maintenance

About the discoloration and white floating matter in the bottle

The discoloration of red rust spots (with rust)/milky white/black and white floating objects are caused by the mineral composition of water, not the discoloration and corrosion of the inner bottle itself. Although there is no problem in hygiene, it should be cleaned regularly.

■ Inner bottle/inner cover

Wash with soft foam sponge and rinse with water.

Depending on the water quality used and the number of boiling times, the degree of contamination will vary. Please clean it carefully. The inner bottle should be cleaned once a month with citric acid.

■ When the inner bottle is stained with dirt such as scale and left unattended, the boiling sound will become louder, or it will become difficult to get out of the water. Please clean it carefully.

1. Never clean the whole body (otherwise, it may cause failure)
2. Never splash water on the operation panel (otherwise, it may cause failure)

■ Top cover and bottle body

Wipe with a wrung-out rag Never clean the whole or splash water on the operation panel. Do not put this product upside down for drying. (Otherwise, it may cause internal water inflow, failure and rust)

Direction to dispose the product



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle if responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

ELBA