



# ELBA

## **DESIGNER HOOD MODEL: EH-H9329TFT(BK)**

### **Owner's Manual**

Please read this manual carefully before operating your set.

Retain it for future reference.

Record model number and serial number of the set.

See the label attached on the set and quote this information to your dealer when you require service.

**For The Warranty Terms & Conditions, Please Refer To Warranty Certificate**

# CONTENTS

<b>1. SAFETY PRECAUTIONS.....</b>	<b>1</b>
<b>2. ASSEMBLY INSTRUCTIONS.....</b>	<b>2</b>
<b>3. PRODUCT DESCRIPTIONS.....</b>	<b>3</b>
3.1 CONTROL PANEL.....	3
3.2 DISPLAY DESCRIPTIONS.....	4
3.3 MAIN MENU.....	4
3.4 SYMBOL.....	4
<b>4. PROGRAMS AND FUNCTIONS .....</b>	<b>5</b>
4.1 SELECTING THE COOKER HOOD PROGRAMS.....	5
4.2 SETTING FOR THE FIRST TIME.....	5-6
4.3 SPEED FUNCTION.....	6-7
4.4 LIGHT FUNCTION.....	7
4.5 TIMER FUNCTION.....	8
4.6 FILTERING SYSTEM ALARM.....	8
4.7 CHILD LOCK.....	9
<b>5. CLEANING AND MAINTENANCE.....</b>	<b>9</b>
<b>6. TROUBLESHOOTING.....</b>	<b>10</b>
<b>7. TECHNICAL SPECIFICATION.....</b>	<b>11</b>

Please read this instruction carefully. It is advisable to keep this instruction manual in a safe place for future reference.

 
## **1.0 SAFETY PRECAUTIONS**

1. Keep electrical appliances out of reach from children. Do not let them to operate the appliances without supervision.
2. To protect against the risk of electrical shock, do not immerse the product, power cord or plug into water or any other liquid.
3. This product is for household and indoor use only.
4. This product is not intended for use by person (including children) with reduced physical, sensory or mental capabilities unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. If the power cord or plug is damaged, it must be replaced by the service centre or a qualified service technician to avoid hazard.
6. Before installation, check if the mains supply voltage is matched with the voltage stated on the rating plate of the cooker hood.
7. There must be adequate air ventilation of the room when the cooker hood is used with the cooking appliances with burning gas or other fuels.
8. Ensure that the installation of exhaust complies with the standard of local building, gas and electrical authorities.
9. Do not ignite flames in the pans.
10. There is a risk of fire if cleaning is not carried out in accordance with this instruction.

## 2.0 ASSEMBLY INSTRUCTIONS

Please check the following before installation:

- Installation of cooker hood must be carried out by an authorized or qualified technician.
- Remove all packaging materials from the cooker hood. Check and make sure that the cooker hood is not damaged.
- Please ensure the power supply has switched OFF when installing the cooker hood.
- For optimum air extraction, avoid having too many windows surrounding the cooker hood which will cause air convection.
- The optimum height for the installation is between 350 to 400mm which is measured from the bottom of the cooker hood to the top of the hob.
- Make sure the hood is in level after installation to avoid oil spill over from the oil cup.

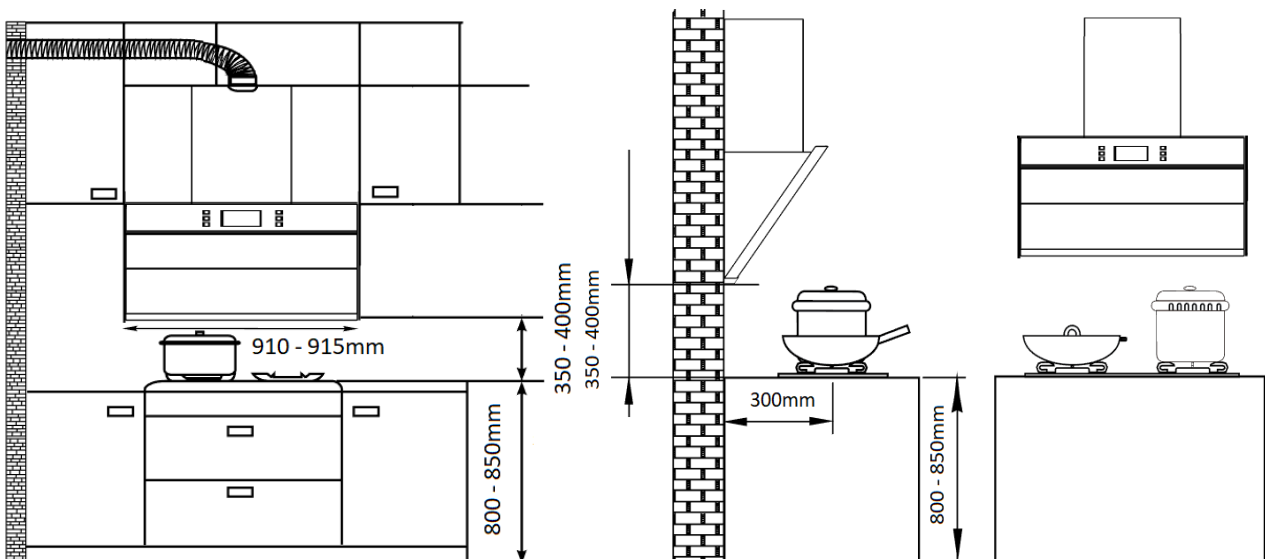

- Before installing, determine the height between the bottom of the cooker hood to the top of the hob. Mark on the wall to suit the bracket locations.
- Drill 3 holes with diameter of  $\varnothing 8\text{mm}$  and 60mm deep. Insert the screw anchors into the holes. Fix the mounting bracket and tighten the screws.
- Remove the horizontal oil cup. Hang the cooker hood on the mounting bracket and make sure the cooker hood is in level.
- Fix the exhaust ducting on the cooker hood. Install the oil cup on the cooker hood.
- Install the telescopic exhaust cover to the height required.
- Before connecting to the mains supply, ensure that the mains voltage corresponds to the voltage on the rating plate of the cooker hood.


## 3.0 PRODUCT DESCRIPTIONS

### 3.1 Control Panel




Number	Icon	Descriptions
1		ON / OFF Button, Press button to turn appliance on or off.
2		Fan Speed Button, Press button and set the fan speed setting.
3		Light Button, Press button to adjust the light brightness.
4	MENU	Menu Button, Press button to return to the main menu screen.
5	<C	Return / Cancel Button, Press button to stop the program or back function.
6		Child Lock Button, Press button to lock the display selection.
7		Display Current Selection / Program.

### 3.2 Display Descriptions

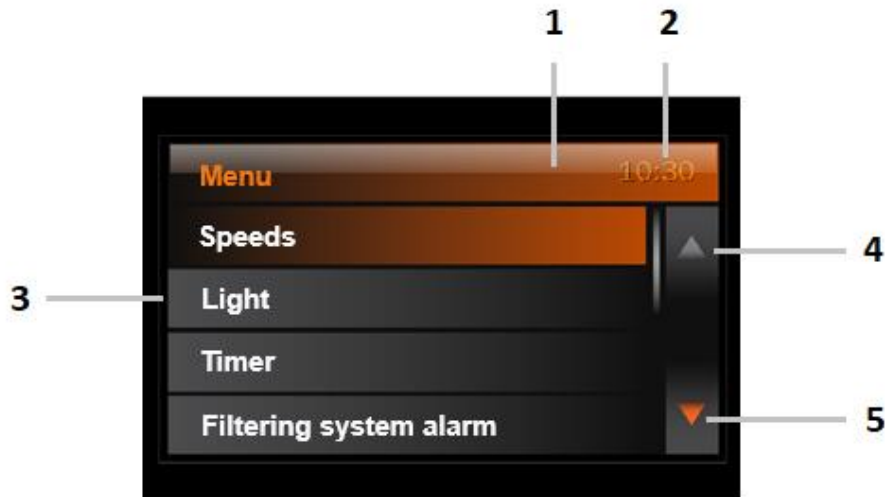

Number	Descriptions
1	Menu
2	Current Time
3	Program Selection
4	Scroll Up
5	Scroll Down


 


Press  to turn on appliance. The main menu appears in the display with a list of options. Select the program by touching the screen. If the desired program is not appear in display screen, please scroll up or down to search for the programs.

### 3.3 Main Menu

Program	Description
Speeds	To control the fan speed in low, high, turbo mode.
Light	To control the light brightness
Timer	To set the timer delay function
Filtering system alarm	To set the alert for next cleaning service
Setting	To set the date, time, language, brightness and others.

### 3.4 Symbol

The following symbols will be appear in the display screen.

Symbol	Descriptions
	You may scroll up or down by touching ▲ and ▼ button.
	A tick will appear behind the option which is currently selected.
	This indicates additional information is available. This information window will be turned off by selecting OK button.
	The display panel is locked.

## 4.0 PROGRAMS AND FUNCTIONS

### 4.1 Selecting the Cooker Hood Programs

To select the cooker hood programs, touch the screen and select the desired programs. The detail of the programs as below:

Program	Description
Speeds	To control the fan speed in low, high, turbo mode.
Light	To control the light brightness
Timer	To set the timer delay function
Filtering system alarm	To set the alarm alert for next cleaning service

### 4.2 Setting for the first time

To enter the basic settings for the first time use, in the main menu, scroll down until "Setting" menu.

The list of options will show as follow:

- Date
- Time
- Clock Format
- Language
- Brightness
- Volume
- Factory Default Setting
- Theme

#### DATE

Click date setting and enter the actual date by touching the keyboard input. The date sequence will display as "YEAR / MONTH / DATE" (YYYY/MM/DD).

Click "OK" to save and return back to setting interface.

#### TIME

Click time setting and enter the actual time by touching the keyboard input. The time sequence will display as "HOURS : MINUTES" (12:59). The real time display will show on the top right corner.

Click "OK" to save and return back to setting interface.

(If clock format in 12 hours, the maximum for time setting is 12:59, if clock format in 24 hours, the maximum for time setting is 23:59)

#### CLOCK FORMAT

Click clock format setting and select the clock format by touching the screen. The clock format selection are 12 hours or 24 hours. Click the desired clock format and your selection will show as "✓" behind the option.

Click "OK" to save and return back to setting interface.

#### LANGUAGE

Click language setting and select the language by touching the screen. The language selection are Simplified Chinese and English. Click the desired language and your selection will show as "✓" behind the option.

Click "OK" to save and return back to setting interface.

## BRIGHTNESS

Click brightness setting and select the brightness by sliding the screen. Slide left to turn the screen brightness to darker and slide right to turn the screen brightness to brighter. Click "OK" to save and return back to setting interface.

## VOLUME

Click volume setting and select the volume by sliding the screen. Slide left to turn the volume to lower and slide right to turn the volume to higher. Click "OK" to save and return back to setting interface.

## FACTORY DEFAULT SETTING

Click factory default setting if you wish to restore all the setting into default setting. Select the factory default setting and "YES" button will appear. Click "OK" to conduct the restore to default setting.


(Please be remind that all the data entry that previously saved will be deleted)

## THEME

Click theme setting if you wish to change the theme color. The theme color selection are Orange and Cyan. Click the desire color and your selection will show as "✓" behind the option.


Click "OK" to save and return back to setting interface.

## 4.3 Speed Function

Press the  button or select from the menu display to select the fan speed. The glass cover will open and the motor will start after press the button. Slide the desire fan speed fan by slide to right for high fan speed, slide to left for low fan speed. When the fan speed is turn to turbo mode, the motor will run in maximum speed and return to speed 4 after 2.5 minutes.


During the operation of the motor, press the  button to stop the motor. Press the  button again to resume operate.

Press the <C button to cancel and return to the main menu interface.

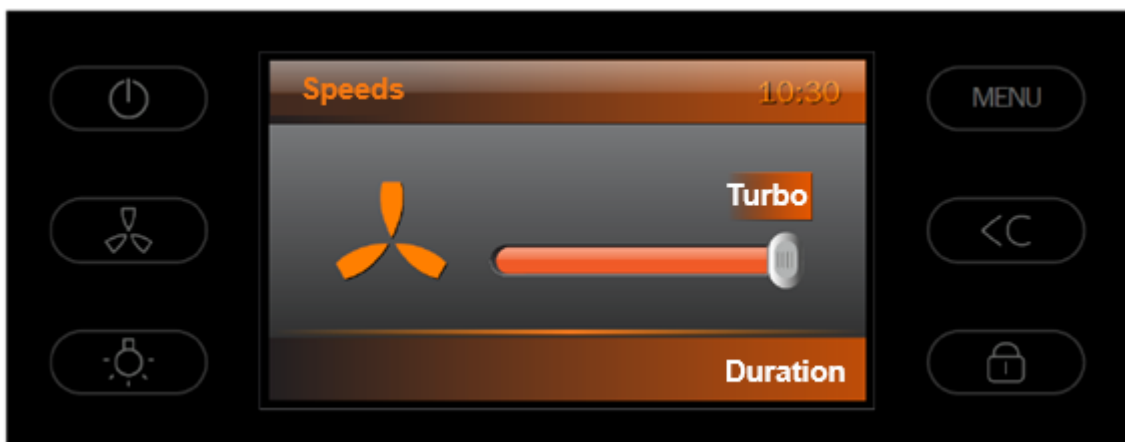


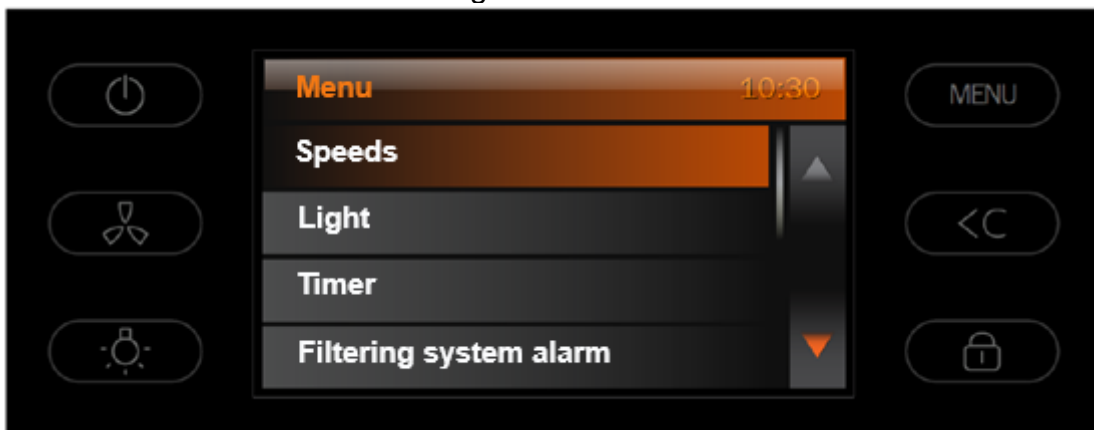


During the operation of the motor, press the “Duration” button to set the delay shutdown. Set the duration “HOURS : MINUTES” and click “OK”. The cooker hood will turn off automatically after the duration.

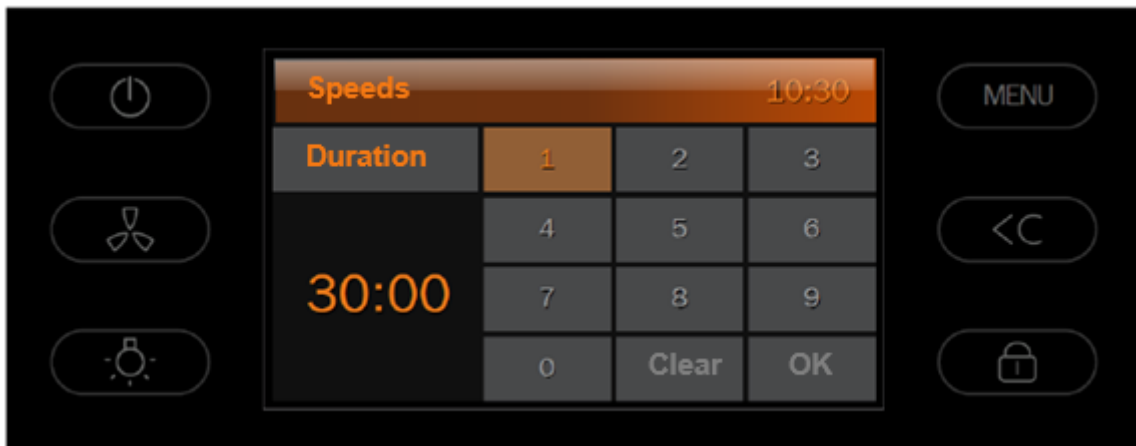


#### 4.4 Light Function

Press the  button to turn on/off the light.




Click the “Light” function in main menu interface to select the light brightness. Slide the desire brightness by slide to right for brighter and slide to left for darker. Click “OK” to save the setting.

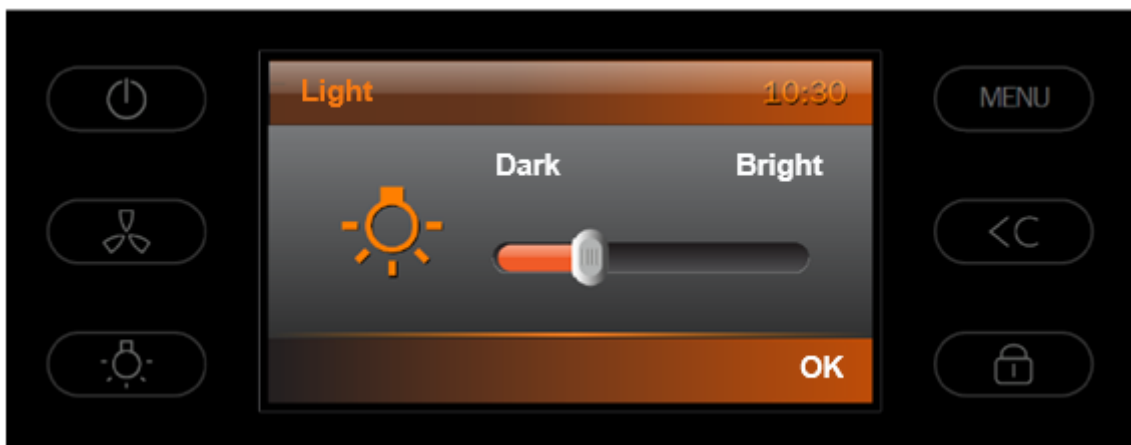


#### 4.5 Timer Function

Click the “Timer” function in main menu interface to set a timer. Select the “HOURS : MINUTES” to set the delay shutdown and click “OK” to save the setting. The cooker hood will turn off automatically after the timer.

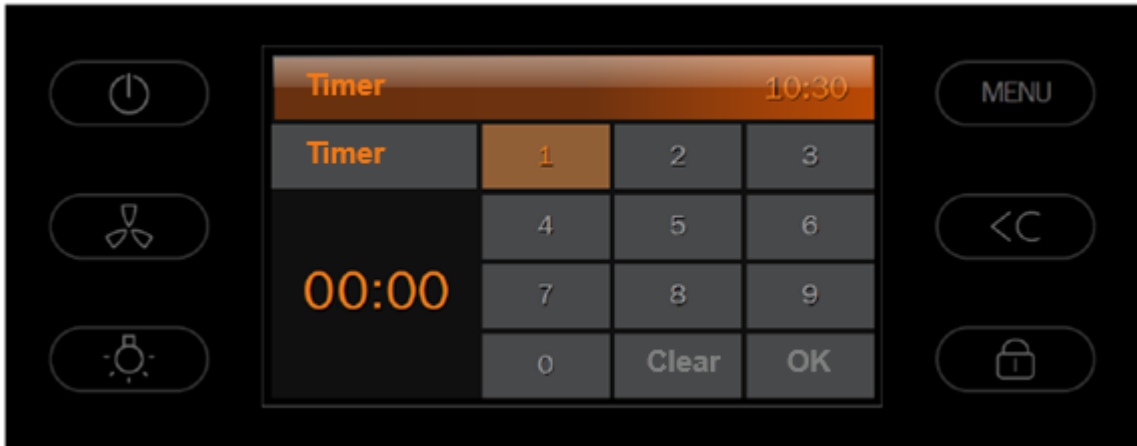



#### 4.6 Filtering system alarm

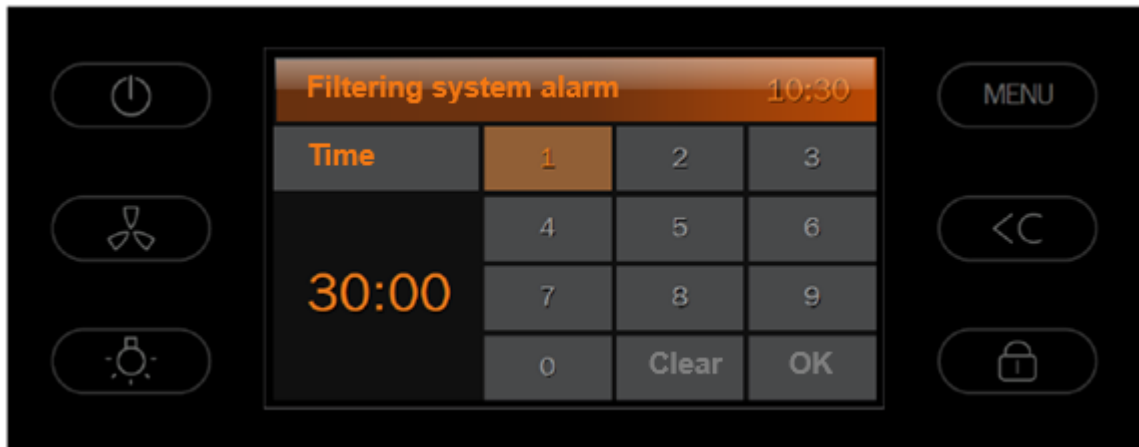Click the “Filtering system alarm” function in main menu interface to set a reminder of the cleaning service to be conducted. Select the “HOURS : MINUTES” and then click “OK” to save the setting. When the cooker hood operation hours achieve the pre-set time, the cooker hood will alert user to conduct the cleaning service.



#### 4.7 Child Lock

Press and hold the  button for 3 seconds to activate the child lock function. The panel will be lock except for the child lock button. Press and hold the  button for 3 seconds to deactivate the child lock.



#### 5.0 CLEANING AND MAINTENANCE

- The cooker hood must always be disconnected from the electricity supply before carrying out the maintenance.
- Clean the cooker hood with damp cloth, hot water and mild detergent. Do not use chemical, steel, wooden or abrasive cleaners to clean the cooker hood.
- Remove the oil cup in horizontal direction, wash in hot soapy water, dry and fit back into the cooker hood. Do not use the cooker hood without the oil cup installed.
- Avoid spilling water into the motor and electronic component.

#### REPLACING THE LIGHT BULB

- Disconnect the power supply, slightly insert the screwdriver at the edge of the LED light and pry downward to take out the LED light (1.5W).
- Disconnect the connecting cable of LED light (1.5W) and replace a new LED light unit (1.5W). Connect the power supply to ensure LED light (1.5W) is functioning.

※ The LED light bulb shall not be greater than 1.5W.


## TROUBLESHOOTING

Malfunctions	Possible Root Cause	Checking
Weak Suction	The distance is too far between the cooker hood and cooking appliance	Lower down the cooker hood installation height but within the safety guideline
	Strong convection due to too much ventilation	Shut off some of the windows or doors
Cooker hood and light not function	The power supply is not connected	Check if the plug is well connected and the power is on
	Power cord is damaged	Contact technicians for repair
Motor functions but light not works	Light bulb is damaged	Replace a new light bulb ( $\leq 1.5W$ )
Light works but motor not function	The bearing may be damaged	Contact technicians for repair
	The internal wires or motor capacitor may be burnout	
Vibration on the cooker hood	The screw is loosen	Tighten the screws
The cooker hood is noisy	Exhaust pipe surface is distorted	Contact technicians to reinstall the exhaust pipe

## MAIN SPECIFICATION

Rated Voltage	: 220-240V/50Hz
LED Light	: 1.5W x 2
Suction Power	: 1,400m <sup>3</sup> /hr
Motor Power	: 250W
Product Dimension	: 900mm (W) x 890 - 1,290mm (H) x 408mm (D)

## PRODUCT SIZE

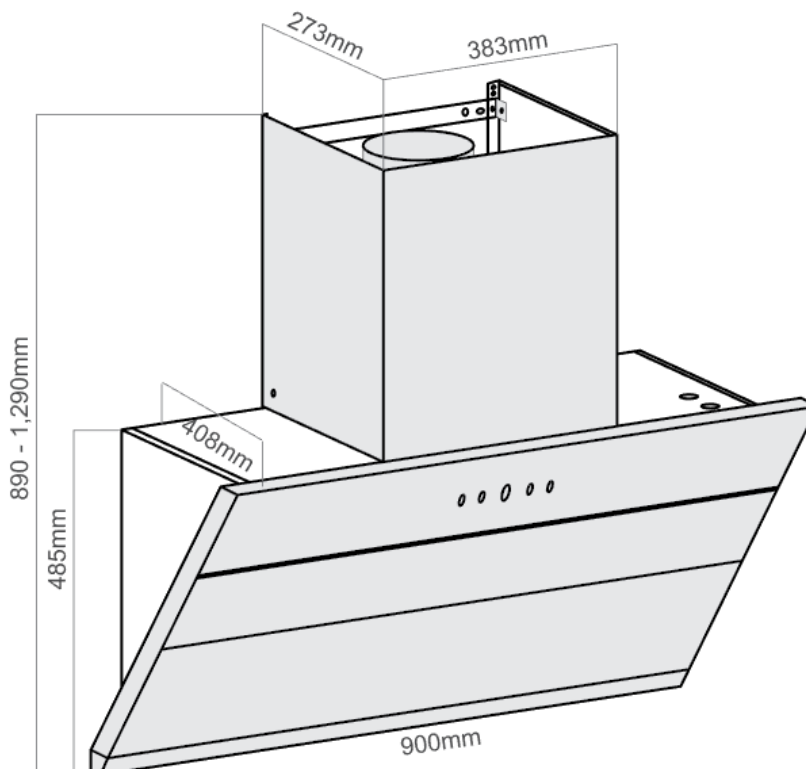

### NOTICE

This product must not be disposed together with domestic waste. It has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste, you help to save natural resources and make sure the product is disposed in an environmental friendly and healthy way.



**ELBA**