



# **HAIR DRYER**MODEL:EHD-G1226TR(SV)

# Owner's Manual

Please read this manual carefully before operating your set.

Retain it for future reference.

Record model number and serial number of the set.

See the label attached on the back cover and quote this information to your dealer when you require service.

For The Warranty Terms & Conditions, Please Refer To Warranty Certificate.

## **IMPORTANT SAFEGUARDS**

When using this appliance, basic precautions should always be followed, including the following:

- 1. Read all instructions before using.
- 2. Always unplug this appliance right after using.
- 3. Do not use this appliance near water.
- 4. Do not place the appliance in or drop into water or any other liquids.
- 5. Do not wind the mains cord around the appliance.
- 6. Do not place or store the appliance where it can possibly fall or be pulled into the tube or sink.
- 7. Do not use this appliance outdoor.
- 8. Never insert metal objects into the air openings to avoid electric shocks.

#### **WARNING:**

- 1. Never operate the appliance if it has a damaged cord or plug, not working properly, or dropped into water. Please send the appliance to authorized service center for examination and repair.
- 2. If the supply cord is damaged, it must replace by the manufacturer or authorized service center or a similarly qualified person in order to avoid hazards.
- 3. Always unplug the power cord from the power socket immediately after using.
- 4. Keep the cord away from heated surfaces.
- 5. Never block the air openings of this appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, etc.
- 6. If the appliance overheated, switch it off immediately. Unplug the appliance and let it cool down for a few minutes.
- 7. When the appliance is connected to the power, never leave it unattended.
- 8. Do not use this appliance near bathtubs, showers, basins, or any other vicinity to the water.
- 9. When the hair dryer is used in a bathroom, unplug it right after using as the proximity of water may presents a hazard even when the hair dyer is switched off.
- 10. Do not use this appliance or any other purpose than described in this manual.
- 11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions to use the appliance by a person responsible of their safety.
- 12. Children should be supervised to ensure that they do not play with the appliance.

## **OPERATING THE APPLIANCE**

- 1. Make sure the power switch is turn to the "0" position. Connect the plug into the wall outlet and turn on the power switch.
- 2. Use the high setting for drying hair, and use the low setting for styling.
- 3. Should the hair dryer stop operating for any reasons, turn the power switch to "0" position and power off the switch. Let the hair dyer to cool down.
- 4. Adjust the desired level of blowing strength:

" 0 " position - Off

" \$ " position - Low power, medium temperature for gentle drying and styling

"\s," position - Full power, high temperature for quick drying

#### **CLEANING AND MAINTENANCE**

- 1. Use a damp cloth for cleaning and wipe dry. Never use abrasive cleaners to clean the hair dryer. **Important:** Always ensure that the hair dryer is disconnected from the wall outlet before cleaning.
- 2. Keep this hair dryer clean for proper operating. Never block or clog air inlets, otherwise the hair dryer will be overheated.
- 3. This hair dryer has no user serviceable parts, any servicing should be performed by authorized service centre. Never allow the supply cord to be twisted, pulled, bent, or wrapped around the hair dryer.
- 4. When not in use, this hair dryer should be store in safe, dry location, and out of reach of children.

#### **SPECIFICATIONS**

1. Voltage : 220V-240V~ 50/60Hz

2. Power : 1200W

## **ENVIRONMENT-FRIENDLY DISPOSAL**



You can help to protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre.

