



ELBA

WET & DRY VACUUM CLEANER

MODEL: EVC-H1231(SS)

Owner's Manual

Please read this manual carefully before operating your set.

Retain it for future reference.

Record model number and serial number of the set.

See the label attached on the set and quote this information to your dealer when you require service.

For The Warranty Terms & Conditions, Please Refer To Warranty Certificate.

IMPORTANT SAFEGUARDS

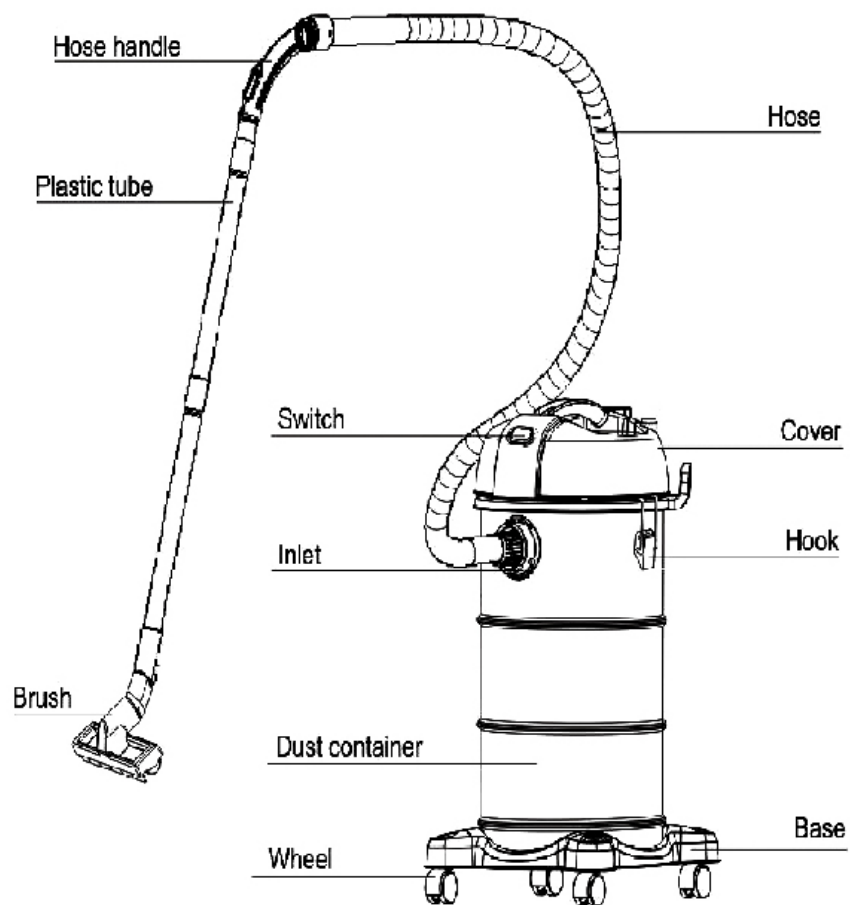
REMOVE ALL PACKING MATERIALS FROM THIS PRODUCT BEFORE USING IT. THIS APPLIANCE MUST BE INSTALLED ON A FLAT SURFACE. PLEASE ENSURE THE ELECTRICITY SUPPLY TO THE APPLIANCE IS DISCONNECTED BEFORE INSTALLING.

Please read this instruction carefully. It is advisable to keep this instruction manual in a safe place for future reference.









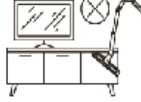

1. Read all instructions in this booklet carefully.
2. Do not operate the appliance with damaged power cord or plug, after the appliance malfunctions, or if it was dropped or damaged in any manner. Kindly return the appliance to the nearest authorized dealer or after-sales service centre for examinations, repairs, electrical or mechanical adjustments.
3. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification marking.
4. Do not unplug by pulling the power cord. To unplug, grasp the plug firmly.
5. Do not handle the plug or any other parts of the appliance with wet hands.
6. Do not leave the appliance unattended while operating. Ensure the appliance is powered off before carrying out any cleaning or maintenance operations.
7. Never use methylated spirits or other solvents to clean the appliance.
8. Do not put any objects into the hose inlet. Keep it free from dust, lint, hair and anything that may reduce airflow.
9. Turn off all controls before unplugging the appliance.
10. Take extreme care when cleaning on stairs.
11. Do not use the appliance to suck flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
12. Do not use the appliance to suck anything that is burning or smoking, such as cigarettes, matches or hot ashes.
13. Unplug the appliance before connecting the hose.
14. Do not use without filter in place.
15. Never use any accessories or parts from manufacturers other than ELBA's.
16. Close supervision is necessary when the appliance is operating near children or infirm persons. Keep the appliance out of reach of children.
17. This appliance is for domestic use only and not for commercial applications.
18. Do not use this vacuum cleaner outdoor.
19. Do not operate it for purposes other than its intended use.
20. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the usage of this appliance by a person responsible for their safety.
21. Save these instructions for future reference.

Please read this operating instruction attentively, before you operate the appliance. It provides important notes for security, the use and maintenance of the appliance. If you have further questions, please contact our customer service.

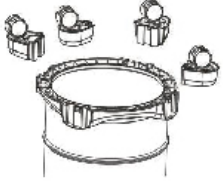
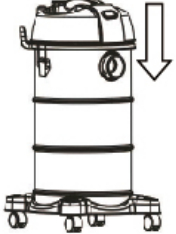
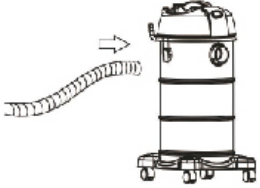

PRODUCT DESCRIPTION

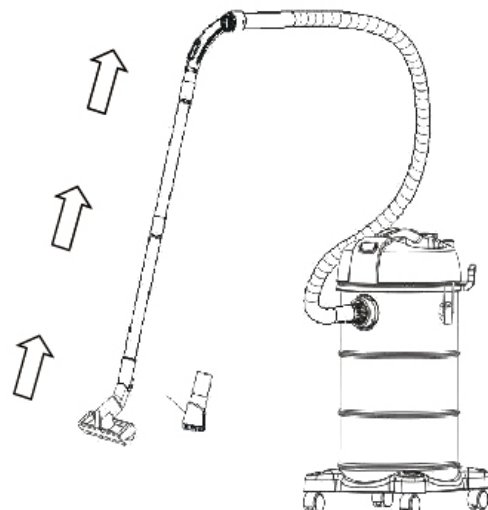 


IMPORTANT SAFETY INSTRUCTIONS


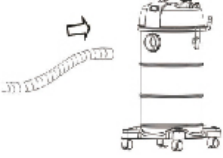 
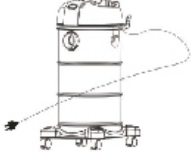 


<p>⊘</p>	<p><i>Do not vacuum any sharp-edged, hot or incandescent materials.</i></p>	
<p>⊘</p>	<p><i>The appliance should not be exposed to heat.</i></p>	
<p>⊘</p>	<p><i>Unplug the appliance from the plug outlet after use and before every cleaning. Grasp the plug firmly, not the cable, in order to disconnect the appliance from the plug outlet.</i></p>	
<p>⊘</p>	<p><i>Do not insert any object into openings. Do not use the appliance with any opening blocked. Keep free of dust, lint, hair etc.</i></p>	
<p>⊘</p>	<p><i>Do not use the vacuum cleaner without dust container or dust filter in place.</i></p>	
<p>⊘</p>	<p><i>Do not vacuum any flour, cement or similar substances in order to avoid appliance from overloading.</i></p>	
<p>⊘</p>	<p><i>The appliance should only be cleaned with a dry or damp cloth. It should never be immersed in water. Do not use any methylated spirits or solvents for cleaning.</i></p>	
<p>⊘</p>	<p><i>This appliance is intended for domestic use only and not for commercial applications.</i></p>	
<p>⊘</p>	<p><i>Avoid touching the surface of furniture with the nozzle or brush.</i></p>	
<p>⊘</p>	<p><i>Do not carry the appliance by using the mains cable. Do not pull the mains cable over sharp edges.</i></p>	

ASSEMBLY

 


<p><i>Install the 4 wheels onto the base of the appliance firmly.</i></p>	
<p>Dust container <i>Ensure the HEPA filter is installed correctly to the top of the vacuum. Attach the top of the vacuum to the body as shown.</i></p>	
<p>Flexible hose <i>To use the flexible hose, insert the end of the hose into the suction opening. The hose must be firmly snapped into position before using.</i></p>	
<p>Accessories <i>Choose your desired accessory (brush or nozzle) fix it with the extension tube to the flexible hose as shown on the right. Ensure all parts are firmly connected before using the appliance, as shown by the pic below.</i></p>	



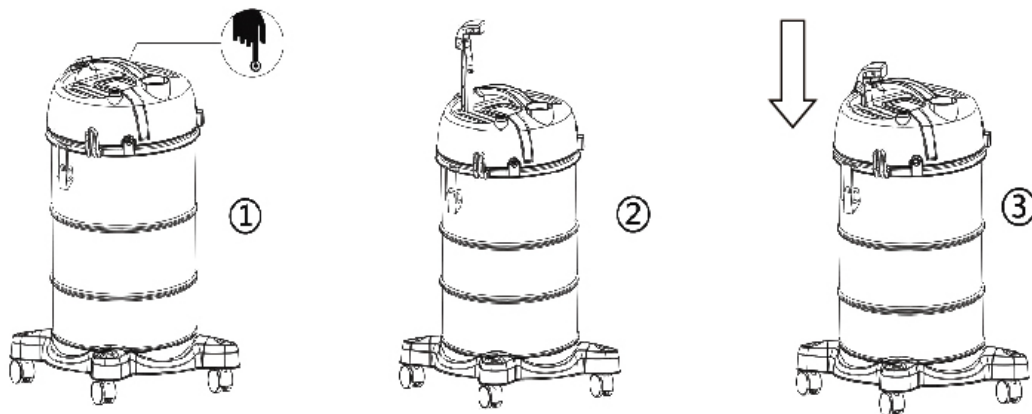 
OPERATION

<p><i>Ensure the HEPA filter is installed correctly and firmly in position.</i></p>	
<p><i>Ensure the assembly steps of the appliance is followed and completed entirely.</i></p>	
<p><i>Unwind the power cord from the appliance body fully.</i></p>	
<p><i>Grasp the plug firmly and connect it to the wall outlet properly before switching it on.</i></p>	
<p><i>Once the vacuum session has ended, turn the switch off first. Grasp the plug firmly and disconnect it from the wall outlet entirely.</i></p>	

CLEANING AND MAINTENANCE

<p><i>Open the dust container.</i></p>	
<p><i>Empty the dust container.</i></p>	
<p><i>Reassemble the vacuum cleaner back to its original state before using.</i></p>	

After each vacuum session, it is recommended to clean the filter using its built-in Self-Brushing function to ensure optimum suction power at all times.



ERROR DETECTION

Before contacting our authorised service centre, please check the below table for quick solutions:

Problem	Possible reason	Advice
Motor does not start	<ul style="list-style-type: none">➤ Power plug not firmly connected into wall outlet.➤ Wall outlet damaged.➤ Power switch not turned on.	<ul style="list-style-type: none">➤ Check the connection and connect firmly➤ Check the wall outlet condition.➤ Turn the power switch to the 'ON' status.
Suction power is weak	<ul style="list-style-type: none">➤ Appliance is clogged.➤ HEPA filter needs cleaning.➤ Dust container not fixed properly.	<ul style="list-style-type: none">➤ Remove the waste from the dust container.➤ Clean the HEPA filter.➤ Ensure the dust container is well attached to the top of the vacuum cleaner.

MAIN SPECIFICATION

Model No. : EVC-H1231(SS)
Power : 1200W
Rated Voltage : 220-240V
Rated Frequency : 50/60Hz
Capacity : 30L

NOTICE

This product must not be disposed together with domestic waste. It has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste, you help to save natural resources and make sure the product is disposed in an environmentally friendly and healthy way.



ELBA