



**ELBA**

**MODEL: EHD-Q5653DC(PP)  
EHD-Q5653DC(PK)**

### **Owner's Manual**

Please read this manual carefully before operating your set.

Retain it for future reference.

Record model number and serial number of the set.

See the label attached on the set and quote this information to your dealer when you require service.

**For The Warranty Terms & Conditions, Please Refer To Warranty Certificate.**

## **IMPORTANT SAFEGUARDS**

When using this appliance, basic precautions should always be followed, including the following:

- Read all instructions before using.
- Always unplug this appliance right after using.
- Do not use this appliance near water.
- Do not place the appliance in or drop into water or any other liquids.
- Do not wind the mains cord around the appliance.
- Do not place or store the appliance where it can possibly fall or be pulled into the tube or sink.
- Do not use this appliance outdoor.
- Never insert metal objects into the air openings to avoid electric shocks.

## **WARNING**

- Never operate the appliance if it has a damaged cord or plug, not working properly, or dropped into water. Please send the appliance to authorized service center for examination and repair.
- If the supply cord is damaged, it must replace by the manufacturer or authorized service center or a similarly qualified person in order to avoid hazards.
- Always unplug the power cord from the power socket immediately after using.
- Keep the cord away from heated surfaces.
- Never block the air openings of this appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, etc.
- If the appliance overheated, switch it off immediately. Unplug the appliance and let it cool down for a few minutes.
- When the appliance is connected to the power, never leave it unattended.
- Do not use this appliance near bathtubs, showers, basins, or any other vicinity to the water.
- When the hair dryer is used in a bathroom, unplug it right after using as the proximity of water may presents a hazard even when the hair dryer is switched off.
- Do not use this appliance or any other purpose than described in this manual.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions to use the appliance by a person responsible of their safety.
- Children should be supervised to ensure that they do not play with the appliance.

# OPERATING THE APPLIANCES

*Before using the product, please read this manual carefully and keep it properly.*

- Insert the plug into the power socket, switch the ON button to “ I ” or OFF button “0” position.
- Press the temperature button to choose the temperature you want, there are 4 temperature modes for your choice.
- Press the speed button to choose the speed you want, there are 3 speed modes for your choice.
- After use, please be sure to pull out the power plug and keep it after the body is fully cooled.



※ After the hair dryer is used for a long time, high temperature may cause the hair dryer to start the overheat protection device and automatically cut off the power supply, it is not the body fault. At this time, please pull out the plug, let the product cool for a few minutes, then you can use it again.

## NOZZLE HANDLING


- Align the magnetic suction air nozzle with the air outlet while installing, you can rotate the nozzle to adjust the wind direction.
- When removing the nozzle, please hold the air nozzle tightly and pull it out from the connection. Please keep it properly after detached.
- Before removing the nozzle, blow it with cold air for 1 to 2 minutes, and take it off after the nozzle cool down.

## CLEANING AND MAINTENANCE

- Important: Always ensure that the hair dryer is disconnected from the wall outlet before cleaning.
- Use a damp cloth for cleaning and wipe dry. Never use abrasive cleaners, paint thinner, benzene, alcohol, etc. to clean the hair dryer, to avoid failure breakage and fading of this product.
- This hair dryer has no user serviceable parts, any servicing should be performed by authorized service center. Never allow the supply cord to be Misted, pulled, bent, or wrapped around the hair dryer.
- Keep this hair dryer clean for proper operating. Clean the filter frequently to avoid block or clog air inlets, to make sure the hair dryer is in the best function condition.

### **Clean Filter Cover and Filter Screen on Handle.**

- ① Remove the filter cover by anticlockwise rotating it.
- ② Use dry lint free cloth or soft brush to clean the accumulated dust on the filter screen and filter cover.
- ③ After cleaning, install the filter cover back by clockwise rotating it.

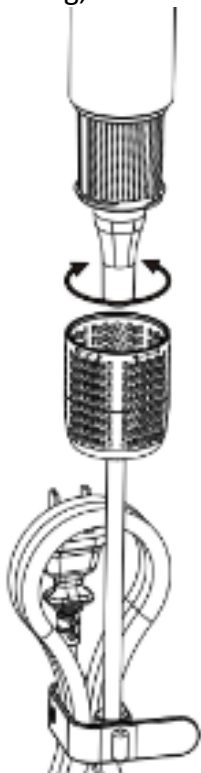

# TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The startup does not work.	The switch fails / Internal parts damaged	Please contact after sales service for support
Power plug Abnormal overheating	Power cord is damaged	Please stop use immediately. Please contact after sales service for support
There is no air in the operation of the product, or There is no hot air and the internal parts are red	The internal parts are damaged	Please contact after sales service for support
	The air inlet is blocked	Ensure that the air inlet is clean. Use the product after cooling
There is continuous burning during use	Internal parts damaged	Please contact after sales service for support

## SPECIFICATIONS

- 1. Voltage** : 220V-240V- 50/60Hz
- 2. Power** : 1600-1800W

## ENVIRONMENT-FRIENDLY DISPOSAL



**You can help to protect the environment!**  
**Please remember to respect the local regulations: hand in the non-working electrical  
equipment to an appropriate waste disposal center.**

**ELBA**