

#### Zenbooth Solo Build Instructions

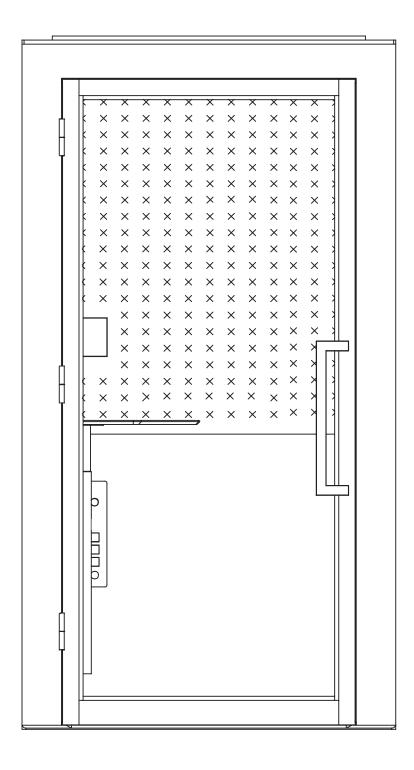

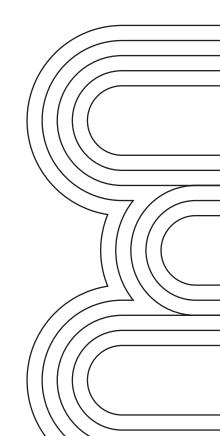

# // TABLE OF CONTENTS

Content	Page
Introduction	04
Product Specs	05
Tools - Included	06
Tools - Needed	06
Hardware List	07
Small Parts	08
Wall Panels	09
Large Parts	10
Assembly Instructions	11-34
Product Quality, Damage & Warranty	35
Tips	36
Trouble Shooting	37
Notes	38

### // INTRODUCTION

#### Dear valued customer,

Thank you! The entire Zenbooth team would like to congratulate you on your new Zenbooth Solo. We promise you will not be disappointed with your purchase!

Founded in 2016, Zenbooth designs and manufactures all of its products in Berkeley, California. We are committed to offering the highest quality possible, while constantly reducing our environmental impact to a minimum. We make sure to use as many recycled materials and FSC engineered wood products as possible in the making of our products.

Email: support@zenbooth.net Call us: (510) 646-8368

Thank you again and enjoy your new quiet space!

### // PRODUCT SPECS

Specifications - Free-standing, modular privacy booth.

Measurements Exterior Size: 84.5" x 45.5" x 41" (HxWxD) Interior Size: 83" x 36.75" x 33.25" (HxWxD)

Weight 500 lbs

Skylight 1/2" shatterproof Plexiglas

atterproof Plexiglas

#### Sound control

3.5" thick walls containing recycled cotton/denim insulation.

#### Walls & Color

US made engineered wood panels with laminated maple interior and 2 exterior color options: Routing for data and telephone Door 36" wide self-closing door. 18.8" door handle.

Desk Surface height fixed desk: 41" Surface height range of adjustable desk: 29"-55" Surface dims: 30" x 16.75" (WxD)

Floor Anti-fatigue mat

#### Power & Data Unit

Fast Charging USB C & Traditonal USB Ports 2 x 15A 110v electrical outlets cables.






#### // PARTS OVERVIEW TOOLS INCLUDED





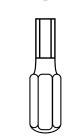




Point Size #3 Phillips Drive Bit


ize Point Size ips #2 Square Bit Drive Bit Hex Key 3mm (Door Handle assembly)

Hex Key 4mm (Spring Hinge) Shims 4x

#### // PARTS OVERVIEW TOOLS NEEDED

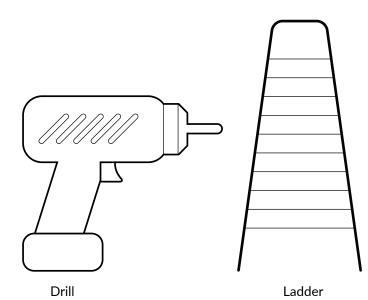

#### // PARTS OVERVIEW HARDWARE

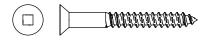

26 x 2" Square Drive Screws (Walls/Floor/Door Jam)



MAND

13 x 1 1/2" Square Drive Screws (Ceiling/Skylight)



13 x 1 1/2" Phillips Drive Screws (Door Hinge - Booth Side)



13 x 1/2" Phillips Drive Screws (Door Hinges - Door Side)




7 x 1/2" Phillips Drive Screws (Desktop Column to Wall)



5 x 3/4" Hex Drive Screws (Desktop to Lift)




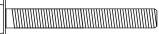


2 x Door handle Screw - Inside/ Outside

\*All fastener counts includes one spare.


1 x Spring Hinge Pin

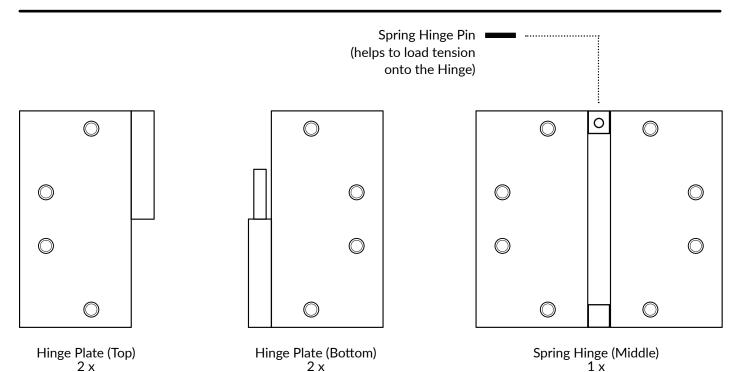


#### // PARTS OVERVIEW SMALL PART BOX

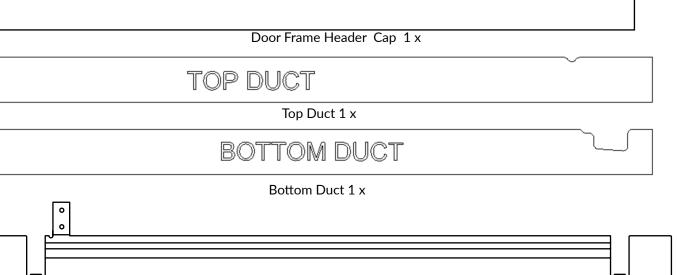

Door Frame Header 1 x

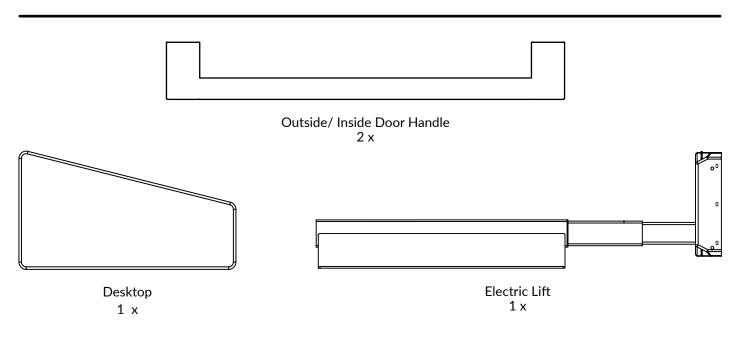


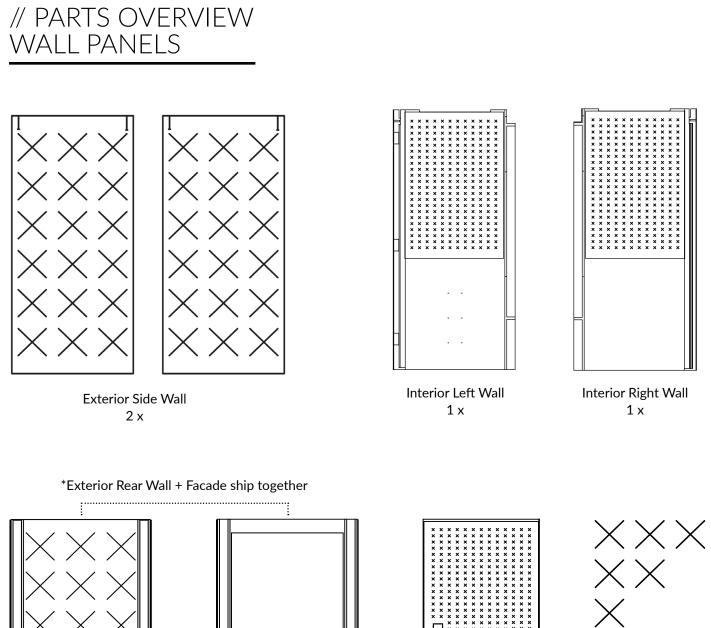


\*Insulation




\*Acoustic Paneling

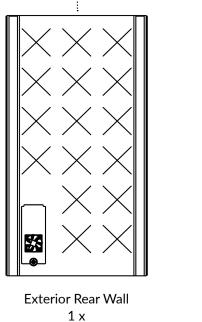



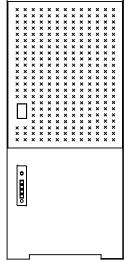

Interior Rear Wall 1 x // PARTS OVERVIEW LARGE PART BOX

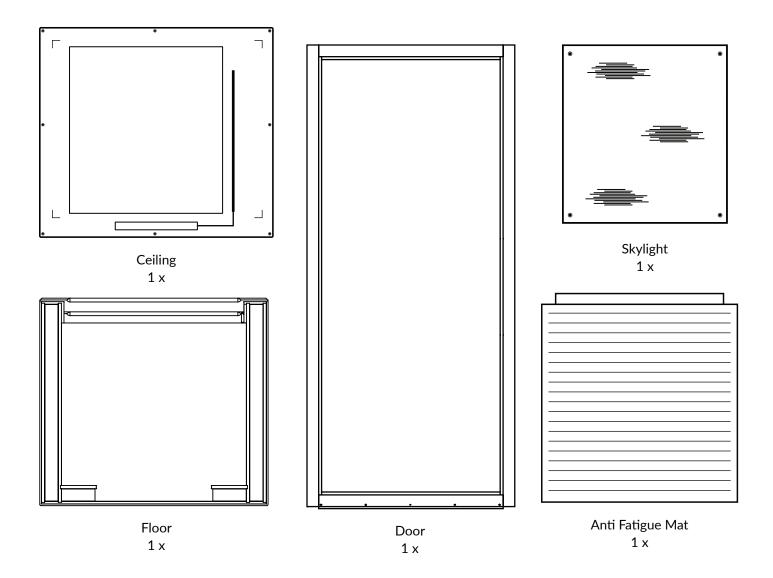

Before assembly!


Before beginning assembly, we recommend consulting a professional insured Zenbooth installer or general contractor. Warranty may be void if components are improperly installed.

Contact us at : support@zenbooth.net for any additional information or customer support.


After unpacking, inspect all parts for damage. If any parts are damaged as a result of shipping, report them to us with a photo before assembling so we can send you a replacement part.

After assembly, use a wet rag to wipe down any dust created in the installation process. Do not use ammonia based cleaners on the skylight. Windex fogs acrylic!


Place the booth a minimum of 4 inches away from wall to ensure adequate airflow. If the fan stops working, stop using the booth and contact Zenbooth for a replacement.

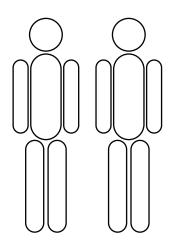

Safely execute the install with two people!

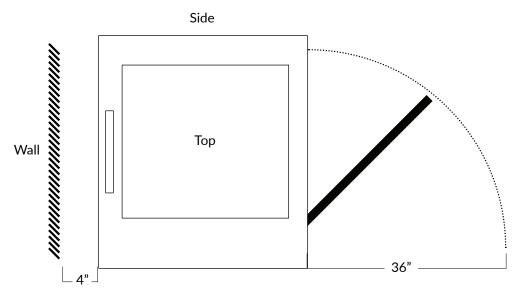


Minimum distance from a wall for optimal ventilation.

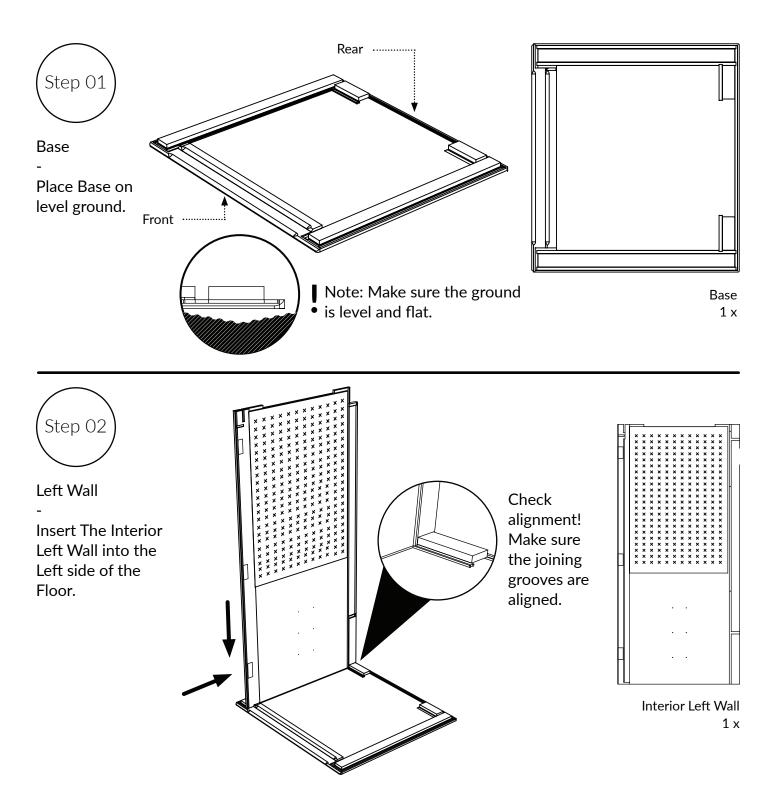



Interior Rear

Slide the Interior Rear Wall into the joining grooves of the Base and Left Wall.

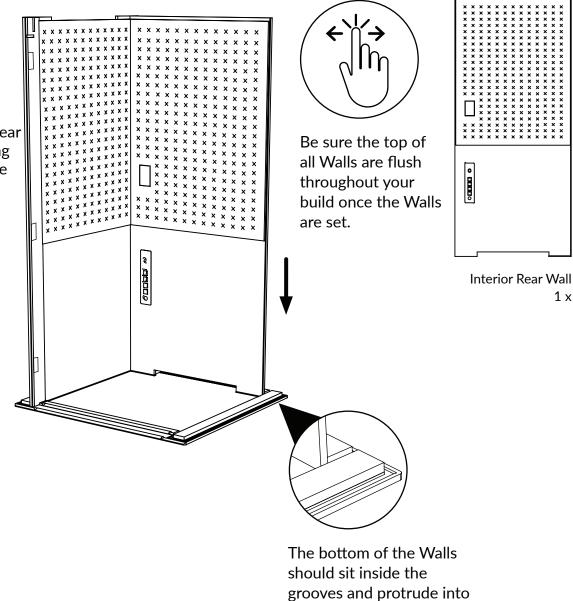


the adjoining groove in the


Floor.




#### **Right Wall**


Insert the Interior Right Wall into the Base and Interior Rear Wall. Using 2" square drive screws, fasten the Right Interior Walls to the Rear Wall.

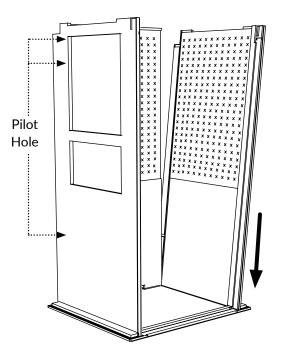

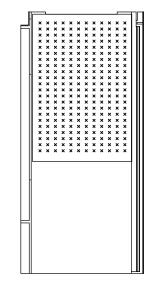


Interior Right Wall 1 x

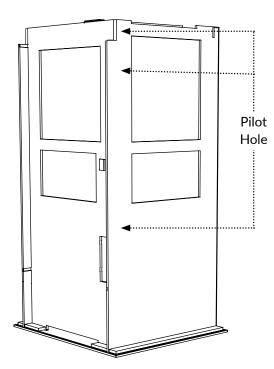

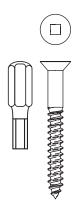


6 x 2" Square Drive Screws

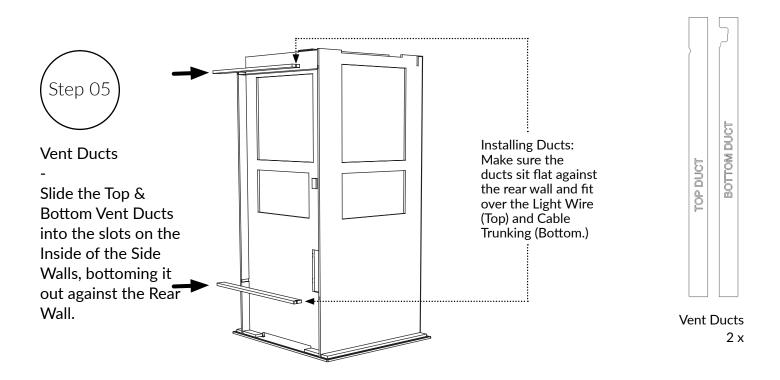





#### Insert Exterior Rear


Insert the Exterior Rear Wall to the Base and join it to the Left and Right Interior Walls.

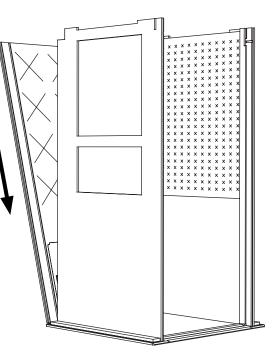


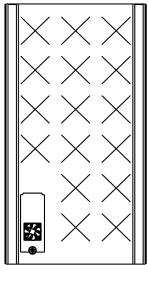

Exterior Rear Wall 1 x

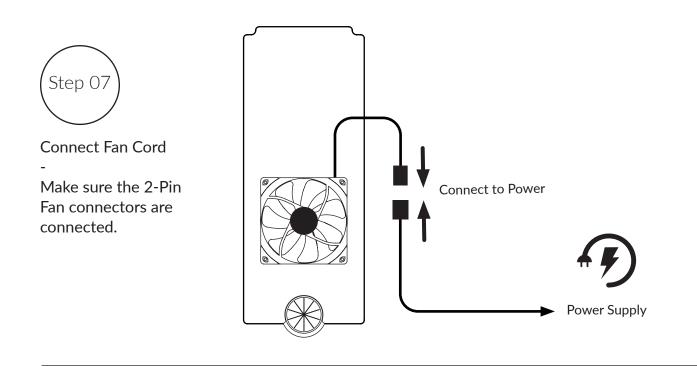


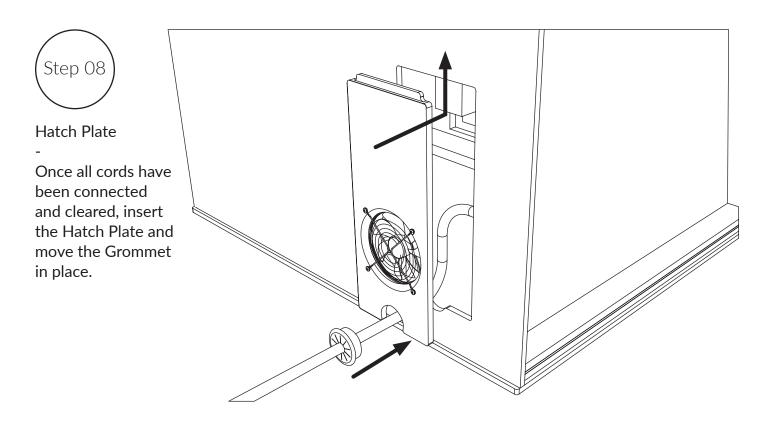


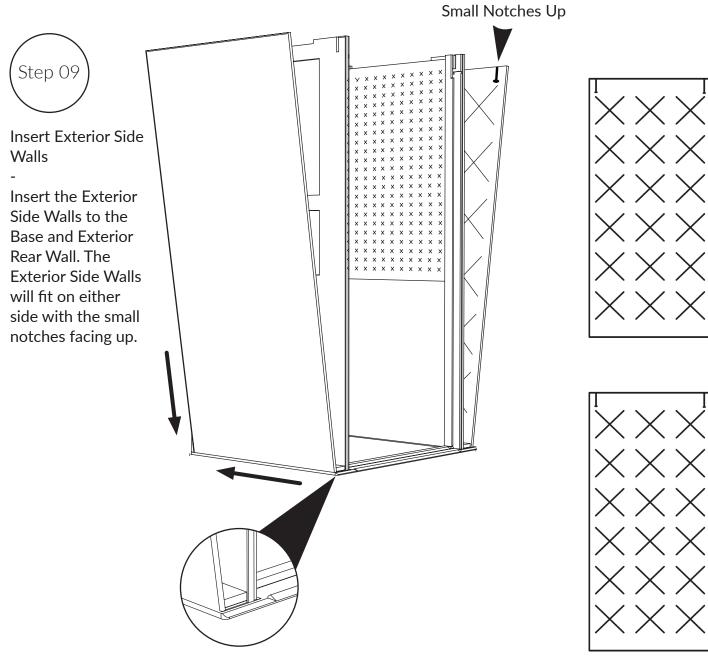


Exterior Side Wall 2 x

Applying pressure at bottom edge of a Wall works well for pushing it into position.

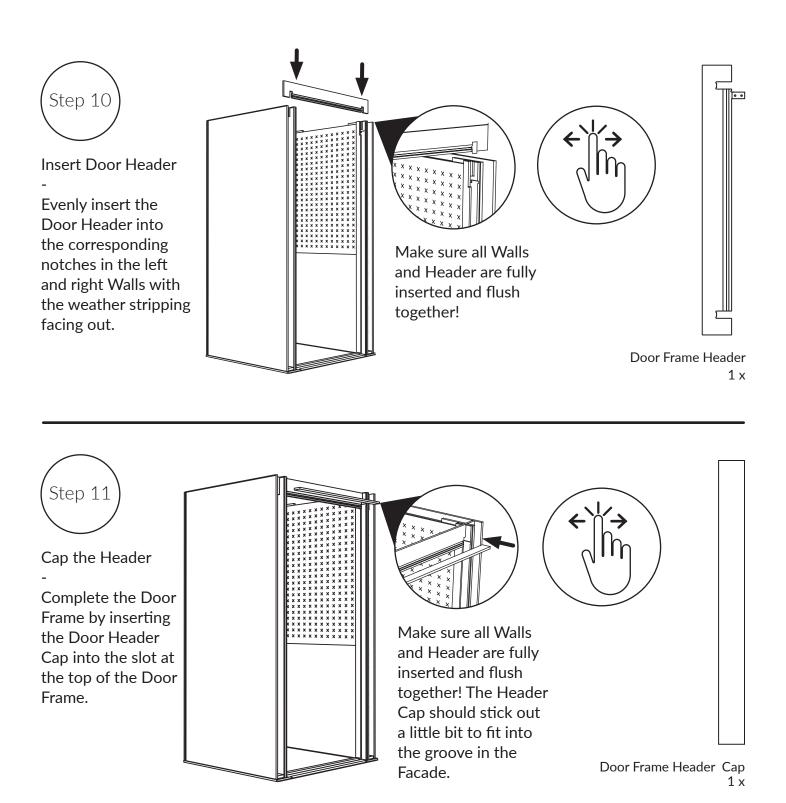

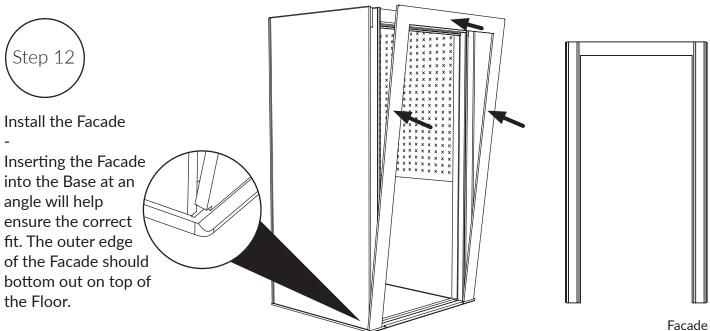


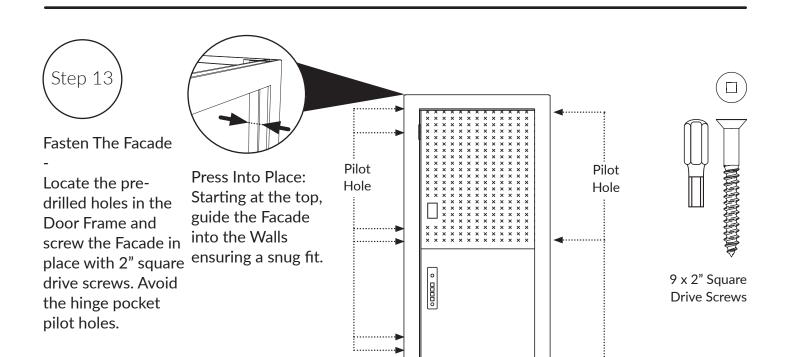






Fasten the Ceiling

Guide the Ceiling into place by starting from one corner and working it down onto the top of the booth until it is seated. Next, while standing on a step ladder, locate the eight pre-drilled holes on the top and drive the 1 1/2" square drive screws into each one to attach the Ceiling.

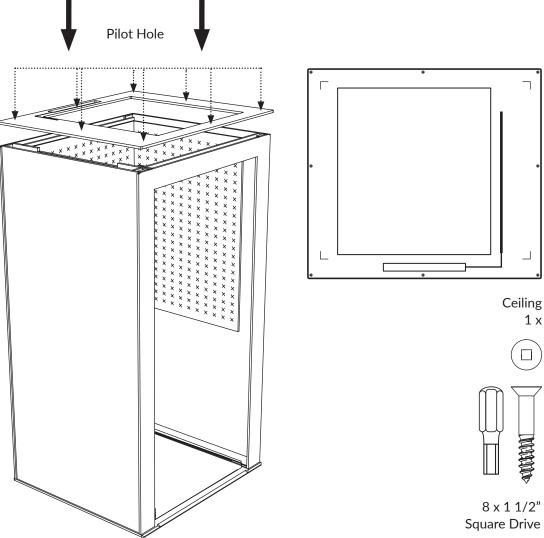


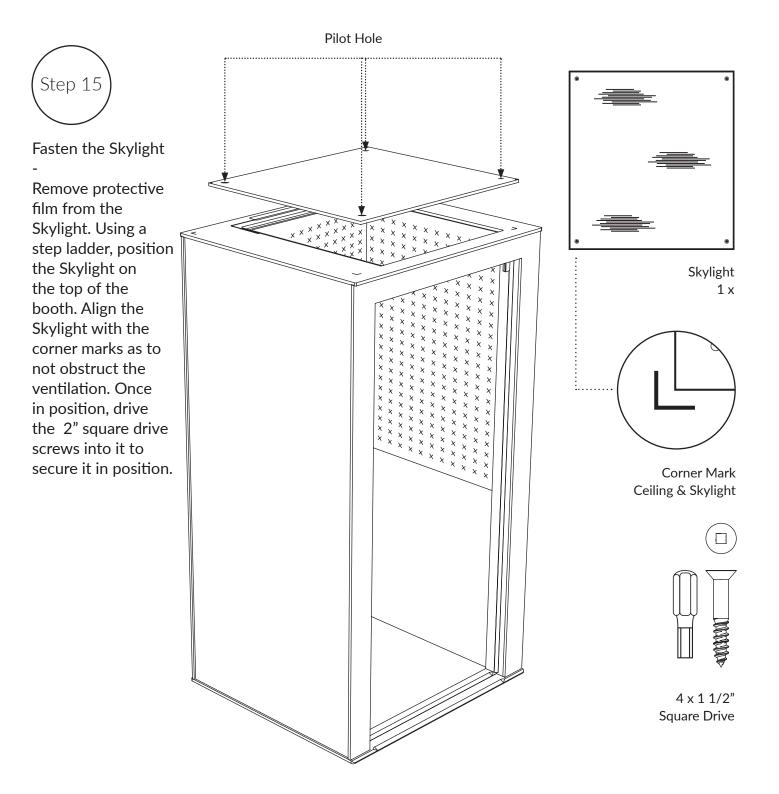


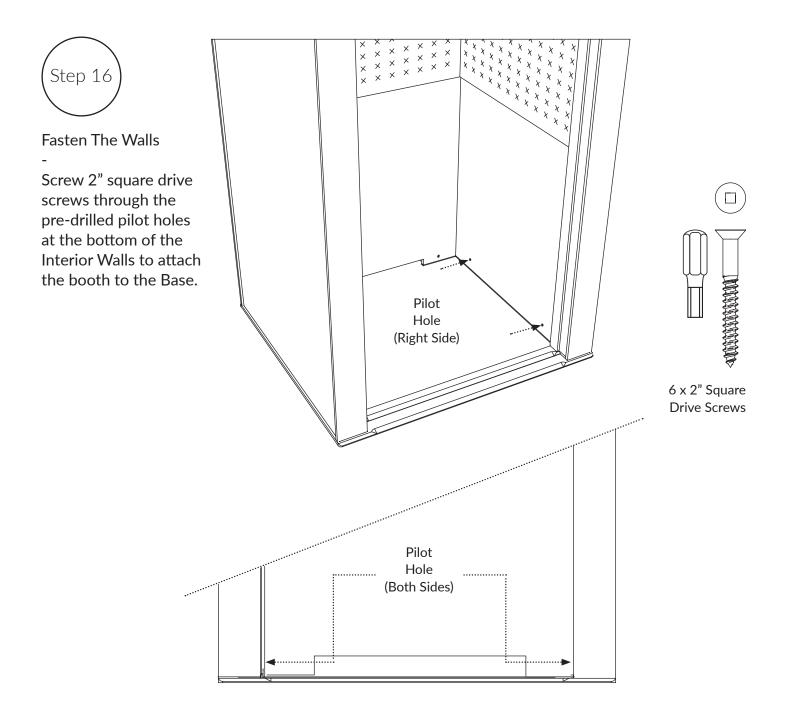


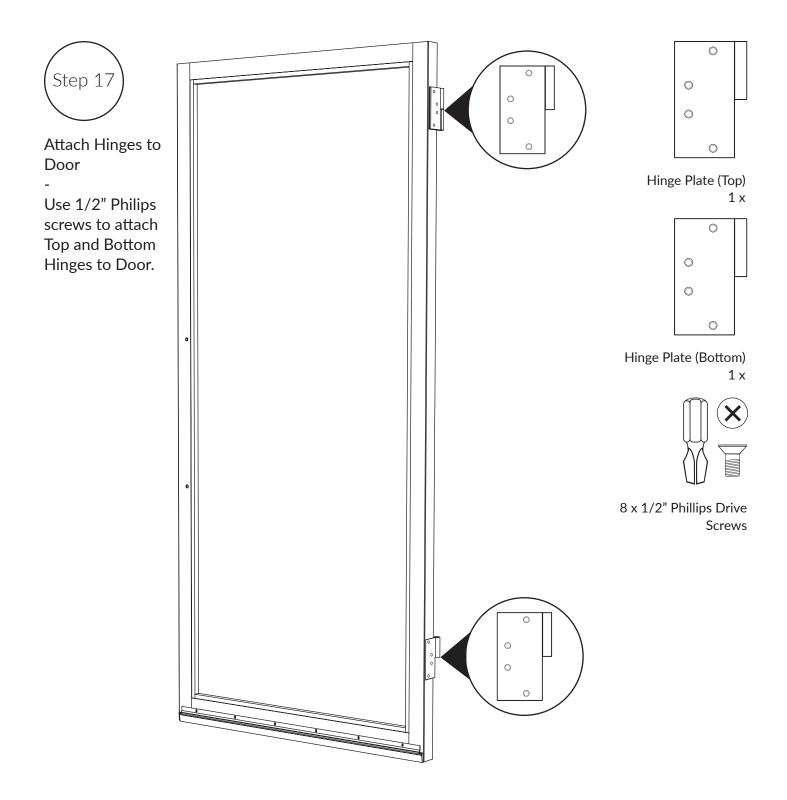


Step 19

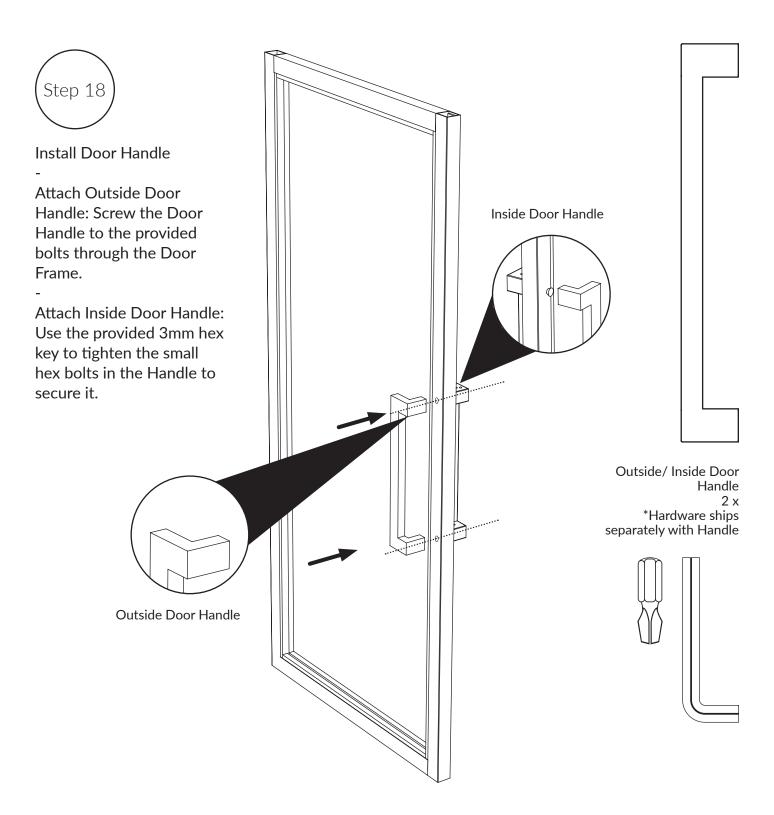


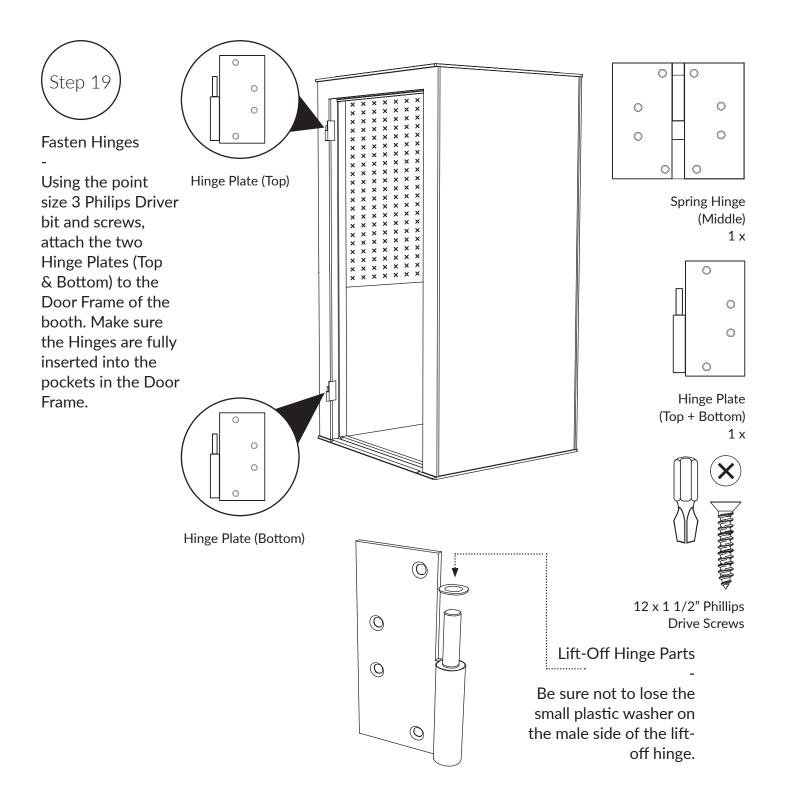

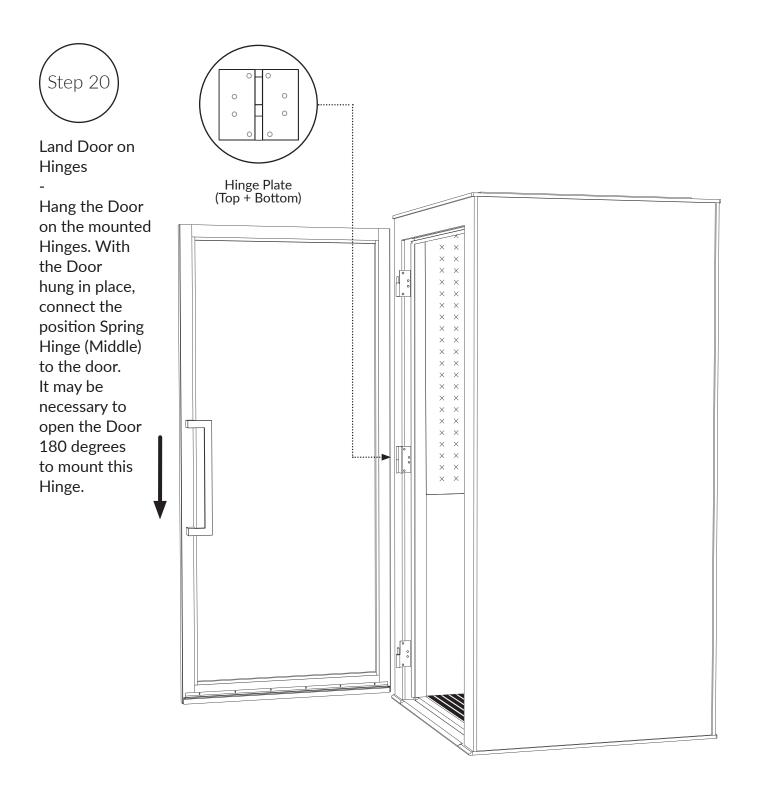

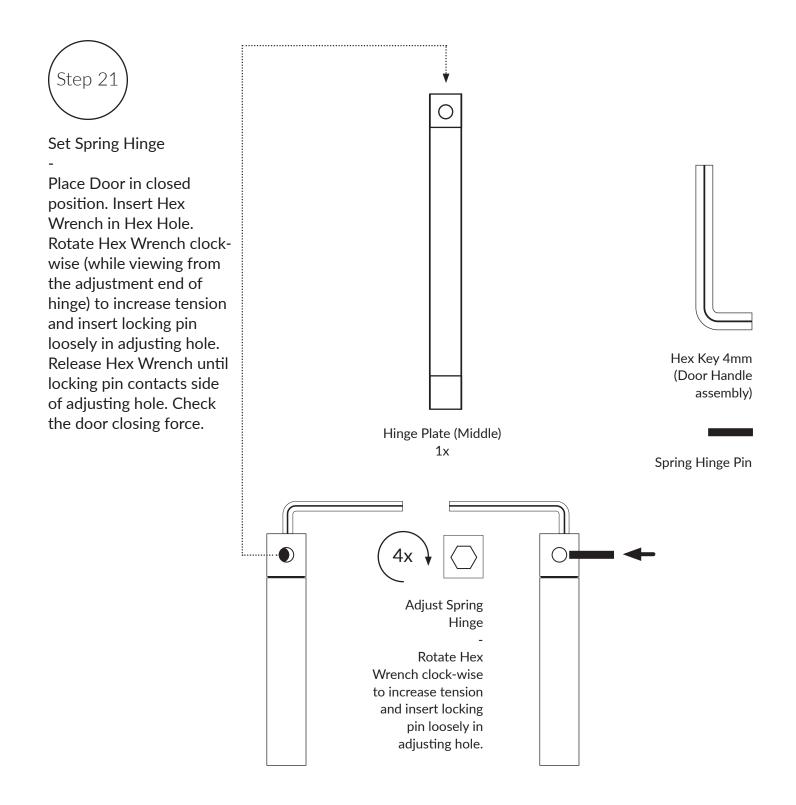


If your booth came with a height adjustable desk, then skip to page 31.

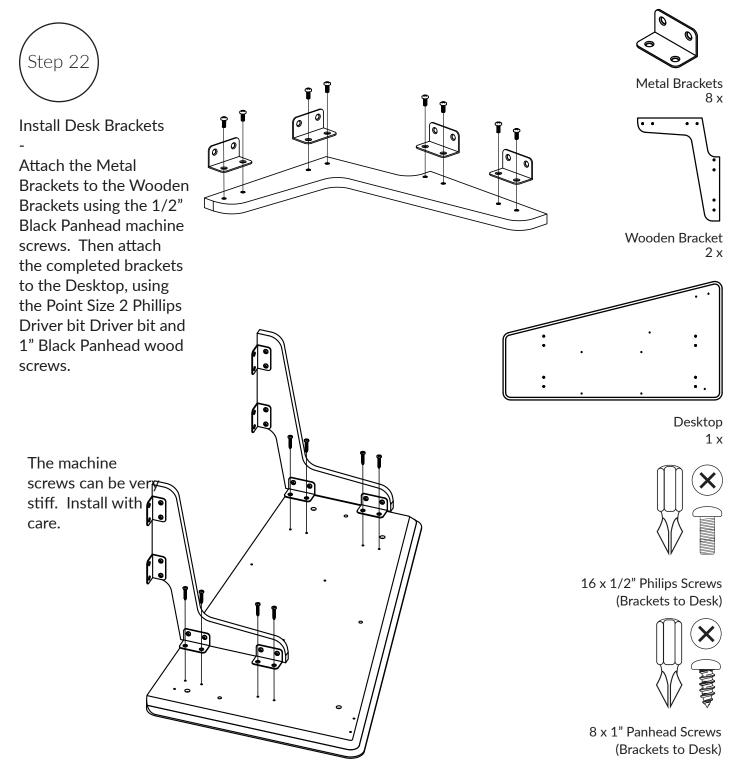





Install Desk Brackets


Using the Point Size 2 Phillips Driver bit and six 1" Black Panhead screws, align the brackets with the pilots and mount them to the Wall.

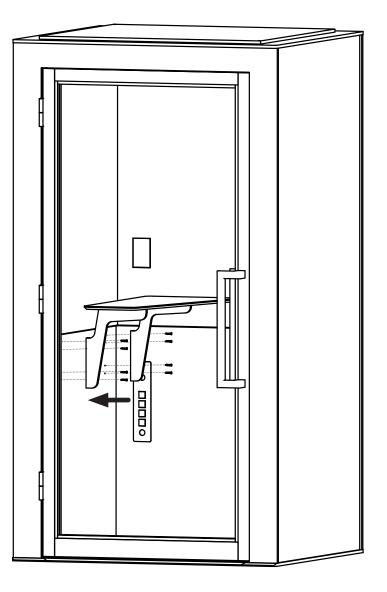

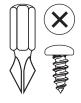


8 x 1" Panhead Screws (Brackets to Desk)

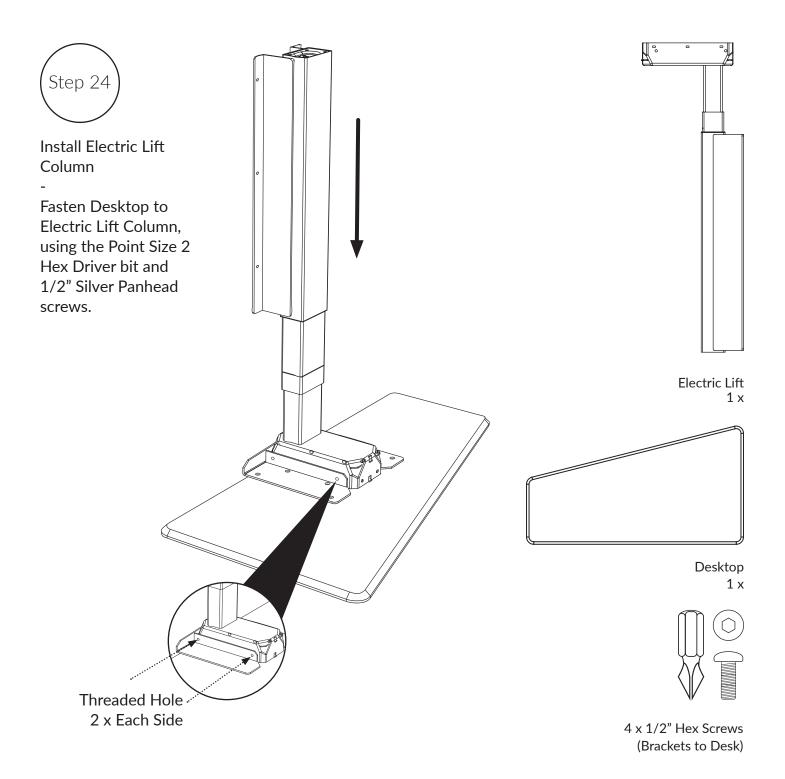

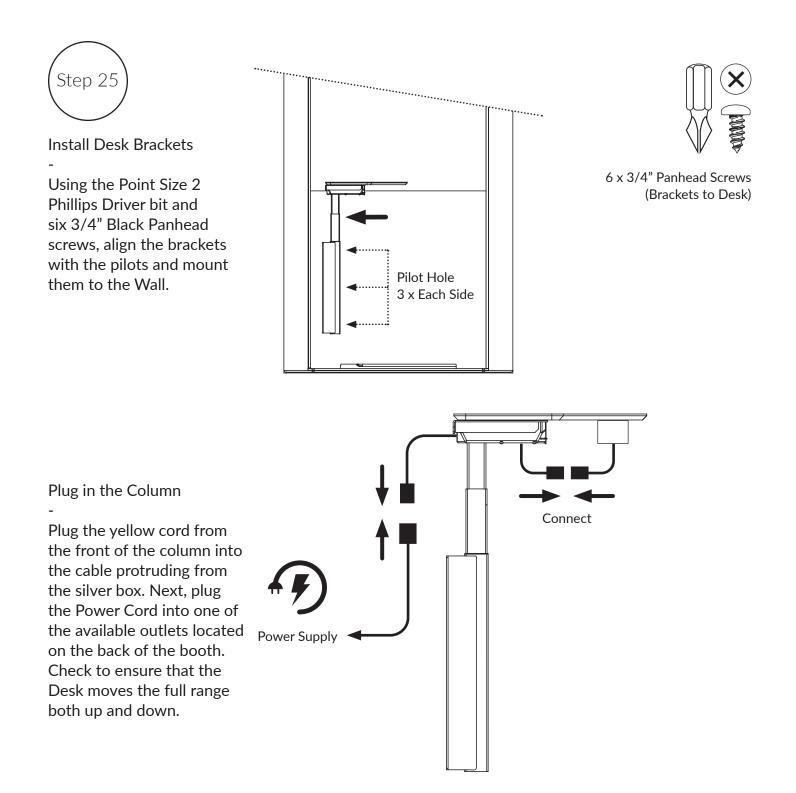


## // ASSEMBLY NOTES

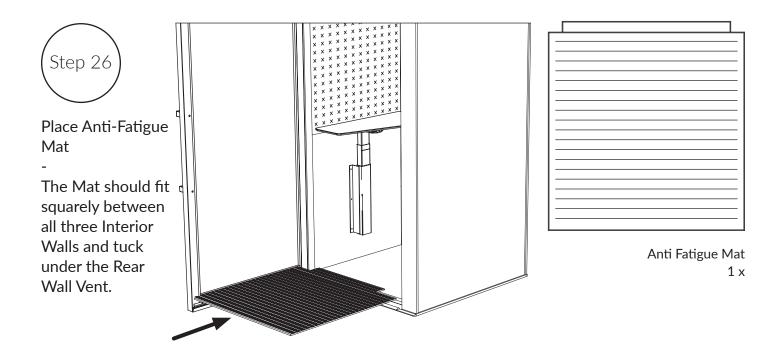



Relocate Booth

After completing the build, move booth into its final position.

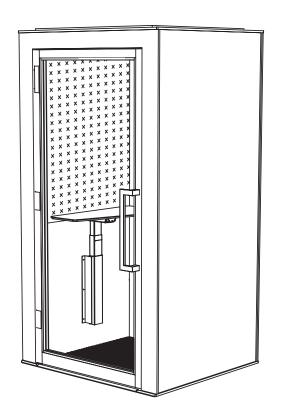



032




Door Tuning

After the booth is fully assembled and is in its final location, check the Door for proper alignment along the top right edge.

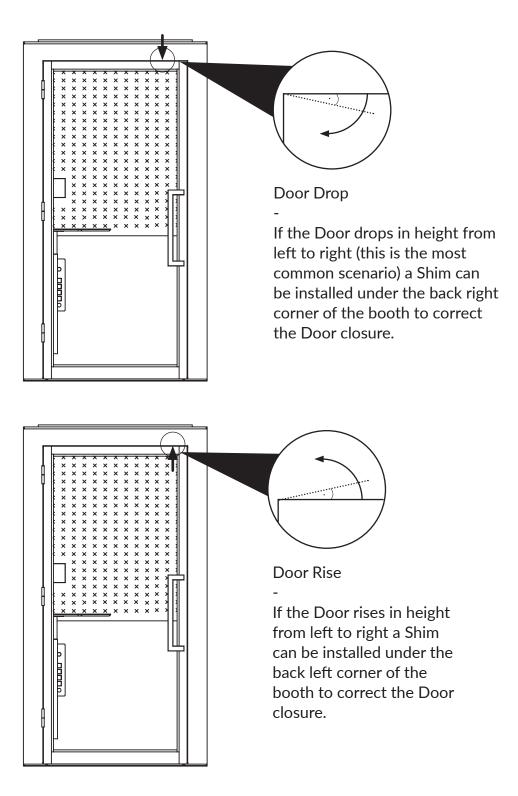

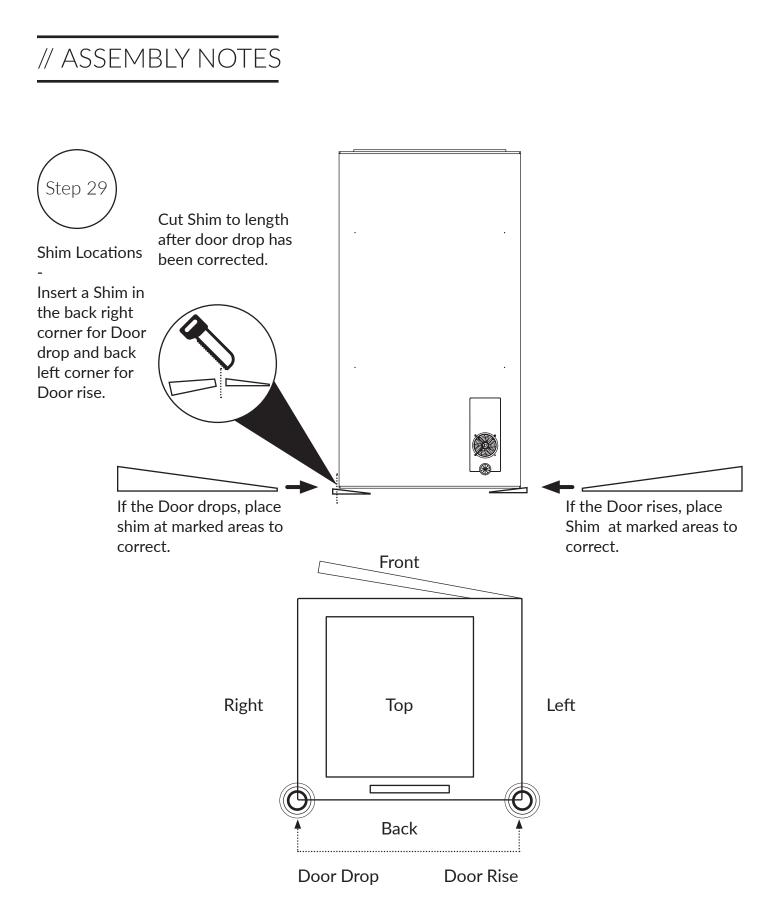

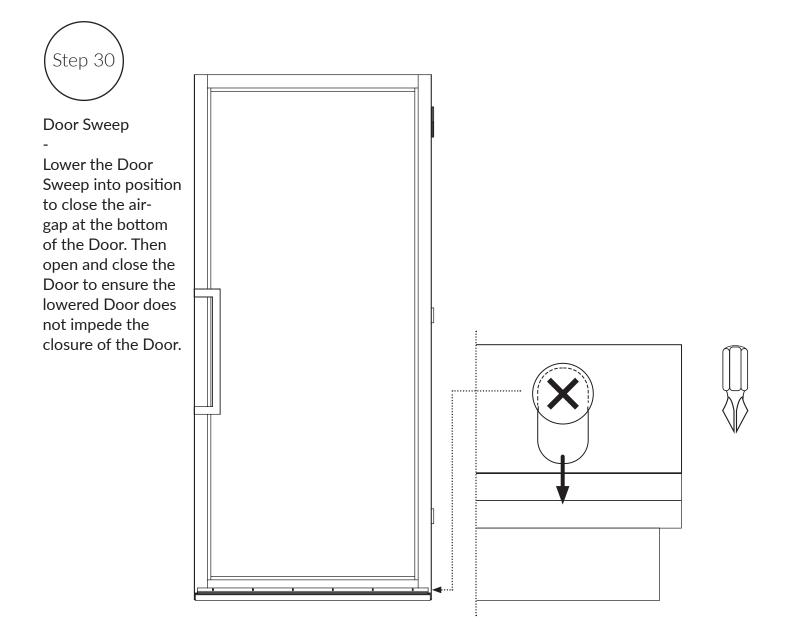

#### // PRODUCT QUALITY, DAMAGE & WARRANTY

#### **Product Quality or Damages**

Zenbooth strives to provide a high quality product. If your product arrives damaged, has missing parts, or has other workmanship defects, Zenbooth will ensure necessary services to provide you support and solutions to maintain our product quality standards.

In product quality or damages cases, the customer is responsible to open packaging, inspect product, and report damages within 3 days of the product delivery date. Such claims must be accompanied by photographs, include a detailed description and be emailed to support@zenbooth.net. Failure to make a claim within the 3 day period of time constitutes acceptance of the merchandise.

In cases of missing parts and workmanship defects, Zenbooth will absorb costs incurred in replacing and shipping as necessary.

#### Warranty

Zenbooth products are sold with a limited warranty against defects in materials and workmanship for a period of three years from the delivery date. Zenbooth reserves the right to repair or replace defective merchandise at its sole discretion. This limited warranty does not extend to other materials supplied by the purchaser or damage caused by shipping, accident, abuse, misuse, cleaning, or normal wear and tear. All other warranties express or implied are excluded.

For full details on return policies, terms and conditions go to: zenbooth.net/pages/terms-and-conditions

You can also reach us via Email or phone at:

- // Email: support@zenbooth.net
- // Call us: (510) 646-8368

# // TIPS FOR GETTING THE MOST OUT OF YOUR BOOTH

#### Not sure how many booths you need for your team?

We typically recommend at least 1 Zenbooth Solo for every 5-10 employees in your office, and at least one of our larger models for every 15 employees in your office. At Zenbooth HQ, we have about 1 booth per person, and they're always full!

#### Have too much open space in your office?

Use Zenbooths to create natural divisions of space between areas for different teams, meeting areas, and lounge or break areas. This helps to reduce visible and audible noise in the open office and makes movement and interactions between employees much more intentional.

#### Want to flood your booth with light?

While the Zenbooth Solo does come with adjustable LED lighting, try placing your booth in a place where it'll receive plenty of artificial or natural light. Our full skylight ceiling will allow this light to supplement the existing light in the booth. Placing them too close to windows can cause green house effects and heat up the booth.

#### Are your booths constantly in use?

Use a vinyl marker to create a makeshift calendar on the door of your booth or add your Zenbooths as a shared space on your Google Calendar to make booking booths easy and ensure people aren't camping out in the booths!

#### Trying to save space in your office?

Save space by lining up a bank of phone booths in bustling or high traffic areas like hallways and lobbies.

### // TROUBLE SHOOTING

Q: The Door "scrapes" across the bottom of the booth. A: Insert shims into rear right corner of the booth (see diagram on page 33).

Q: "The Door does not close by itself, is that normal"? A: Repeat step 23 again, tightening the spring another notch.

Q: My fan/light stays on continually.

A: If the timer does not seem to be turning the product off after 10 minutes, please contact Zenbooth support.

Q: My booth is stuffy or warm.

A: Ensure the fan is unobstructed and at least 4" from a wall or structure. If it is obstructed, clear the obstruction or move the booth. If this does not fix the problem, ensure the booth is plugged in and the fan is operating normally.

Q: The desk lift stopped operating. What can I do?

A: First check if it is plugged in and the booth has power. If your booth has power, then it is possible the controller in the desk needs to be reset. Perform the following steps, to reset:

- hold the down button until desk goes all the way to bottom (should take a second)
- once at the bottom, let go and hold down button again (desk should drop another 7mm)

- once it hits that 7mm it should be reset.

Q: I am standing in the booth and feel cold. Is there a possible fix?

A: The booth exchanges air from the outside in. To ensure a comfortable experience, make sure that the outside temperature in your office is also at a comfortable level. If this is not ideal, then a small space heater inside the booth can help keep the temperature at a comfortable level. At no time should you obstruct or tamper with the booth's ventilation system.



**Zenbooth Inc.** 650 University Ave Suite #10 Berkeley, CA 94710

-

\_

Copyright © 2022. All Rights Reserved V18.6