 
 
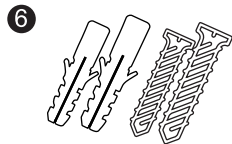 


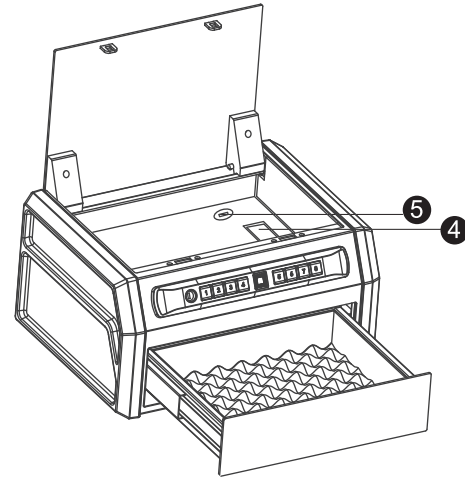

**High Capacity Multifunction Pistol Safe
Instruction Manual (RP19002)**

RPNBSafe delivers security exactly where you want it.

Box Contents

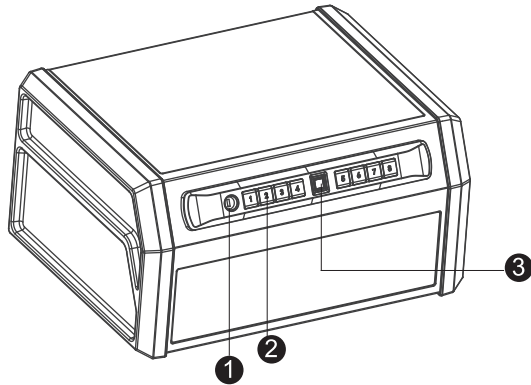

- ① Upper Layer Backup Key Hole
- ② Backlit Keypad
- ③ Fingerprint Scanner
- ④ Battery Compartment
- ⑤ Bottom Drawer Backup Key Hole
- ⑥ Hardware Mounting Kits
- ⑦ Upper Layer Backup Keys (2)
- ⑧ Bottom Drawer Backup Keys (2)
- ⑨ Owner's Manual/Quick Start Guide

Warnings

To prevent damage to your RPNB® unit or injury to yourself or to others, read the following safety precautions before using this unit.

DO NOT PLACE OR STORE THE BACKUP KEYS INSIDE THE SAFE AT ANY TIME. IF THE BATTERY FAILS, YOU WILL BE UNABLE TO OPEN THE SAFE.

DO NOT expose to extreme heat or cold. Battery power may be affected.

DO NOT store loaded guns in this unit. Firearms are serious in nature and must be handled with respect. Store responsibly.

ALWAYS check to make sure door has latched when closing; Lid requires a firm press and locks automatically.

Disclaimers

Neither seller nor manufacturer shall be liable for unauthorized access, any injury, loss or damage to personal property direct or consequential, arising out of the use of, or the inability to use the RPNB® Safe.

 
 
The user shall determine the suitability of the RPNB® Safe before the intended use and user assumes all risk and liability whatsoever in connection therewith, RPNB® Safe are not intended to protect against environmental hazards including fire and water.

Be sure and follow all local and state firearm laws.

DO NOT operate a firearm without proper training and experience.

Backup Key Access


- 1 To get started, insert one of your upper layer backup keys into the keyhole at the front of the safe. Push key in and turn the key 90 degrees clockwise to open the safe (see Figure A).
- 2 Remove crate foam insert and locate the keyhole in the bottom of the upper layer. Insert one of the bottom drawer backup keys, and rotate the key 60 degrees anticlockwise to open the bottom drawer (see Figure B).

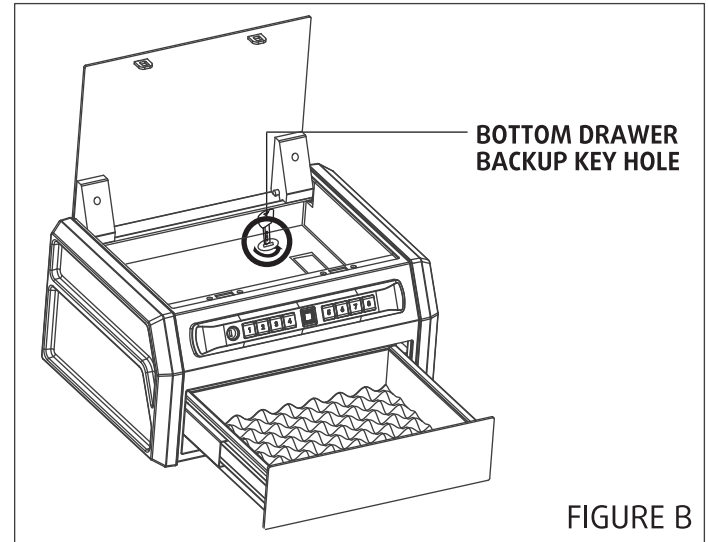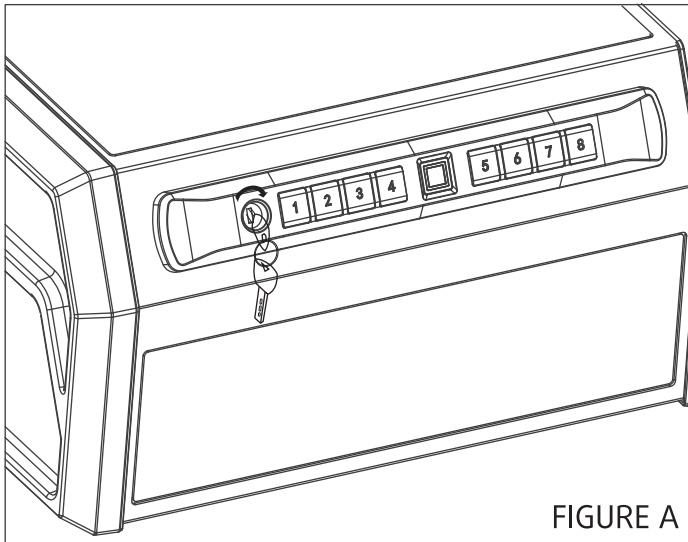

Battery Installation

- 1 With the safe open remove crate foam insert. Locate the battery compartment cover in the bottom of the upper layer (see Figure C).
- 2 Open the battery cover and insert the 4 AA alkaline batteries (not included) into the battery compartment.
- 3 When the batteries are inserted correctly you will hear a short beep.
- 4 Once you hear the beep, place the battery cover. You are now ready to program your safe.

 FIGURE C

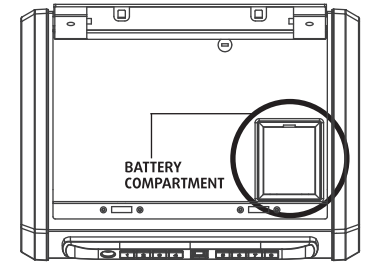


IMPORTANT:

- Use the NEW AA alkaline battery. Using other batteries may cause unusable conditions.
- New batteries can not be used with old batteries together.
- Your RPNB® safe will automatically lock when you fully close the lid.

External Power Supply

 When the batteries are depleted, you can plug a micro-USB cable (not included) into the micro-USB receiving jack located at the side of backlit keypad and connect to a standard micro-USB port or wall outlet using the AC power adapter as an external power supply (see Figure D).

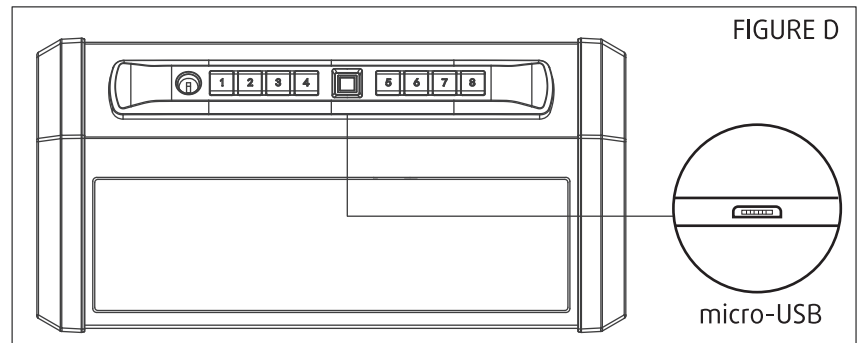

Master Code Programming

First time users should change the default code as soon as possible to prevent unauthorized access to your safe, so it should be kept confidential.

 
 
TIP: Code Requirements

- Your code can be a minimum of 4 and a maximum of 6 digits. For your security, the safe will time out and sleep for five minutes if 5 incorrect entries are made. The safe can still be opened by using the backup keys override.
- Two keys cannot be pressed simultaneously.
- Programming a new code will overwrite your previous code.

Master Code Programming

Master Code Programming for the Upper Layer



- 1 With the safe open, press and hold the “PROGRAM” button (3 seconds), all keys (1-8) will light up once with one beep (see Figure E).
- 2 Enter your NEW master code for the upper layer(see Figure F, any number from 1-4).
- 3 Press the “PROGRAM” button once and release it, all keys (1-8) will light up twice with the double beeps. This tone confirms that the password has been reset.
- 4 Now test the code, if you make a mistake and the new code will not work, simply start over with step 2.

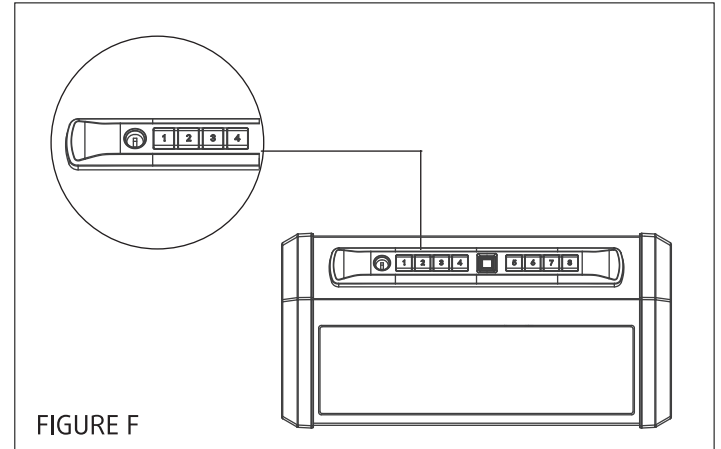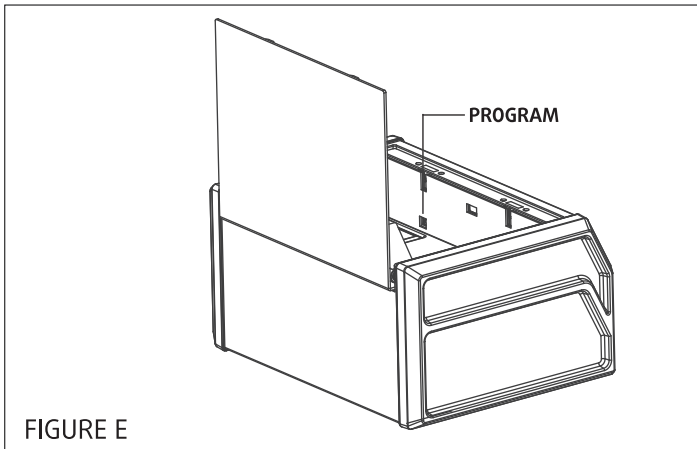

Master Code Programming

Master Code Programming for the Bottom Drawer

  - 1 With the safe open, press and hold the “PROGRAM” button (3 seconds), all keys (1-8) will light up once with one beep (see Figure G).
- 2 Enter your NEW master code for the bottom drawer (see Figure H, any number from 5-8).
- 3 Press the “PROGRAM” button once and release it, all keys (1-8) will light up twice with the double beeps. This tone confirms that the password has been reset.
- 4 Now test the code, if you make a mistake and the new code will not work, simply start over with step 2.


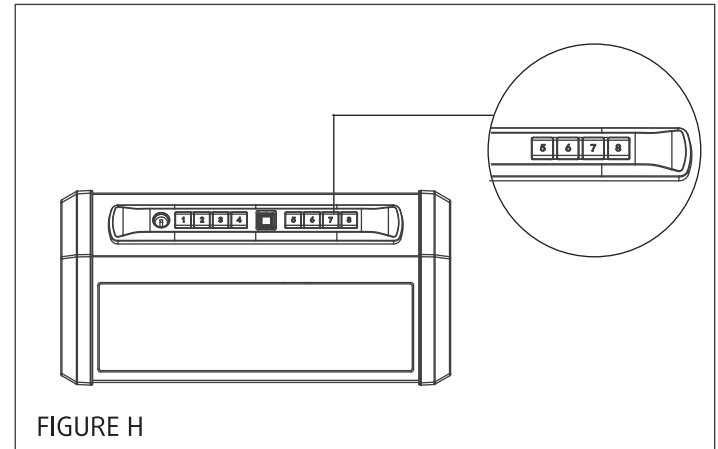
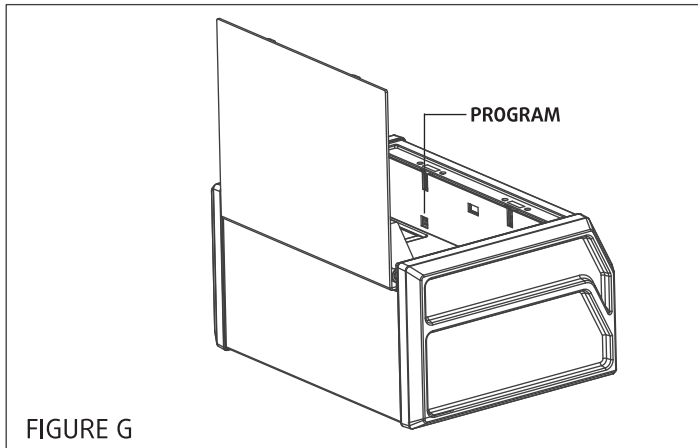


Registering Fingerprints

Helpful Programming TIPS :

- 1 Place your finger on the center of the scanner (this allows the scanner to read where most of the fingerprint detail is located).
- 2 Adjust your finger slightly between scans for increased accuracy.
- 3 Excessive moisture, lotions, or dirt will affect your fingerprint and may cause inaccurate sensor reading.
- 4 If you are experiencing difficulty try different fingers. Each finger is unique, and some fingers such as your thumb, contain more readable information than others.
- 5 To increase your success rate, please register the same fingerprint multiple times.

   FIGURE I

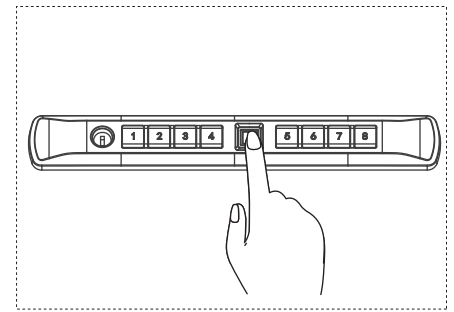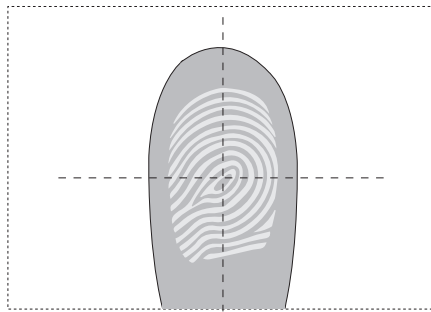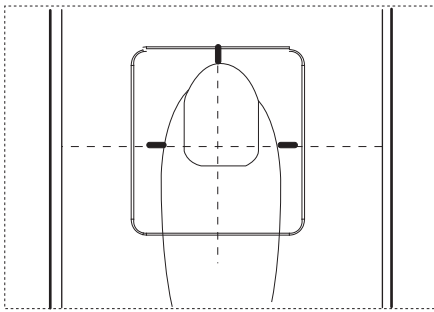

Programming the Fingerprints

To Register Your Fingerprint, Locate the “Program” Button.

- 1 With the safe open , press and hold the “PROGRAM” button (3 seconds), all keys (1-8) will light up once with one beep (see Figure J).
- 2 Using the helpful programming tips provided on page 8 (see Figure I) place your finger on the fingerprint scanner for the 1st of four scans. Remove your finger after all keys (1-8) light up BLUE once with one short beep. Place finger again over the scanner until all keys (1-8) light up BLUE once with one short beep and lift. You will repeat this process until all keys (1-8) light up twice with the double beeps.
- 3 Now your fingerprint has been successfully registered. If you make a mistake and the new fingerprint doesn't work, you must repeat the above steps.

Note:

- If all keys flash blue 5 times with 5 beeps, it means registration has failed and you must repeat the above steps.
- You cannot register more than 20 fingerprints. If the light flashes 5 times with 10 beeps when you register once your fingerprint, it means the fingerprint storage capacity is full.
- Interior light will automatically illuminate for 30 seconds when the door is opened. After 30 seconds the light will automatically turn off.

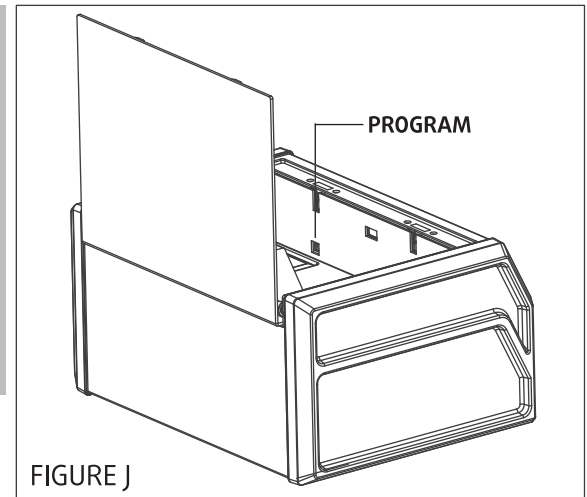 


FIGURE J

Fingerprint Access

- 1 Press anyone of button 1-4 at first, then put your finger on the fingerprint scanner to open the upper layer.
- 2 Press anyone of button 5-6 at first, then put your finger on the fingerprint scanner to open the bottom drawer.

Delete the Registered Fingerprint

- 1 Press and hold the program button (**5-6 seconds**) until all the keys flash twice with double beeps and let go.
- 2 Now all registered fingerprints are erased.

IMPORTANT:

When only flash once with one beep, do not let go. You must hold the program button until the keys flash twice with double beeps, then release it.

Silence Mode Setting

To silence the audible sound of the electronics, hold the "1" button for 4 seconds until you see all keys will flash together. To unmute the keys, repeat this step.

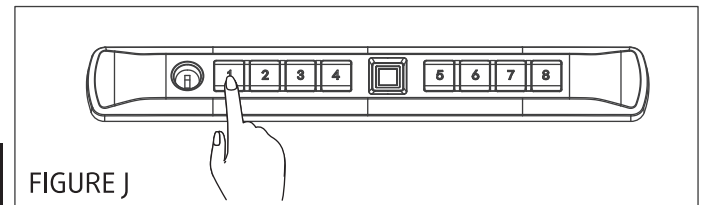 


FIGURE J

Low Battery Warning

If all keys will light up blue 10 times with 10 times beeps when opening the safe by electronic way, your battery level is critically low and your safe needs to be replaced the 4 new batteries.

IMPORTANT : Use the NEW AA alkaline battery. Using other batteries may cause unusable conditions.

Securing Your Safe

There are some mounting screws included to mount your RPNB® safe to a flat surface using the pre-drilled holes on the bottom.

Using the Mounting Screws

TIP: Make sure you have enough clearance for the lid to open properly before mounting the safe.

- 1 Position the safe on a flat surface where you want to mount it.
- 2 Use a pencil to mark the holes for drilling.
- 3 Drill pilot holes.
- 4 Position safe in place and install screws through safe into pilot holes. Tighten screws.

IMPORTANT

Mounting the safe vertically so that the door flips upward will result in incomplete opening of the safe due to weight. The door will open if the safe is mounted vertically so that door opens down or to side.

Customer Support/Warranty

Customer Support

If you have a problem with your RPNB® safe that is not answered in the this manual, we encourage you to email us: CUSTOMERSUPPORT@RPNBSAFE.COM

How shall I view tutorial videos?



- 1 Go to our website via: **www.rpnbsafe.com**
- 2 Select the "**Customer Service**" on the navigation bar
- 3 Click "**How To Video**"
- 4 Select the product model you purchased

How shall I replace keys?

- 1 Go to our website via: **www.rpnbsafe.com**
- 2 Select the "**Customer Service**" on the navigation bar
- 3 Click "**Replace Keys**"
- 4 Fill in the required information

How shall I order accessories?

- 1 Go to our website via: **www.rpnbsafe.com**
- 2 Select the "**Customer Service**" on the navigation bar
- 3 Click "**Order Accessories**"
- 4 Fill in the required information

 More online at www.rpnbsafe.com under support

Linked Warranty (Terms and Conditions)

RPNB® is committed to building high quality products and will make every effort to ensure our products are free from any defects. We guarantee your safe will be free of defects in materials or workmanship for a period of one year from the date of original. This warranty does not cover abuse, misuse, use in any manner for which is not designed, neglect, modification, damage in advertently caused by the owner; accidents, and/or tampering.

If your safe is determined to be defective and we are responsible for the cause we will have it repaired at our expense, or we will send a new replacement at no cost to you. You will be required to return your existing unit as well as all included accessories to RPNB® prior to replacement of the defective unit along with your order of purchase.

If it is determined your safe needs to be returned our customer support team will provide you with a return detail.

Please have the following information available when contacting us:




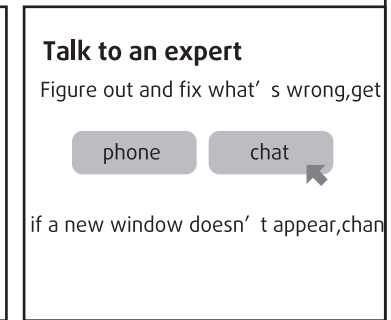
- Purchaser's name and mailing address, email address, and phone number
- Online order number
- Detailed description of problem

NEITHER SELLER NOR MANUFACTURER SHALL BE LIABLE FOR ANY INJURY, LOSS OR DAMAGE, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR THE INABILITY TO USE THE RPNB® SAFE.

How shall i talk to them?

Go to Your Orders, find your order in list, and click get product support.

You can e-mail the seller by doing the following:

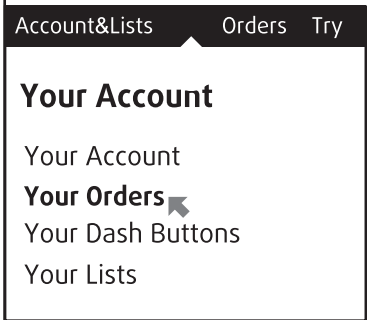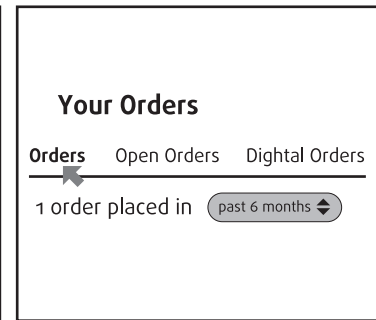 <p>Account&Lists Orders Try</p> <p>Your Account</p> <p>Your Account</p> <p>Your Orders ←</p> <p>Your Dash Buttons</p> <p>Your Lists</p>	 <p>Your Orders</p> <p>Orders Open Orders Digital Orders</p> <p>1 order placed in past 6 months</p>	 <p>Get product support</p> <p>Write a product review</p> <p>Archive order</p>	 <p>Talk to an expert</p> <p>Figure out and fix what' s wrong,get</p> <p>phone chat</p> <p>if a new window doesn' t appear,chan</p>
<p>1.Go to your account find the order</p>	<p>2.Find your order item</p>	<p>3.Click get product support</p>	<p>4.Give the seller 24hours to respond</p>

 Please email us to get a special **VIP** discount code before your next order.

 Problem with the order? Please email us, give us a chance to help you firstly.

 **Satisfied with us.**

Hum, this people is nice, i can give them a positive reviews to tell people they are selling good products, doing the right thing.



RPTB®

Dear Customer:
Thank for your business
— BEST WISHES FOR YOU —



Customer Support Hours:

Monday - Friday 9:00AM - 6:00PM (PST) Saturday – Sunday 9:00AM – 12:00PM (PST) Excluding Holidays

Hours subject to change

Customer Service Department Contact: customersupport@rpnbsafe.com