 
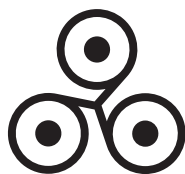 


icklebubba

Discovery

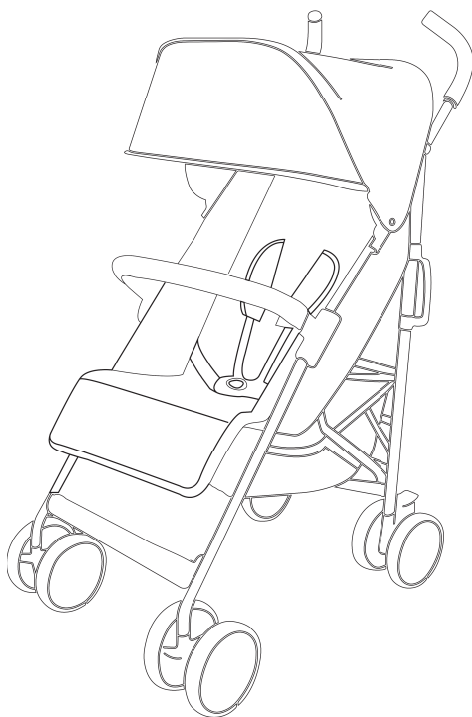

IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Contents

Page 03
What's Included?

Page 04, 05
Warnings

Page 06
Unfolding

Page 07
Folding

Page 08
Using the brakes/Bumper bar

Page 09
Using the front wheels/Safety harness


Page 10
Adjusting the backrest/Footrest

Page 11
Wrist Strap/Care and Maintenance

Page 12
Warranty Information

WARNING! BEFORE USE, REMOVE AND DISPOSE OF ALL PLASTIC BAGS AND PACKAGING MATERIALS AND KEEP THEM OUT OF REACH OF CHILDREN.

 What's Included ?

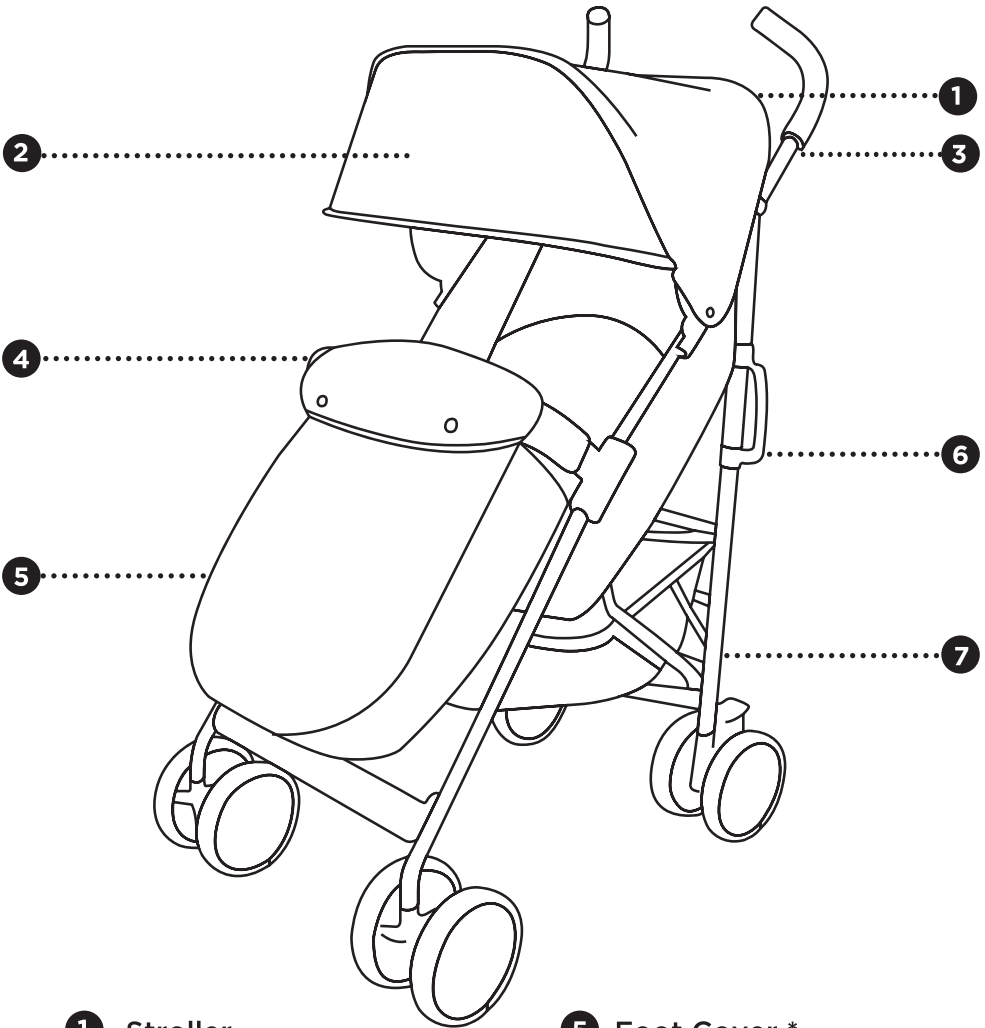

1 Stroller

2 Hood

3 Wrist Strap

4 Bumper Bar

5 Foot Cover *

6 Cup Holder *

7 Raincover *

8 Buggy Organiser *

* Optional purchase

v.01.21



WARNING

WARNING: TO AVOID INJURY OR DEATH:

ALWAYS APPLY THE BRAKES WHENEVER THE PRAM/STROLLER IS STATIONARY.

- FOLLOW THE MANUFACTURER'S INSTRUCTIONS.
- DO NOT LEAVE CHILDREN UNATTENDED.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER , OTHERWISE THEY MAY BE INJURED.

WARNING: USE THIS HARNESS AT ALL TIMES.

WARNING: USE THIS TETHER STRAP TO STOP THE STROLLER ROLLING AWAY.

Never leave a harness buckled when not fitted to a child in the stroller because the harness can form loops which may pose a strangulation hazard.

It is unsafe to use accessories other than those approved by the vehicle manufacturer.

Care be taken if the stroller is used on stairs or escalators.

The stroller not be used near an open fire or exposed flame.

The brakes must always be applied when the stroller is not moving.

The vehicle is designed for use on flat or gently sloping surfaces and may unstable on higher sloping and uneven surfaces; and user should be made aware of the possibility of the vehicle tipping over.

There is potential for fingers or parts of the body to be injured when the vehicle is being folded or unfolded, and that due care should be exercised.

Ensure that the storage latch is engaged when lifting or carrying the vehicle.

Do not lift the stroller by the arm bar (supplied) because it may be disengaged.

WARNING

Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions:

This stroller is intended for children from birth to 48 months, up to 22kg (approximately 4 years old)

WARNING Regularly inspect all parts and locking devices, promptly replace worn out or broken parts.

WARNING Only use original accessories and manufacturer approved parts. The use of non-approved replacement parts or accessories may cause damage or make your product unsafe.

WARNING Bumper bar must be removed before folding the stroller to avoid any damaged parts.

WARNING The maximum hold of the canopy pocket is 0.5kgs.

WARNING The maximum hold of the cup holder is 0.5kgs.

 
WARNING The maximum hold of the basket is 3kgs.

WARNING Store in a safe place away from children.




**THIS BABY STROLLER HAS BEEN APPROVED IN ACCORDANCE TO
AS/NZS 2088 : 2013**


Open me up

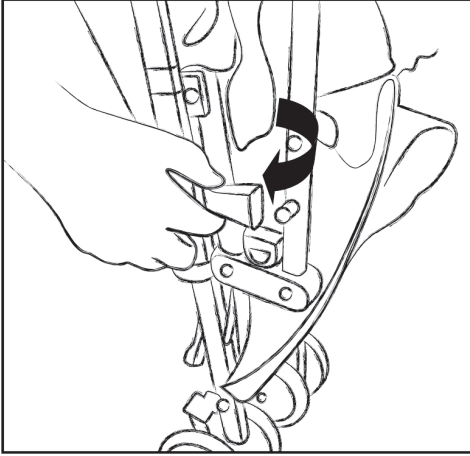

 
1. Begin opening the stroller by releasing the plastic safety catch situated on the side

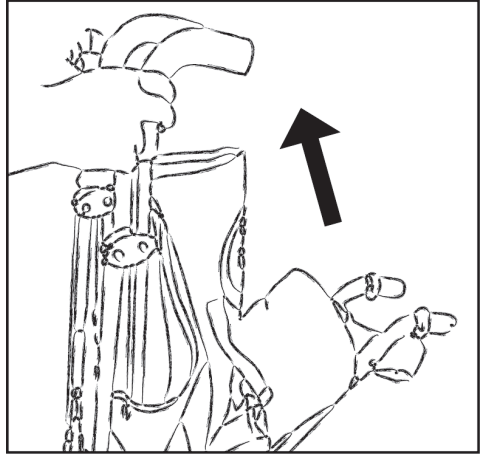

 2. Lift the handles upwards

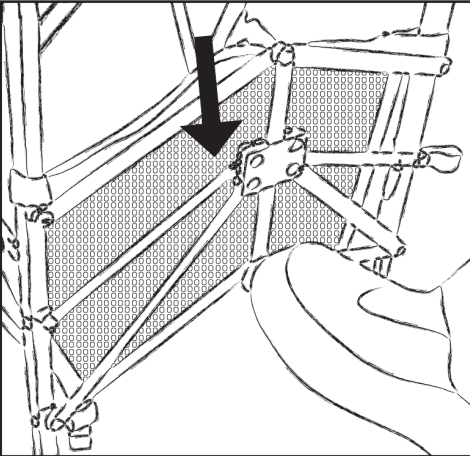

 
3. Secure the stroller by pushing the rear cross-bracing downwards

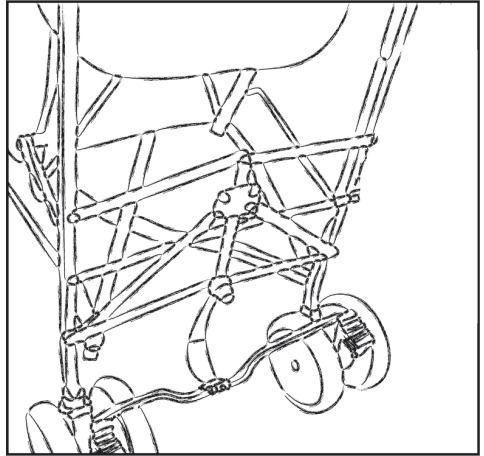


4. Ensure the cross-bracing is pressed all the way down before use

NOTE: Fingers or parts of the body could be injured when the stroller is being folded or unfolded. Please use caution when folding or unfolding the stroller.

 
Fold me down

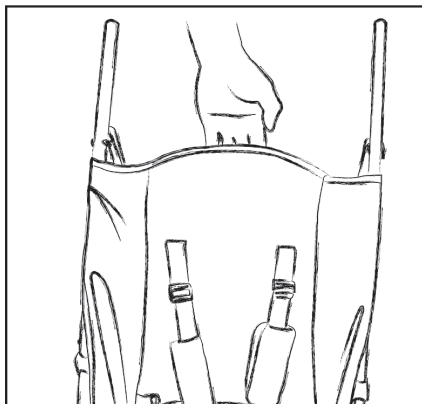

 
1. Before folding the stroller close the hood and lower the backrest

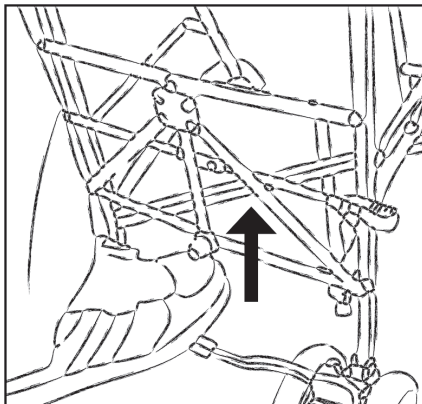

 
2. Unlock the frame by pushing the rear cross-bracing upwards

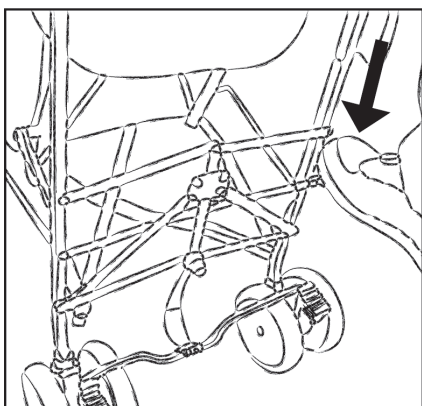

 3. Lower the secondary lock mechanism located to the right of the cross-bracing

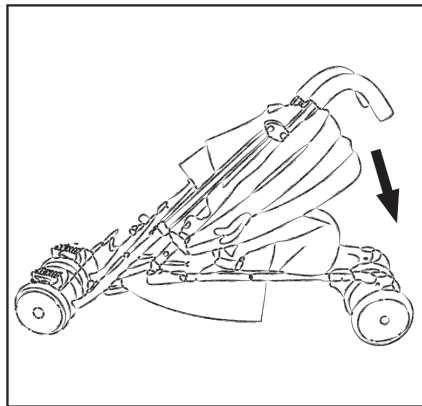


 4. Push the stroller handles forward until it is completely closed

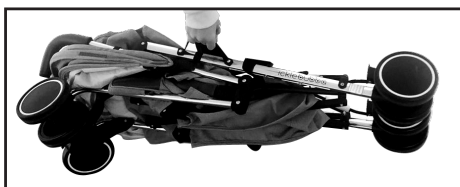


5. carry the stroller by the handle strap after it is correctly closed.

 Using the Brakes

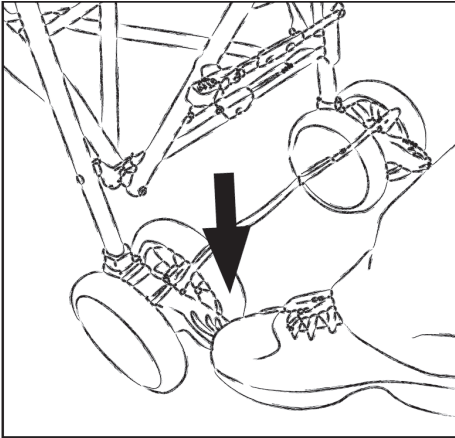


 1. To engage the brake, press down on either of the clips located over the back wheels. Push past the second click to fully engage the locking system and test to ensure the brakes are fully engaged

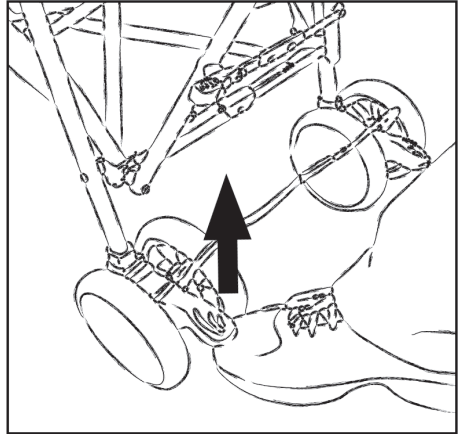


2. To release the brake, lift either of the clips upwards

 Inserting and Removing the Bumper Bar

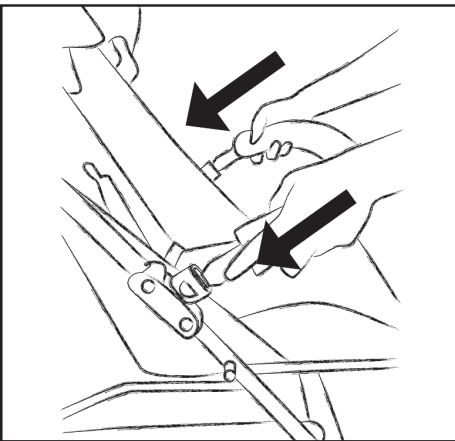

 
1. With the footbreak engaged, attach the bumper bar to the corresponding slots in the front of the stroller

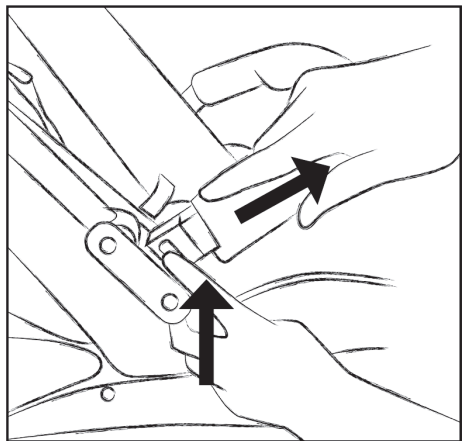


2. Remove the bumper bar by pressing the button lock underneath and pulling it outwards

Note: The Discovery bumper bar has 4 sections to allow it to bend and for gate opening function. Do not attempt to lift the stroller by the bumper bar.

 
Using the Front Wheels

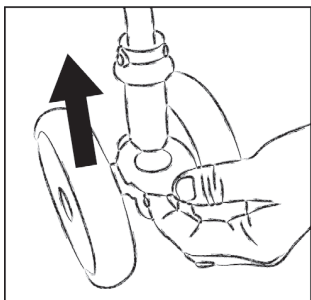

 1. To assemble, ensure that the wheel lock mechanism is located at the top of the wheel, then insert each wheel, lock lever first, into the front of the pram until you hear a 'click'

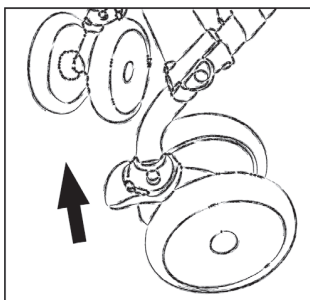

 
2. To lock the front wheels into a fixed position, raise each of the lock levers found on the front of the wheels.

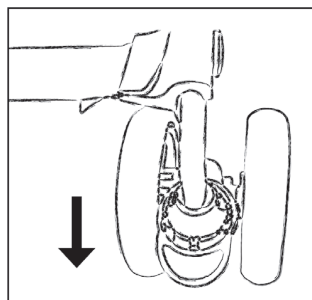


3. To unlock the wheels and allow for better manoeuvrability, lower each of the lock levers

WARNIG: THE WHEELS MUST ALWAYS BE BOTH FIXED OR BOTH SWIVEL FOR CORRECT USE OF THIS STROLLER.
ENGAGE FRONT WHEEL SWIVEL LOCKS WHEN TRAVELLING ON ROUGH OR UNEVEN SURFACES.

 
Using the Safety Harness

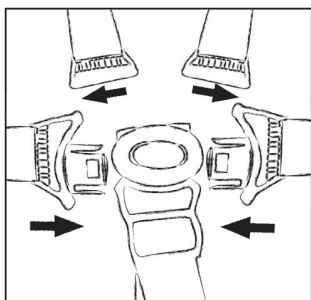


1. Attach each of the 4 harness straps into the central buckle.

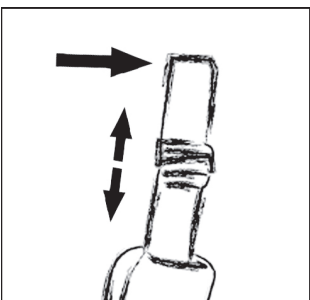 

 2. Adjust the length of each strap to ensure it fits nice and snug. Always give the harness a tug to ensure its secure.

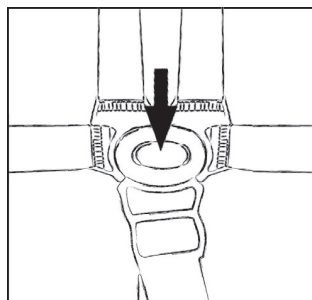


 3. To release press the button in the middle of the buckle.

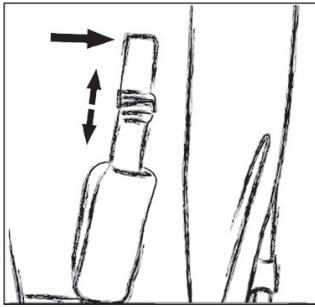


1. To lengthen the harness strap, move the shoulder pad to find the harness adjuster tab.
2. Hold the top of the shoulder harness, near the seat in one hand, and slide the adjuster with the other hand to lengthen or shorten

 
Backrest Adjustment

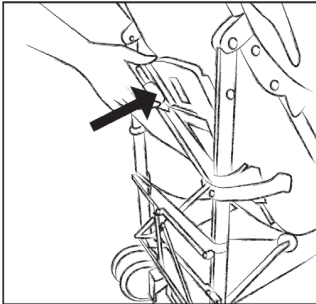

 1. Squeeze the adjustment clip located on the back of the seat

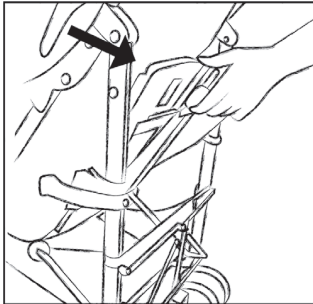


 2. When the seat is in the desired position, release the clip to lock into place

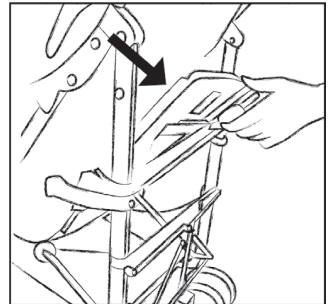


3. The stroller has 3 position options: upright, reclined and sleeping

 Leg rest Adjustment

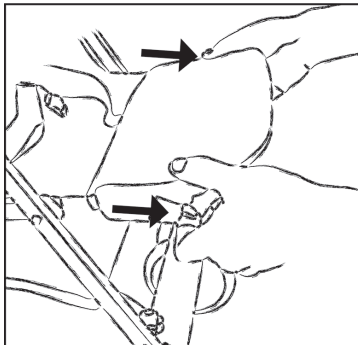

 1. Pull the two levers either side of the leg rest forwards

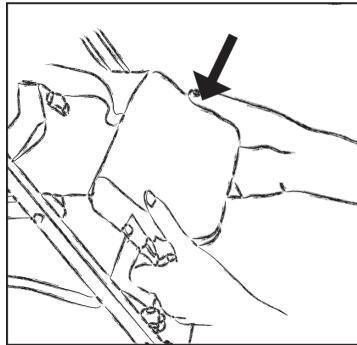

2. Push the leg rest downwards to lower, and pull upwards to raise

Wrist Tether Strap



1. Whenever a child is in the stroller and brakes are not engaged, the large loop should be around your wrist.

Care and Maintenance

Storage – Please store the stroller dry. Do not store the stroller in a damp or hot environment. Never leave in sunlight for prolonged periods as some fabrics may fade

Chassis – Always check the stroller for any wear or damage. Regularly lubricate all moving parts. Polish metal work with a clean dry cloth.

Wheels – Use a soft brush or cloth to clean

Seat Unit – Sponge clean with warm soapy water. Rinse with clean water to avoid staining. Dry naturally and away from direct heat and prolonged sunlight. Do not use strong detergents or bleach

Removable Canopy and Shopping basket – Handwash only up to 30degrees. Do not tumble dry. Wash items separately. Do not iron. Do not dry clean. Do not use strong detergents or bleach



Materials

Cover: 100% Polyester
Frame: Steel
Polyamide
PVC

Dimensions

Open: L: 67cm
H: 106cm
D: 51cm
Closed: L: 107cm
H: 34cm
D: 30cm

icklebubba

PRODUCT WARRANTY

Please retain your receipt and keep it with this User Guide for future reference. (Failure to produce proof of purchase could affect your warranty)

Don't forget to register online today at:
www.icklebubba.com/au/warranty

Register within 28 days of purchase for a FREE 4 Year Extended Warranty. To activate your FREE 4 year warranty, register online and keep your proof of purchase for any future claim. If you register within 28 days of purchase we will extend your standard warranty to 4 years from the date of purchase at no extra cost.

Warranty Term

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Stroller frame – 2 years from purchase date

Wheels & Fabric – 1 year from purchase date

What Your Warranty Does Not Cover

Damage caused by normal wear and tear, accidental damage, improper use and damage caused by negligence, misuse and by not following the maintenance instructions. The warranty is not valid in the following situations: In case of use or purpose other than described in the instruction manual. If the product is submitted for repair through a retailer/distributor that is not approved or authorised by us. If repairs have been carried out by third parties or a retailer who is not authorised or approved by us. If you have purchased your product over the internet from an unauthorised reseller.

Where Your Warranty Applies

Your warranty applies in the country of purchase only.
The warranty applies to the first owner and is non transferrable.

What to Do in Case of Defects

If you feel there is a problem with your Ickle Bubba product then please contact your original approved reseller.