


icklebubba

Moon

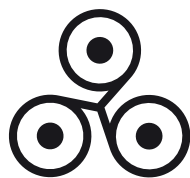

Contents

Page 03

Components

Page 04

Warnings

Page 05

Assembly: Parts & Opening
the Frame

Page 06

Assembly: Installing the Rear
Wheels

Page 07

Assembly: Installing the Front
Wheels & Using the Bumper Bar

Page 08

Assembly: Using the Harness &
Adjusting the Harness Height

Page 09

Assembly: Installing the Pram
Hood & Preparing the Seat Unit

Page 10

Assembly: Attaching Seat Unit to
Pram & Converting Pram Mode to
Seat Unit

Page 11

Operating the Brakes &
the Front Wheel Lock

Page 12

Operating the Seat Recline &
Folding the Frame

Page 13

Operating the Tether Strap &
Care and Maintenance

Page 14

Warranty Information

**IMPORTANT! READ THE INSTRUCTIONS CAREFULLY BEFORE USE AND
KEEP THEM FOR FUTURE REFERENCE.**

Components



- 1 Folding Button
- 2 Hood
- 3 Seat Recline
- 4 Seat Unit Toggle
- 5 Bumper Bar
- 6 Bumper Bar Release
- 7 5 Point Safety Harness
- 8 Seat/Pram Body Removal Button

- 9 Convertible Pram Body & Seat Unit
- 10 Shopping Basket
- 11 Built in Suspension
- 12 Rear Wheels
- 13 Brake
- 14 Seat/Pram Body Apron*
- 15 Raincover*
- 16 Wrist Strap*

WARNINGS!



IMPORTANT: Read these instructions carefully before use and keep them for future reference.

The Moon pushchair in pram mode is suitable for children from birth up to a maximum weight of 9kgs.

The Moon pushchair in seat mode is suitable for children from 6months up to a maximum weight of 20kgs.

WARNING: TO AVOID INJURY OR DEATH: ALWAYS APPLY THE BRAKES WHENEVER THE PRAM/STROLLER IS STATIONARY.

- **DO NOT LEAVE CHILDREN UNATTENDED.**
- **SECURE THE CHILD IN THE HARNESS AT ALL TIMES.**
- **DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS PRAM/STROLLER.**
- **MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE PRAM/STROLLER.**

WARNING: USE THIS HARNESS AT ALL TIMES.

WARNING: USE THIS STRAP TO STOP THE PRAM/STROLLER ROLLING AWAY.

This stroller has been designed for use on flat or gently slopped surfaces. Using this stroller on uneven or higher sloped surface may cause the stroller to become unstable and tip over.

WARNING Ensure that all locking devices are engaged before use.

WARNING Use the tether strap to prevent the stroller rolling away.

WARNING Never leave safety harness connected when not fitted to a child in the stroller, as this may create loops that cause a strangulation hazard.

WARNING Fingers or parts of the body could be injured when the stroller is being folded or unfolded. Please use caution when folding or unfolding the stroller.

WARNING To avoid injury ensure that your child is kept away when folding and unfolding the stroller.

WARNING Never leave a child in the pram/stroller when ascending or descending stairs or escalators. Use great care when using the stroller on other moving surfaces.

WARNING Do not allow children to stand on the seat or footrest.

WARNING Do not attempt to lift the stroller by the bumper bar.

WARNING Engage front wheel swivel locks when travelling on rough or uneven surfaces.

WARNING Regularly inspect all parts and locking devices, promptly replace worn out or broken parts.

WARNING Use only those accessories which are supplied by Ickle Bubba and approved for use with this stroller.

WARNING To prevent the risk of the stroller catching fire, do not park it near an open fire, heater or barbecue.

WARNING Do not run or jog with this stroller.


WARNING Shopping basket capacity should not be more than 3kg.

**THE MOON PRAM HAS BEEN APPROVED IN ACCORDANCE TO
AS/NZS 2088 : 2013**

Assembly - Parts



Assembly - Opening the Frame

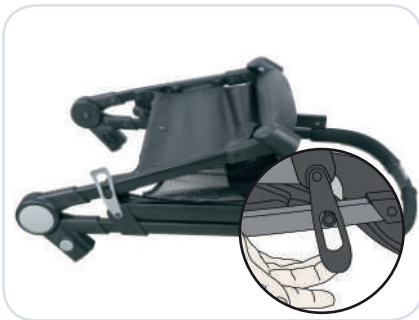

1. Unhook the latch, located on the right hand side of the frame




2. Lift the handlebar in the direction of the arrow until the frame locks into place.


Assembly - Installing the Rear Wheels



1. Insert the axle through each rear wheel, with the axle going through the break cluster on the wheel first.

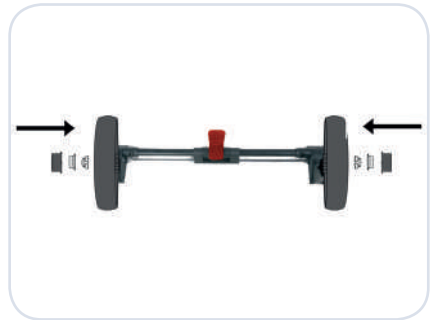

2. Fix the smallest locking cap at the end of the axle to lock the wheel on, then repeat with the hub cap. Repeat this for both wheels, ensuring both sides are securely locked in place.

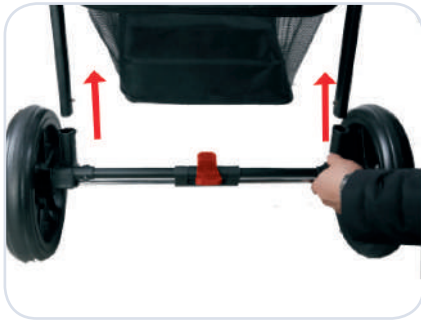

3. Once the wheels are fixed onto the axle, place the axle onto the frame of the chassis. Push it upwards until you hear a 'click' on both sides




4. To remove the rear wheel axle, push both the metal push pin clips inward, and slide downwards until the axle is clear of the chassis.

Assembly - Installing the Front Wheels



1. Push each front wheel onto the front wheel bayonet until you hear a 'click'. Ensure it is securely attached to the stroller before use.

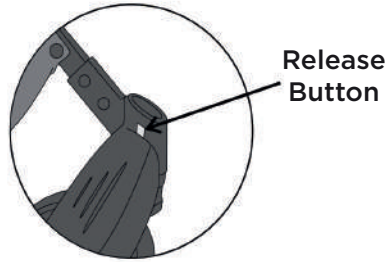


2. To remove the front wheels, locate the release button which can be found at the top of the wheel bayonet, on the inner side. Push the button in firmly and the wheel will disengage.

Assembly - Using the Bumper Bar




1. Align the bumper bar with the fitting on the frame and push inwards until you hear a 'click' on each side and see the safety release buttons are in the raised position.

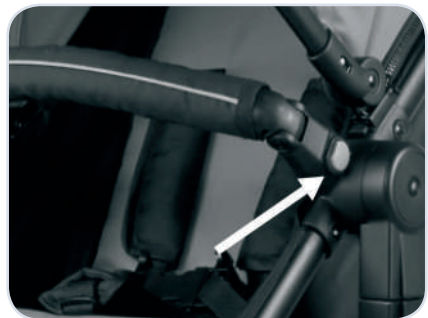

2. To remove, press each of the safety release buttons (indicated above) and pull the bumper bar outwards.


Assembly - Using the Harness

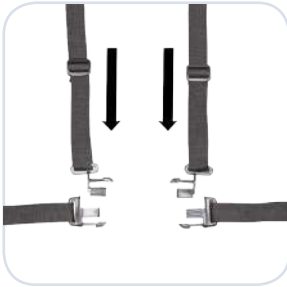

1. Insert both shoulder strap fasteners securely into the loops located on the side straps



2. Press the two side straps into the centre clasp until both sides are clicked in securely. Adjust each strap length as required.

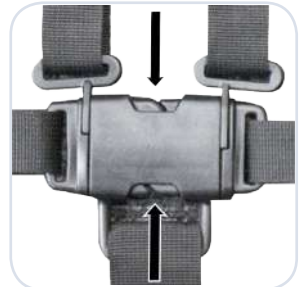

3. To undo the harness, press the buckles in the centre of the harness and pull apart.

Adjusting Harness Height



1. The harness can be set at three heights



2. To use the slot, and slots to undo the buckle and feed the shoulder straps in through the chosen loop.



3. Secure the harness.

Assembly - Installing the Pram Hood



1. Insert the metal frame of the hood into the corresponding receptors located on the pram frame.




2. Align the zip located on the rear side of the hood to the zip found on the pram/seat unit fabric and fasten.



3. To remove the hood, unfasten the zip, then press both of the hood connector buttons and pull the metal hood frame upwards.

Assembly - Preparing the Seat Unit

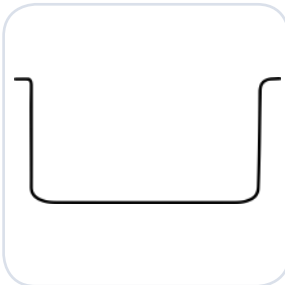

1. Firstly, locate the seat unit support.



2. Align either side of the support with the two holes situated on both sides of the inner seat frame. Ensure that the support is facing downwards and towards the lower end of the seat frame.



3. Push the support into the holes and secure in place with the two push clips located on the seat unit fabric.

Assembly - Attaching Seat Unit to Pram



1. Align the seat unit adapters with the corresponding holders on the pram frame



2. Push the seat unit downwards until both sides 'Click'. Ensure that the seat is securely fastened before use.



3. To remove the seat unit, press the release buttons on both sides of the seat frame and lift the seat upwards.

Assembly - Converting Pram to Seat



1. To use the seat unit in pram mode, disconnect the two clips located at the bottom of the seat unit, and loosen the toggle at the top. Push the fabric downwards from the inside to ensure it lies flat.



2. To convert pram body to seat unit, connect the two clips located at the bottom of the pram body/seat unit



3. Tighten the toggle located on the top of the pram body/seat unit. Ensure that all fabrics and buckles are secure before use.

Operating the Brakes



1. To engage the brake, apply a light downward pressure to the brake lever. Ensure that the brakes have been applied correctly and that the stroller will not move.



2. To release the brakes, gently lift up the brake lever.

Operating the Front Wheel Lock



1. Pull the lever located at the rear of the front wheel inwards towards the pram to engage the front wheel lock.



2. To release the lock, pull the lever outwards. Note that each wheel will require the lever to be pulled in a different direction - inwards & outwards, and not left or right.

Operating the Seat Recline



1. To recline the seat, lift the handle located at the top of the seat unit.



2. The seat has 3 positions - Fully reclined, mid recline and upright.



3. Please note that the fully upright position should only be used for a child over 6 months old.

NOTE: When using from birth please make sure the pushchair is in the pram mode

Folding the Frame



1. With the seat removed, slide the lock with your thumb, while squeezing the folding button located on the pram handle and push downwards.



2. Once the stroller begins to fold, release the folding button and allow to fully fold.



3. Secure the stroller in the folded position by ensuring the latch has fastened.

Tether Strap



1. Whenever a child is in the stroller and brakes are not engaged, the large loop should be around your wrist.

Care and Maintenance

To clean the fabrics, please refer to the washing label which is located on the rear side of the stroller.

Clean periodically the fabric, plastic and metal parts with a damp cloth. Then dry with a soft and dry cloth to prevent rust from the metal parts.

MAINTENANCE

- Apply dry silicone oil on any moving parts of the stroller when needed.
- Check your stroller regularly. If any parts (like bolts, screws, wheels fabric pieces or stitching) are found to be loose, broken or damaged, always contact your retailer to arrange a repair.
- Where damage or dysfunction occurs, stop using the stroller.
- Do not leave the stroller in direct sunlight for prolonged periods of time to avoid colour fade.
- Check caster bolts and wheel axles periodically and replace any damaged parts immediately.

icklebubba

PRODUCT WARRANTY

Please retain your receipt and keep it with this User Guide for future reference. (Failure to produce proof of purchase could affect your warranty)

Don't forget to register online today at:
www.icklebubba.com/au/warranty

Register within 28 days of purchase for a FREE 4 Year Extended Warranty. To activate your FREE 4 year warranty, register online and keep your proof of purchase for any future claim. If you register within 28 days of purchase we will extend your standard warranty to 4 years from the date of purchase at no extra cost.

Warranty Term

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Stroller frame – 2 years from purchase date

Wheels & Fabric – 1 year from purchase date

What Your Warranty Does Not Cover

Damage caused by normal wear and tear, accidental damage, improper use and damage caused by negligence, misuse and by not following the maintenance instructions. The warranty is not valid in the following situations: In case of use or purpose other than described in the instruction manual. If the product is submitted for repair through a retailer/distributor that is not approved or authorised by us. If repairs have been carried out by third parties or a retailer who is not authorised or approved by us. If you have purchased your product over the internet from an unauthorised reseller.

Where Your Warranty Applies

Your warranty applies in the country of purchase only.
The warranty applies to the first owner and is non transferrable.

What to Do in Case of Defects

If you feel there is a problem with your Ickle Bubba product then please contact your original approved reseller.