




## POWER



9 V / 12 V  
100 mA minimum


## PLACEMENT

Shimmer sounds best at the end of the signal chain.

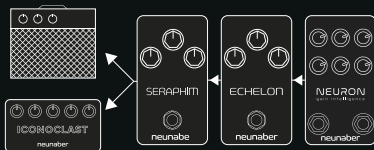

## EFFECTS LOOP

When using amp's drive channel.

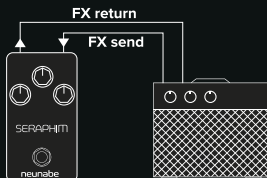


## SETUP CONTROLS

Hold Engage switch while turning knob.

### Bypass



### Effect Select

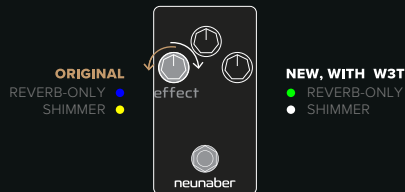

Complete User Guide at  
[neunaber.net/pages/user-guides](https://neunaber.net/pages/user-guides)