

SafeLogic TopLit Changing the Battery



Step 1:
Grasp the Chrome Ring and turn counter-clockwise until it releases from EntryPad base



Step 2:
Lift the Chrome Ring off the EntryPad to expose the battery compartment – bottom right of EntryPad



Step 3:
Push the battery from the left side of the compartment and slide out.



Step 4:
Remove the battery from the compartment and unclip the battery terminals.



Step 5:
Snap on a new battery. We recommend either Duracell or Energizer standard alkaline batteries



Step 6:
Place the ring back over the EntryPad by engaging the keys on the ring with the slots on the EntryPad base. Turn clockwise to lock in place.