



BOWPELLER®


***Bowpeller® - Model B3258, low shear, pump.
Mechanical seal changeout***

Complete Rotating Seal Assembly



Ensure stub shaft is bottomed completely on motor shaft and torqued.

Place the complete rotating seal assembly on stub shaft.

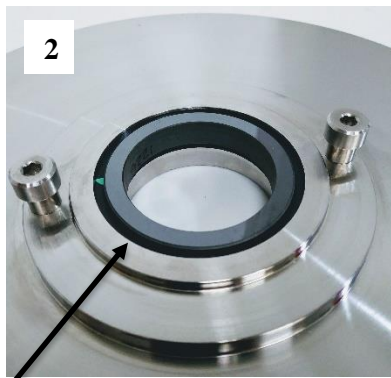

Stationary silicon carbide seal in Viton cup
(Press in / out by hand)

Align backplate pins with Grooves in Adapter

Press backplate down gently and lock in place by rotating backplate clockwise



Place O-ring on shaft and thread on impeller



8920 58th Place, Suite 100, Kenosha, WI 53144
(262)-909-7267 or (262)-818-1381