


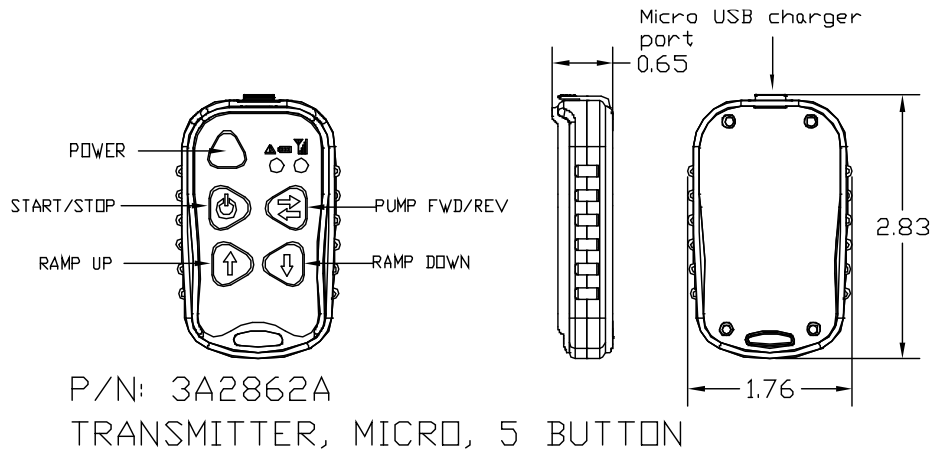

OPERATION

- To turn Transmitter On: Press and hold the POWER button for at least 2 seconds and release.
- The **green** LED will blink 2 times per second when the transmitter and receiver are communicating.
- With transmitter on, press Start/Stop button to operate pump.
- Press arrow buttons as required for desired functions.
- The transmitter's **red** LED blinks 1 time per second if the batteries are low and need to be replaced
- On USFIP Pumps, solid **red** LED indicates reverse rotation. (Reverse is not available on Bowpeller Pumps.)



RECHARGING

Plug the charging connector into the port at the top of the transmitter. Observe orientation and do not use force. A solid **red** LED indicates battery is charging. Once the internal battery is fully charged, the **red** LED will turn off and the **green** LED will turn on. A fully charged unit will take up to 3 hours to recharge. Use only approved chargers.

NOTE: It will take longer to charge if the transmitter is on during charging.

SYNCHRONIZING TRANSMITTER & RECEIVER

- Turn power off on transmitter
- Unplug power cord on VFD
- With the transmitter off, press and hold the POWER button for >10 seconds until both LEDs blink, then release. **Green** and **red** LEDs will blink together at this point.
- Plug in power cord.
- Wait for a few seconds until the **green** LED only begins to blink.
- Sync complete.



8920 58th Place, Suite 100, Kenosha, WI 53144
(262)-818-1381