


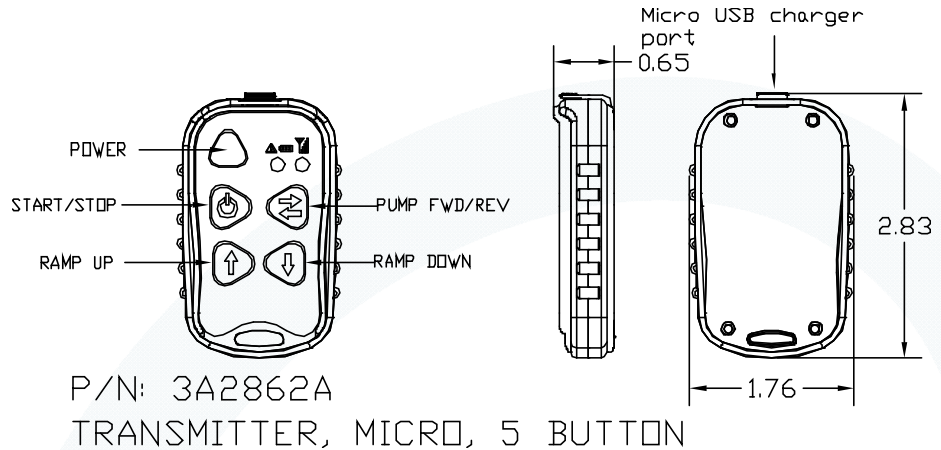

## OPERATION

- To turn Transmitter On: Press and hold the POWER button for at least 2 seconds and release.
- The **green** LED will blink 2 times per second when the transmitter and receiver are communicating.
- With transmitter on, press Start/Stop button to operate pump.
- Press arrow buttons as required for desired functions.
- The transmitter's **red** LED blinks 1 time per second if the batteries are low and need to be replaced
- On USFIP Pumps, solid **red** LED indicates reverse rotation. (Reverse is not available on Bowpeller Pumps.)



## RECHARGING

Plug the charging connector into the port at the top of the transmitter. Observe orientation and do not use force. A solid **red** LED indicates battery is charging. Once the internal battery is fully charged, the **red** LED will turn off and the **green** LED will turn on. A fully charged unit will take up to 3 hours to recharge. Use only approved chargers.

**NOTE:** It will take longer to charge if the transmitter is on during charging.

## SYNCHRONIZING TRANSMITTER & RECEIVER

- Turn power off on transmitter
- Unplug power cord on VFD
- With the transmitter off, press and hold the POWER button for >10 seconds until both LEDs blink, then release. **Green** and **red** LEDs will blink together at this point.
- Plug in power cord.
- Wait for a few seconds until the **green** LED only begins to blink.
- Sync complete