

02800000 - Cylinder Honing Set



Assembly

The parts listed are assembled in the order outlined.

The Common Shaft, Knurled Nut and Spring are the same with every hone.

The appropriate Collar is then positioned on the Shaft and the assembly is screwed firmly into the appropriate Adaptor.

To affix or remove the Stones; simply use the quick release clips that can be squeezed with your fingers.

1. Adjustable Foreign Car/Brake Cylinder Hone

Common Flexible Shaft
Knurled Nut
Spring
Small/Foreign Car Collar
Foreign Car Adaptor (Small)
Clips (2)
1 1/8" Stones (2)

2. Adjustable Brake Cylinder Hone

Common Flexible Shaft
Knurled Nut
Spring
Medium Collar
Regular Adaptor (3 Legs)
Clips (3)
1 1/8" Stones (3)

3. Adjustable Disc Brake Cylinder Hone

Common Flexible Shaft
Knurled Nut
Spring
Disc/Small Engine Collar (Large)
Disc/Small Engine Adaptor (Large)
Clips (3)
Stones 3/4" (3)

4. Adjustable Small Engine Cylinder Hone

Common Flexible Shaft
Knurled Nut
Spring
Disc/Small Engine Collar (Large)
Disc/Small Engine Adaptor (Large)
Clips (3)
2" Stones (3)