



08100000 - UNIVERSAL INNER BEARING PULLER

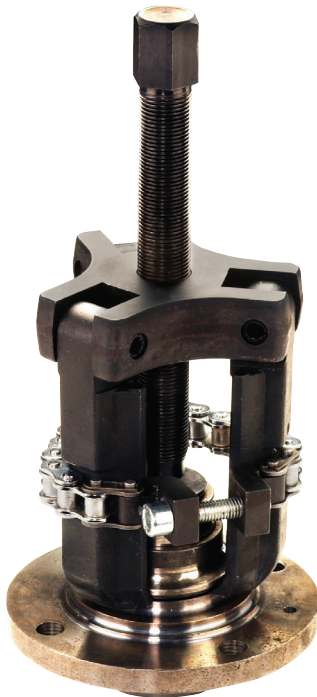

INNER BEARING
SLEEVE

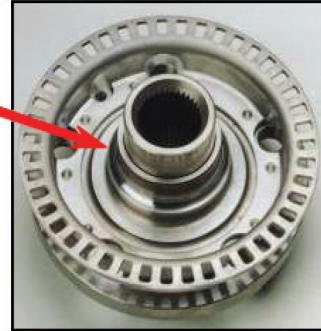

INSTRUCTIONS

1. Slacken the chain and place around the bearing.
2. Assemble the puller around the bearing sleeve as shown, lift the chain and tighten around the legs using key provided. With the chain pulling all three of the knife edge feet (1) into the joint below, the bearing starts to move.
3. Turn the force screw with the aid of a spanner. As movement starts and the gap increases tighten the chain again to bring the legs in fully (2) and then continue drawing off the bearing.

To see this and many other SP Tools in operation have a look at our online videos at www.sykes-pickavant.co.uk

NOTE: Due to the nature of the operation, jaws can become worn and chipped and it may be necessary to file or grind a working edge back on to the legs.

Replacement Leg Part Number: 08101500

