



TOOLS ENGINEERED FOR LIFE

AUTOMOTIVE FLAREMASTER

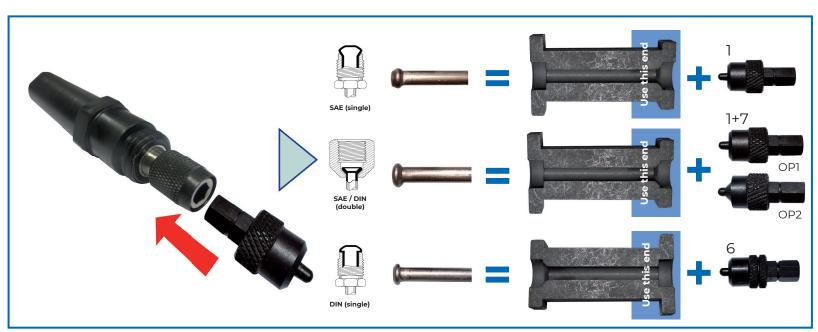

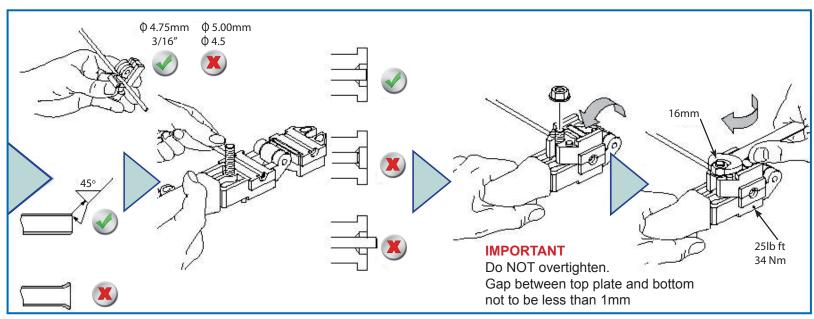








AUTOMOTIVE FLAREMASTER

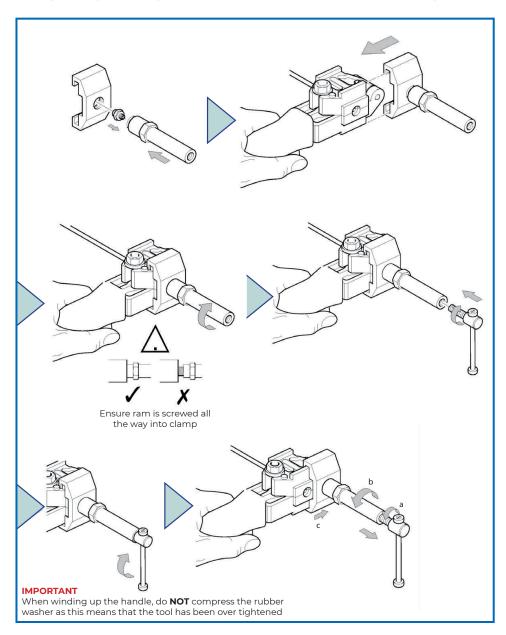

TROUBLESHOOTING

IMPORTANT: ENSURE GOOD QUALITY PIPE IS USED FOR BEST RESULTS

Problem	Possible Cause
Pipe is Slipping	1. Nut is not tightened correctly
	2. Inconsistent / undersized pipe diameter
Poor Quality Flare	1. Pipe not clean / deburred or cut correctly