

**BO-RF4**

**Freedom par 4led**

**(RF Remote)**



## Specifications

Voltage: AC110V-240V 50/60Hz

4pcs 12 Watt RGBWA+UV LED

Beam angle: 25°

Dimmable

Built-in battery pack (5000mAh)

Control mode:28 keys RF remote control

Battery lasting time: At least 15 hours in single color mode

Case made of high quality stainless steel

Dimensions per spotlight: 153\*145\*60mm Weigh: 1 kg

## LED Operation Menu:

1. Power In
2. Power Switch
3. Menu
4. Signal light
5. Battery indicator



## Battery indicator (Power distribution)

Red flashing 0-25%

Red does not flash 26-50%

Yellow 51-75%

Green 76-100%

<b>NO</b>	<b>Signal Light</b>	<b>Function</b>	<b>Description</b>
1	Red	SNAP mode	Press "MENU" three seconds to change mode
2	Red Flashing	SNAP, transmit signal, master mode	
3	Green	FADE mode	
4	Green Flashing	FADE, transmit signal, master mode	
5	Blue	Strobe mode	
6	Blue Flashing	Strobe, transmit signal, master mode	
7	Yellow	Sound active mode	
8	Yellow Flashing	Sound active, transmit signal, master mode	
9	Pink	Remote control, standby	
10	Pink Flashing	Remote control, received signal	
11	Cyan	master/slave, No signal	The master signal is generated by a device or DMX512 wireless controller
12	Cyan Flashing	master/slave, Signal receiving	

**Press "MENU" to change signal mode: Red > Green > Blue > Yellow > Pink > Cyan**

## DMX Channel Functions

Channel	10 Channel mode
CH1	0 Off, 1-255 Total Dimmer
CH2	0 Off, 1-255 Red Dimmer
CH3	0 Off, 1-255 Green Dimmer
CH4	0 Off, 1-255 Blue Dimmer
CH5	0 Off, 1-255 White Dimmer
CH6	0 Off, 1-255 Amber Dimmer
CH7	0 Off, 1-255 Purple Dimmer
CH8	0-255, Strobe
CH9	0-8 light off 9-50 red light 51-100 transition mode 101-150 mutation mode 151-200 gradient mode 201-220 Sound Control Mode 1 221-240 Sound Control Mode 2 241-255 Sound Control Mode 3
CH10	0-255 color selection and speed (combined with 9CH and 10CH)

## Infrared Remote Control Function



OFF: Turn off

ON: Turn on

color wheel: After pressing this button,  
press +/- to switch between different colors,  
total 32 colors;

SOUND: Sound active mode, Press “+/-” to

adjust sensitivity from 1 to 8

STROBE: Strobe mode, Press “+/-” to adjust speed from 1 to 8

SNAP: SNAP mode, Press “+/-” to adjust speed from 1 to 8

FADE: FADE mode, Press “+/-” to adjust speed from 1 to 8

AUTO: AUTO mode, Press “+/-” to adjust speed from 1 to 8