



BothLightingUSA.com



IR-4 Main Board Replacement Guide

Providing you with a reliable and hassle free experience.

All order come with a 2 year no questions asked warranty!


Official Lighting Provider of @DjRickWeb and @JoeBunn

Tools and Replacement Parts

- Magnetic Rod
- Small and Large Screw Driver




- Main Board

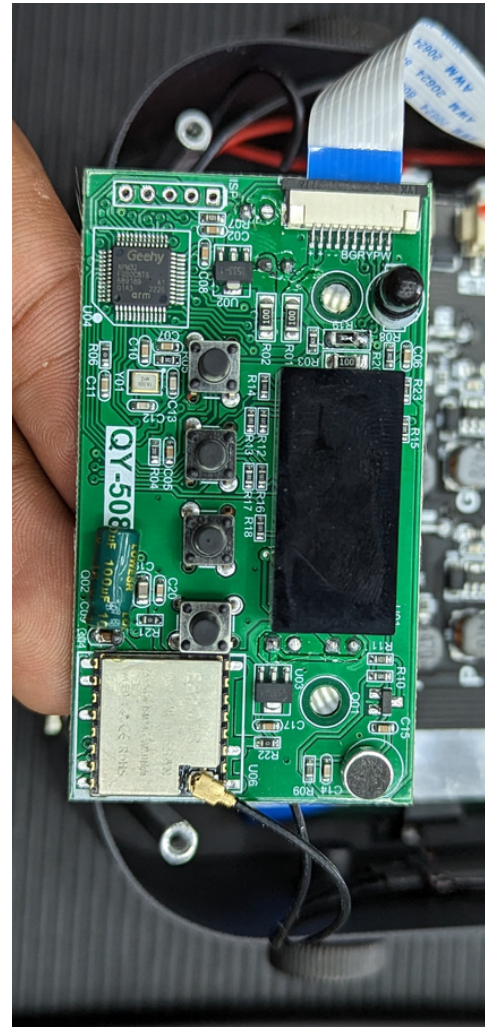


Step 1

- Locate the 4 screws on the top of your light (Refer to the image to your right) Unscrew them!

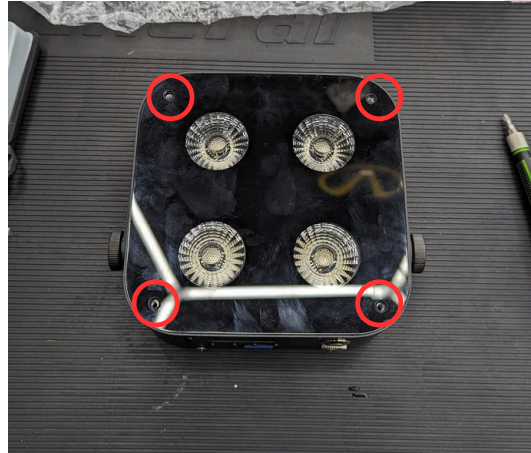


Step 2

- Locate the two screws holding the LED glass and unscrew them(Refer to the image to your right)

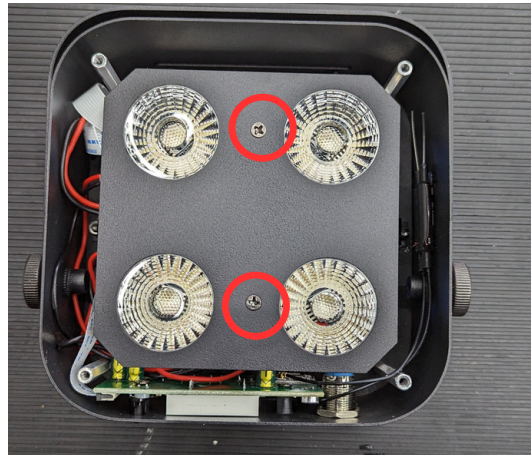


Step 3

- Locate the two screws holding the DMX Board and unscrew them(Refer to the image to your right)

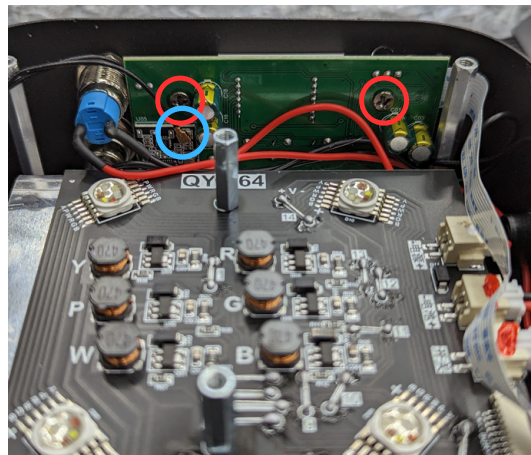

Step 4

- Locate the ribbon cable(Circled in red) and unplug it, as well as the antenna cables (circled in yellow and blue, located on the backside)
- replace with Main Board

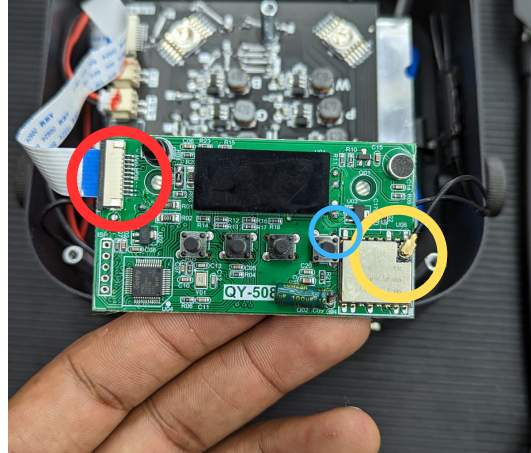

Step 5

- Back track the instructions to place light back together and test