



BothLightingUSA.com



S4/S6 Main Board Replacement Guide

Providing you with a reliable and hassle free experience.
All order come with a 2 year no questions asked warranty!
Official Lighting Provider of @DjRickWeb and @JoeBunn

Tools and Replacement Parts


- Magnetic Rod
- Small and Large Screw Driver



- S4/S6 Battery




- Mainboard

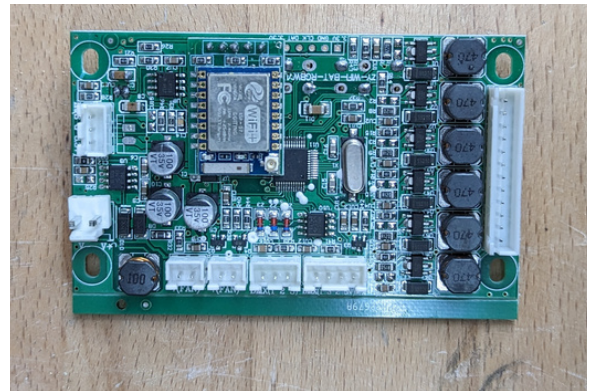


Step 1

- Locate the 4 screws on the bottom of your light (**Refer to the image to your right**)

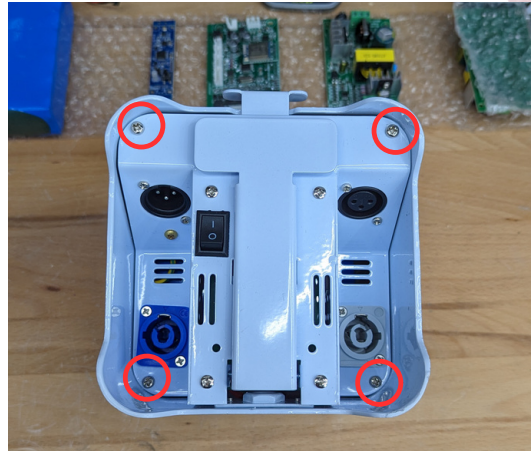


Step 2

- Start to lift your bottom at a 30-degree angle to avoid damaging the power board (**Refer to the image to your right**)
- Unscrew the 4 screws and place them in a safe area

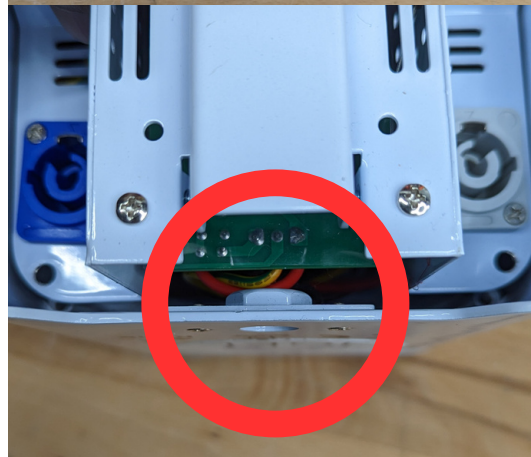


Step 3

- Disconnect your bad battery to avoid injuries (**Refer to the image to your right**)

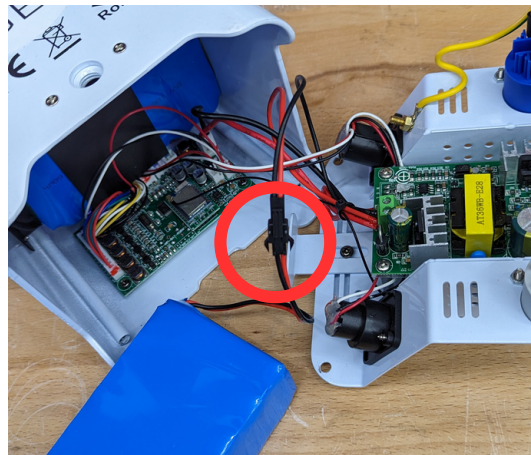


Step 4

- Locate the 2 screws on the bottom of your mainboard (**Refer to the image to your right**)
- Unscrew the 2 screws and place them in a safe area, **this is where the small screwdriver and the magnetic rod are your friend**

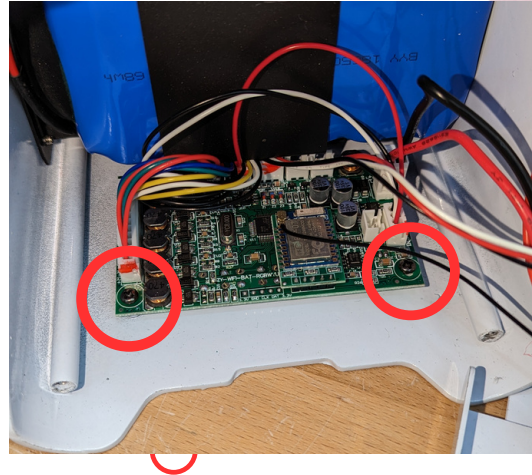

Step 5

- Tilt the top of the mainboard and pull out (**Refer to the image to your right**)
- Remove the colored connection from the main board (**Refer to the image to your right**)
- If you have some red adhesive holding your connection try to shake the cord in the port from left to right as you are pulling it out. If that doesn't work use a flat-head screwdriver to pop out of the connection. Be gentle when doing this as you could damage the main board.

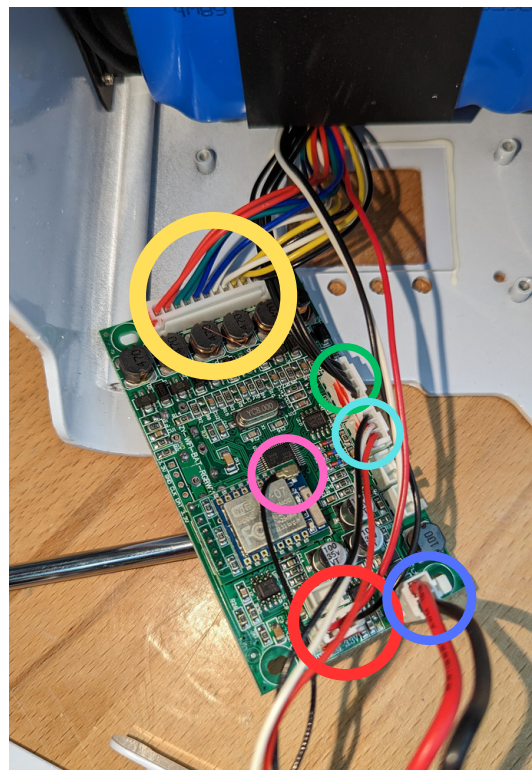

Step 6

- Replace your old main board with the new one
- plug-in connections and backtrack steps to place back together
- The only connections you can mix up is **light blue** and **red**
- The **Red** should be coming from the Dmx Board near the battery
- The **Light blue** should be coming from the power board, located on the base you took off.

