

Providing you with a reliable and hassle free experience.

All order come with a 2 year no questions asked warranty!

Official Lighting Provider of @DjRickWeb and @JoeBunn



Tools and Replacement Parts

- Magnetic Rod
- Small and Large Screw Driver
- Flat Head Screw Driver



Powerboard





Step 1

 Locate the 4 screws on the bottom of your light (Refer to the image to your right)


Step 2

- Start to lift your bottom at a 30degree angle to avoid damaging the power board (Refer to the image to your right)
- Unscrew the 4 screws and place them in a safe area

Step 3

 Disconnect your bad battery to avoid injuries (Refer to the image to your right)




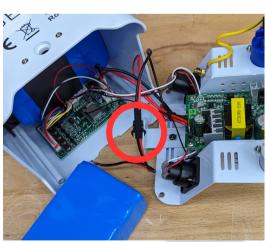



Step 4

- Flip over the bottom to locate the power board.
- Locate the 4 screws on the bottom of your mainboard (Refer to the image to your right)
- Unscrew the 4 screws and place them in a safe area, this is where the small screwdriver and the magnetic rod is your friend

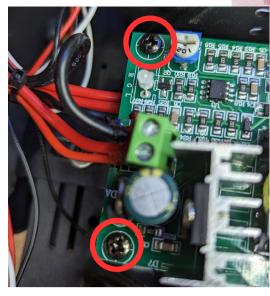



Step 5

 Use Flathead to slightly unscrew the screws to allow you to remove the cables connected to the powerboard (Refer to the image to your right and below)





BothLightingUSA.com



Step 6

- Back track steps to replace the powerboard
- use pictures above as reference for connections

