
2135Qi Air Impact Wrench Exploded Diagram

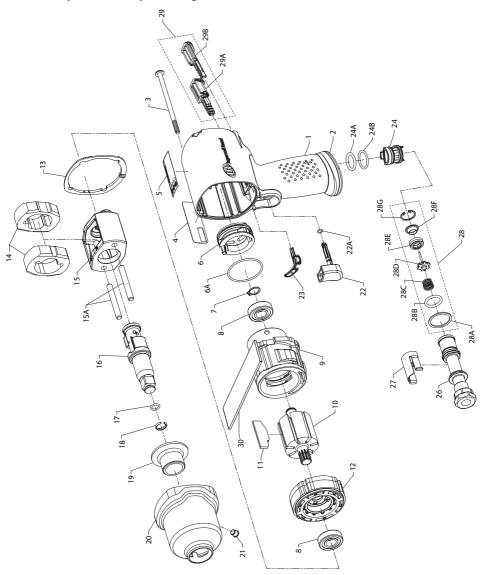

(Dwg. 45553591)





2135Qi Air Impact Wrench Parts List

Item	Part Description	Part Number	Item		Part Number
*	Housing Assy	2135Qi-A40		Trigger Assy	2135-D93B
1	Housing		22	Trigger	
2	Exhaust Deflector		22A	O-Ring, Trigger	
4	Information Label		† 23	Gasket	2131-283
5	Warning Label		*	Reverse Valve Assy	2131-A329
23	Gasket		24	Reverse Valve Assy	
24	Reverse Valve Assy		24A	O-Ring, Reverse Valve (top)	
29	Button Kit		24B	O-Ring, Reverse Valve (bottom)	
3	Screw, Hammer Case (4 required)	2135-638		Inlet Bushing Assy (includes 27, 28)	2135-D565A
4	Information Label	2135Qi-300	27	Inlet Clip	2131-57
	Warning Label	WARNING-2-99	28	Inlet Parts Kit	2135-K303
*	Power Regulator Assy	2135-D249A	28A	Washer	
6	Power Regulator		28B	O-Ring, Seal	
6A	O-Ring, Power Regulator		28C	Throttle Spring	
	Retaining Ring	2131-6	28D	Throttle Valve	
8	Ball Bearing (2 required)	2131-97	28E	Valve Seat	
9	Cylinder	2135-3	28F	Seat Support	
	Rotor	2135-53	28G	Retainer	
†11	Vane Pack (set of 7)	2135-42A-7	29	Button Kit	2135-K75
	End Plate	2131-11	29A	Forward Button	
†13	Hammer Case Gasket	2135-36	29B	Reverse Button	
*	Hammer Kit	2135-THK1	30	Exhaust Silencer	2131QT-311
13	Hammer Case Gasket		*	Tune-Up Kit	2135-TK2
14	Hammer (2)		6A	O-Ring, Power Regulator	
15A	Hammer Pin (2)		7	Retaining Ring	
16	Anvil Assy		8	Ball Bearing (2)	
*	Kit Grease		11	Vane Pack (set of 7)	
*	Hammer Frame Assy Kit	2135-K703	13	Hammer Case Gasket	
15	Hammer Frame		17	O-Ring	
15A	Hammer Pin (2)		18	Retaining Clip	
*	Kit Grease		22A	O-Ring, Trigger	
*	Anvil Assy	231B-A626	23	Gasket	
16	Anvil		24A	O-Ring, Reverse Valve (top)	
17	O-Ring or Socket Retainer Spring		24B	O-Ring, Reverse Valve (bottom)	
18	Socket Retainer		28	Inlet Parts Kit	
†17	O-Ring, Anvil	R1A-159	*	Inlet Clip Removal Tool	2131-322
†18	Socket Retainer	2135-425	+*	Air Care Kit (grease gun, grease, oil)	115-LBK1
19	Bushing, Hammer Case	2135-941	*	Grease (replacement tube for - LBK1)	115-4T
*	Hammer Case Assy	2135Qi-D727A	*	Air Tool Oil (4 oz. Bottle)	10Z4
19	Bushing, Hammer Case		*	Grease (1 lb can)	105-1LB
20	Hammer Case		*	Grease (8 lb can)	105-8LB
21	Grease Fitting		*	Grease Gun	R000A2-228
21	Grease Fitting	130SR-188			

^{*} Not illustrated.

Parts and Maintenance

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest Ingersoll Rand Office or Distributor.

Related Documentation

For additional information refer to:

Air Impact Wrench Product Safety Information Manual 04580916.

Air Impact Wrench Product Information Manual 45553518.

Manuals can be downloaded from www.irtools.com.



[†] To keep downtime to a minimum, it is desirable to have certain repair parts on hand. We recommend that you stock one (pair or set) of each part indicated by a (†) for every four tools in service.