

Wave Rider Water Proof Wireless Speaker User's Manual



NU-024

Introduction:

The Wave Rider Wireless Speaker can be used with tablet, notebook and other types of smartphone to stream music, and enjoy handsfree calling. In order to get the best results when using the device, please read this manual first before using.

 
Features

- Volume control
- Stunning sound
- Ultra portable design
- Great for parties, indoor and outdoor
- Hands free calling facility

Specifications

- Loudspeaker: 4Ω 5W
- Built-in Power: Li-ion 600mAh
- Dimensions: 93mm(W)*93mm(L)*42mm(H)
- SNR: 80± 3dB
- Wireless Working Frequency: 2.402-2.480 Ghz
- Wireless Transmission Distance: up to 10m
- Charging Time: 1-2 hours
- Weight: 180 g
- Speaker Dimension: 45mm
- Charging: 5 V, 500mA


Package Contents

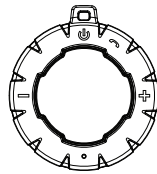

1. Wireless Speaker



 2. USB Charging cable



3. User manual



4. Carabiner

Important Safety Precautions

When using your Wave Rider Speaker, basic safety precautions should always be followed, including the following:

1. Keep this product and its charging cable away from excessive heat.
2. Do not operate this device with a damaged cable or after it has malfunctioned or has been damaged in any manner.
3. Do not disassemble your device.
4. To avoid electrical failure, use within tested rating of submerged in up to 1 metre of water for a 30 minute duration.

 
Charging Your Speaker

1. Connect one end of the included USB Charging Cable to the Charging Port on your speaker. Then plug the other end of the USB Charging Cable into a suitable USB port on your computer to recharge your speaker's internal rechargeable battery.


NOTE: The internal battery of your speaker takes approximately two hours to charge when completely drained.

2. When charging, a red LED light will illuminate to indicate that the unit is charging. The red light will turn off when your unit is fully charged.


A Quick Look at Your Device

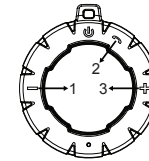

 - 1. Previous:** Press and hold to access the last track in playlist. Press to lower the volume.
- 2. Phone:** Press this button to activate the speaker phone function. When music is playing, press to play or pause a track.
- 3. Next:** Press and hold to access the next track in a playlist. Press to increase the volume.

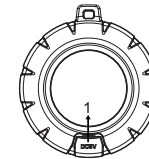

 - 1. Charging Port**
You can plug one end of the included USB Charging Cable into this jack, while plugging the other end into a USB port on your computer in order to charge your speaker's built in lithium battery.

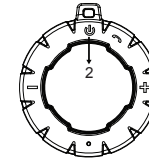

- 2. ON/OFF Switch**
Press and hold the "⏻" for power on
Press and hold the "⏻" again for power off

Understanding the LED Status Lights

When Charging Your Speaker


- Solid red LED = Charging
- No red LED = Charge Complete

When Pairing Your Speaker to a Bluetooth Audio Source

- Rapid blinking blue LED: Device not connected. (Ready to pair.)
- Solid blue LED: Device connected.

Pairing Bluetooth Devices to Your Speaker

In order to pair your Bluetooth audio device to your Wireless Speaker for the first time, follow the steps below:

- 1). Make sure your Bluetooth audio source is held within three meters of your speaker.
- 2). Press and hold the “” switch on your speaker to power on

The LED light will blink blue to indicate that you have entered pairing status.


 

- 3). Go to the Bluetooth Manager of your Bluetooth audio source. Please refer to the User’s Manual of your Bluetooth audio source for more information.

- 4). Search Bluetooth devices and select “NUSOUND (NU-024)”.

- 5). Once paired, the blue LED light will be solid and you can use your speaker to listen to audio from you Bluetooth sound source.

Using the Hands-Free Function

When an iPhone or other smartphone is connected to your speaker follow the steps below to take calls hands-free.

1. Press “” to pick up the call.
2. Press and hold “” for 2 sec to reject the call.
3. During a call: Press “” again to hang up the call.

Troubleshooting

Problem	Solution
The speaker doesn't connect to device	Speaker needs to be connected/re-paired to device
A tone is heard every few seconds	Speaker needs to be charged
Bluetooth connection is poor	Avoid operating the wireless speaker in areas of strong electromagnetic interference, such as near induction cookers, large power fans, motors etc. Move the speaker closer to Bluetooth device. Fully charge the speaker and try again.
The speaker will not power on	Speaker needs to be charged
The speaker doesn't control	Speaker needs to be in Bluetooth mode for full control
The speaker distorts at high volume	The devices' volume needs to be lowered

