

-1805-

EARNSHAW

London

INSTRUCTION
MANUAL



Vol.2.04 EN

-1805-

EARNSHAW

London

Congratulations
on your purchase of this finely
crafted Earnshaw Timepiece.

You are now the owner of a
timepiece that draws its roots from
the renowned English horologist,
clock and watch maker
Thomas Earnshaw
1749 - 1829

MECHANICAL AUTOMATIC 3 HANDS WITH SUN & MOON DISPLAY

This timepiece is equipped with a self-winding Mechanical Automatic movement.

It does not need a battery.

 
 
It is powered by the motions of the user's own wrist during the wear of the watch.

You may also choose to wind the watch manually.

For more details on operating this timepiece please refer to the enclosed booklet or visit :

IM.THOMAS-EARNSHAW.COM

A) DISPLAY

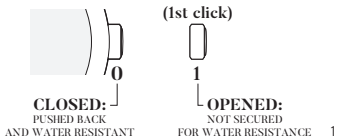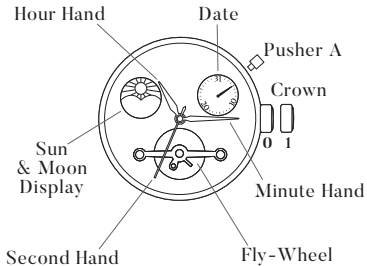



B) WINDING THE MAINSPRING

Automatic winding watch can be hand wound by turning the crown in it's normal crown position.

Wind 5-10 times and it will start to move naturally after shaking slightly.


C) TIME & SUN/MOON DISPLAY SETTING

  1. Pull out the crown to the position 1.
2. Turn the crown to set the hour and minute hands.
 - * Sun/Moon disc will also turn with hour and minute hands. ensure that correct am (sun) or pm (moon) time is set when setting the hour and minute hands.
3. Push the crown back to position 0.



D) DATE SETTING

 1. Press pusher A to set date.
 - * Each press of the pushers will advance the values by one increment.Please note that for this particular watch style Pusher A is flush to the case, therefore, when correcting Date indicator, it is advisable to use a blunt pointed instrument such as pencil /pen.)

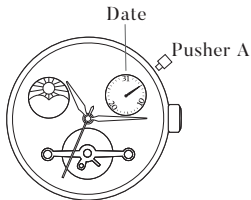

NOTE:

This watch **MUST** be worn for at least 8 (Eight) hours each day to ensure it is fully wound.

An automatic watch will only wind when the watch is on your wrist and your arm moves.

Winding the watch by the crown will put power on the spring but not enough to allow the watch to function fully.

If your watch stops overnight or loses time it means it is not being fully wound.

WATER RESISTANCE

The water resistance indicated on your timepiece serves only as a guide. Actual water resistance may vary depending on a number of important factors including temperature, water salinity, and actual use under water.

The water resistance of your timepiece may eventually be compromised over time with general wear and tear and the use of your watch under adverse conditions.

Always remember to employ the screw down crown (if available) to maintain the water resistance of your timepiece. Warranty may be voided if the screw down crown has not been properly employed.

Note that you should **NEVER** wear your watch in a jacuzzi, hot shower or steam room where steam may enter the case despite the watertight seals used to protect your watch.

The steam may cause condensation inside your watch, which may affect and damage the inner workings of your watch – which would also not be covered by the warranty.