
# JAPAN QUARTZ 3 HANDS MULTIFUNCTION (DATE AND 24H)

## A) DISPLAY

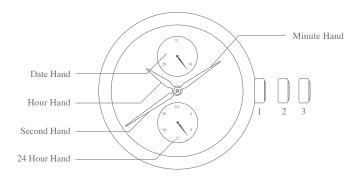

# EARNSHAW

#### B) SETTING THE TIME (HOUR, 24 HOUR AND MINUTE)

The hour, 24 hour and minute are set by the same operation. Pull the crown out to the position 3 to stop the second hand at 0 (12 o'clock). Turn the hour / minute hands in a clockwise direction to set the time. To ensure time is set accurately, first turn the minute hand 5 minutes ahead of desired time and then turn back (in an anti-clockwise) to the desired time. After setting the time, use a time signal to synchronize the watch by pushing crown to the position 1 to start the second hand going.

#### NOTE:

\* Make sure you have correctly set AM/PM before setting the time.

When the day changes over, it is AM (Day changes over between 0:00a.m. and 5:30a.m. or little later) check AM/PM by the 24 hour hand.

### C) SETTING THE DATE (BY QUICK OPERATION)

Pull the crown out to the position 2. Turn the crown anti-clockwise to set the date.

#### NOTE:

\* Do not set the date between the hours 9:00 p.m. and 0:30 a.m.. The date may not change correctly the next day.