
AUTOMATIC 3 HANDS WITH DAY, DATE, MONTH AND OPEN HEART

A) DISPLAY

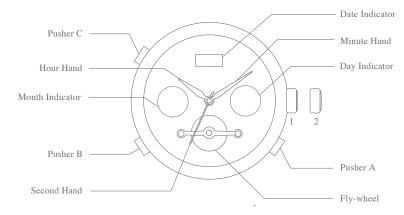

B) WINDING THE MAINSPRING

EARNSHAW

Automatic winding watch can be hand wound by turning the crown in it's normal crown position. Wind 15-20 times and it will start to move naturally after shaking slightly.

C) TIME SETTING

- 1. Pull the crown to **position 2.**
- 2. Turn the crown to set Hour and Minute Hands
- 3. Push the crown back to **position 1**.

D) DAY INDICATOR

This watch has a Day indicator at the right of the dial at 3 o'clock. Press Pusher A for adjusting to the Day indicator.

(**Please note** that for this particular watch style Pusher A is flush to the case, therefore, when correcting the Day indicator, it is advisable to use a blunt pointed instrument such as pencil/pen.)


E) MONTH INDICATOR

This watch has a Month indicator at the left of the dial at 9 o'clock. Press Pusher B for adjusting to the Month indicator.

(**Please note** that for this particular watch style Pusher B is flush to the case, therefore, when correcting the Month indicator, it is advisable to use a blunt pointed instrument such as pencil/pen.)

AUTOMATIC 3 HANDS WITH DAY, DATE, MONTH AND OPEN HEART

A) DISPLAY

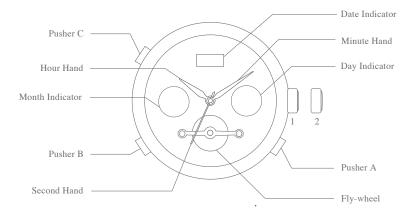

EARNSHAW

F) DATE INDICATOR

This watch also has a Date indicator at the top of the dial at 12 o'clock. Press **Pusher C** for adjusting to the Date indicator.

(Please note that for this particular watch style Pusher C is flush to the case, therefore, when correcting Date indicator, it is advisable to use a blunt pointed instrument such as pencil/pen.)

NOTE:

This watch MUST be worn for at least 8 (Eight) hours each day to ensure it is fully wound.

An automatic watch will only wind when the watch is on your wrist and your arm moves.

Winding the watch by the crown will put power on the spring but not enough to allow the watch to function fully.

If your watch stops overnight or loses time it means it is not being fully wound.