XX047 BATTERY REPLACEMENT INSTRUCTIONS

- REMOVE BACKSIDE SCREWS
- REMOVE BACK BY LIFTING STRAIGHT UP, TAKING CARE NOT TO LOSE LANYARD ATTACHMENT.
- REMOVE BATTERY AND REPLACE USING CR2032 LITHIUM BATTERY, POSITIVE SIDE UP.
- REPLACE BACK AND SECURE WITH SCREWS.
- RESET TIME AND CALENDAR FUNCTIONS (OVER).

FEATURES:

- 24-Hour Stopwatch
- Time-of-Day and Calendar
- Alarm Clock
- 12/24-Hour Time Option

STOPWATCH OPERATION

Press **A** until you get to the stopwatch display. If necessary, press **B**, stop and **C** – reset to 0.

START/STOP TIMING

B-Start, **B**-Stop. (Repeatedly press **B** for Time-In/Time-Out timing) **C**-Reset

SPLIT TIMING

B-Start, C-SplitC-Release (Repeatedly press C, C for more split times)B-Stop C, C-Reset

1-2 FAST FINISH

B-Start, **C-**Stop #1. **B-**Stop #2 (See record #1 time) **C-**Release (See record #2 time) **C-**Reset to 00

TIME/CALENDAR & ALARM DISPLAY

Press **A** until you get Time Display Hold **B** display Month, Date & Day Hold **C** see Alarm Time Hold **C** and Press **B** Alarm On/Off (Alarm and Chime alarms will toggle ON and OFF)

TIME/CALENDAR SETTING

Press **A** & hold 3 seconds – then press **A** once again to enter Set Mode. Press **B** to select Seconds, Minutes, Hour (A/P = 12-Hour. H = 24 Hour) Date, Month, Day Press **C** to change any of the above (Seconds only resets to 00) Hold **C** to change digits rapidly Press **A** to return to Time Display

ALARM SETTING

Press A & hold 3 seconds to enter Set Mode

Press **B** to select Minutes or Hours Press **C** to change Minutes or Hours Press **A** to return to Time Display

TO SWITCH FROM 12 TO 24 HOURS

in Normal Time Mode, press and hold down **C**, then press **A**. "A" or "P" will appear for AM/PM noting for 24 hour.

HOURLY CHIME SETTING

Press **A** until you get Time Display Hold **C** see Alarm Time and press **B** Chime is ON when bell appears above display. Chime is OFF when no bell appears. Alarm is ON when symbol appears. Alarm is OFF when no symbol appears.

ELECTRO LUMINESCENT LIGHT

Press **D** EL Light will remain on for 3 seconds. Hold **D** El Light will remain on. It will go off 3 seconds after you release the button.

BATTERY REPLACEMENT

For best results, use one CR2032 or equivalent 3V silver oxide or alkaline battery.

CAUTION – Battery Safety Information

- Non-rechargeable batteries are not to be recharged
- Rechargeable batteries must be removed before recharging
- Rechargeable batteries only to be recharged under adult supervision
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries
- Do not mix old and new batteries
- Exhausted batteries to be removed
- Do not dispose of battery in fire; battery may explode or leak
- Do not dispose of product in fire; battery may explode or leak