

SYMBOLS AND DEFINITIONS		
⚠ DANGER ⚠	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.	
⚠ WARNING ⚠	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.	
⚠ CAUTION ⚠	Indicates a hazardous situation which, if not avoided, could result in moderate injury.	

⚠ DANGER ⚠

- Do not submerge this fixture in water or other liquids.
- Do not use with extension cord near water or where water may accumulate.
- Keep light at least 16 feet from pools and spas. Keep plugs and receptacles dry.

⚠ WARNING ⚠

- Avoid electrical shock by turning off or disconnecting from power while moving or installing the unit.
- When using product, basic precautions should always be followed.
- Read and follow these instructions and observe all warnings.
- Carefully read and understand the information given in this guide before using this light. Failure to do so could lead to electrical shock, fire or other injuries which could be hazardous or even fatal.

⚠ CAUTION ⚠

- Do not use in areas near a gas source. This light is not for use in potentially explosive environments. This is not a vapor proof light.
- This light is not a toy and is not suitable for use by children.
- Protect your eyes. Do not look directly at the LED lights for extended periods of time.
- Do not remove the lens protecting the LED. It is not possible to change the LED light source.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- Disassembling or modifying this unit will void the warranty.

SYMBOLS AND DEFINITIONS		
⚠ DANGER ⚠	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.	
⚠ WARNING ⚠	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.	
⚠ CAUTION ⚠	Indicates a hazardous situation which, if not avoided, could result in moderate injury.	

⚠ DANGER ⚠

- Do not submerge this fixture in water or other liquids.
- Do not use with extension cord near water or where water may accumulate.
- Keep light at least 16 feet from pools and spas. Keep plugs and receptacles dry.

⚠ WARNING ⚠

- Avoid electrical shock by turning off or disconnecting from power while moving or installing the unit.
- When using product, basic precautions should always be followed.
- Read and follow these instructions and observe all warnings.
- Carefully read and understand the information given in this guide before using this light. Failure to do so could lead to electrical shock, fire or other injuries which could be hazardous or even fatal.

⚠ CAUTION ⚠

- Do not use in areas near a gas source. This light is not for use in potentially explosive environments. This is not a vapor proof light.
- This light is not a toy and is not suitable for use by children.
- Protect your eyes. Do not look directly at the LED lights for extended periods of time.
- Do not remove the lens protecting the LED. It is not possible to change the LED light source.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- Disassembling or modifying this unit will void the warranty.

GT-WL-30KTP 30,000 LM Tripod Work Light




GT-LITE LIMITED WARRANTY: This product is guaranteed against failure due to factory defects in materials or workmanship for one (1) year from the date of purchase. This warranty is non-transferable and applies only to the original owner. Proof of purchase required for repair or replacement. Keep the product receipt with this User Guide and save in a dry location. The warranty does not cover normal wear of parts or damage resulting from any misuse of the product. Misuse of the product includes but is not limited to: using in extreme weather conditions, opening the housing of the product, or alterations to the product.

GT-WL-30KTP 30,000 LM Tripod Work Light



GT-LITE LIMITED WARRANTY: This product is guaranteed against failure due to factory defects in materials or workmanship for one (1) year from the date of purchase. This warranty is non-transferable and applies only to the original owner. Proof of purchase required for repair or replacement. Keep the product receipt with this User Guide and save in a dry location. The warranty does not cover normal wear of parts or damage resulting from any misuse of the product. Misuse of the product includes but is not limited to: using in extreme weather conditions, opening the housing of the product, or alterations to the product.

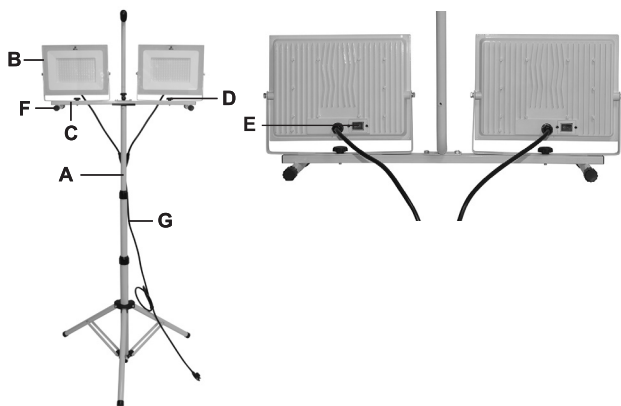

WORK LIGHT CONSTRUCTION:


- A. Adjustable Tripod
- B. LED Work Lights (2)
- C. H-Base
- D. Star Knobs (3)
- E. On/Off button
- F. Textured Rubber Feet
- G. Tangle Free Grounded Power Cord

ASSEMBLY

1. Attach each LED Work Light (B) onto the H-Base (C) using the provided star knobs (D).
2. Attach the H-Base (C) to the Adjustable Tripod (A) using the provided star knobs (D).

TO USE:

1. Place the H-Stand (C) or the Adjustable Tripod (A) on a stable surface. Ensure all feet secured on the ground.
2. Slightly loosen the star knobs (D) on bottom and sides of the lights
3. Tilt each LED Work Light (B) up, down, left, and right to the desired angle.

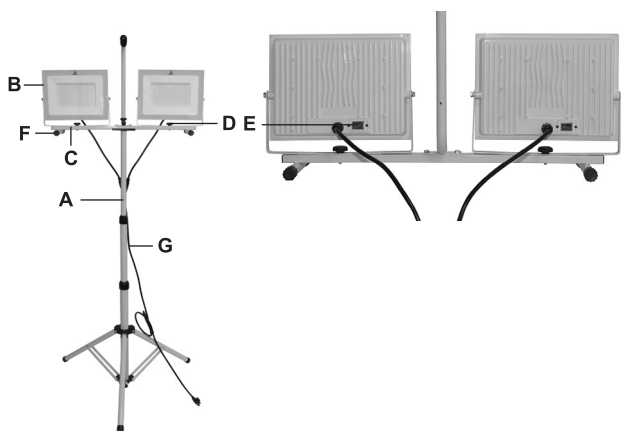

WORK LIGHT CONSTRUCTION:

- A. Adjustable Tripod
- B. LED Work Lights (2)
- C. H-Base
- D. Star Knobs (3)
- E. On/Off button
- F. Textured Rubber Feet
- G. Tangle Free Grounded Power Cord

ASSEMBLY

1. Attach each LED Work Light (B) onto the H-Base (C) using the provided star knobs (D).
2. Attach the H-Base (C) to the Adjustable Tripod (A) using the provided star knobs (D).

TO USE:

1. Place the H-Stand (C) or the Adjustable Tripod (A) on a stable surface. Ensure all feet secured on the ground.
2. Slightly loosen the star knobs (D) on bottom and sides of the lights
3. Tilt each LED Work Light (B) up, down, left, and right to the desired angle.

4. Tighten Star Knobs (D)
5. Lower or raise the adjustable tripod (A) to the desired height.
6. Plug the Tangle Free Grounded Power Cord (G) into an outlet.
7. To turn light on, switch On/Off (E) to On position (-).
8. To turn light off, switch On/Off (E) to On position (o).
9. Store in a cool dry place when not in use.

Problem	Cause	Solution
LEDs are not lighting up	No power or faulty connection.	Check that all connections are secure, and power is on.
Questions, Missing Parts		Customer Service: 1-800-865-6799

CARE AND CLEANING

Your fixture is made from quality materials that will last an extended period of time with proper care - including periodically cleaning the surface of the fixture.

1. Use a mild, non-abrasive cleaner. Do not use any solvents or harsh cleaning agents.
2. Use a soft, non-abrasive cloth.
3. Lightly spray cleaner onto the cloth. Do not spray liquid cleaners directly onto LEDs, power cord, or any part of this product.
4. Lightly wipe down fixture with damp cloth. Allow product to dry completely before restoring power and using LED lights.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's warranty and the authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications. However, there is no guarantee that interference will or will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures: 1) Reorient or relocate the receiving antenna. 2) Increase the separation between the equipment and receiver. 3) Connect the equipment into an outlet on a different circuit from the receiver. 4) Consult the dealer or an experienced radio/TV technician for help.

4. Tighten Star Knobs (D)
5. Lower or raise the adjustable tripod (A) to the desired height.
6. Plug the Tangle Free Grounded Power Cord (G) into an outlet.
7. To turn light on, switch On/Off (E) to On position (-).
8. To turn light off, switch On/Off (E) to On position (o).
9. Store in a cool dry place when not in use.

Problem	Cause	Solution
LEDs are not lighting up	No power or faulty connection.	Check that all connections are secure, and power is on.
Questions, Missing Parts		Customer Service: 1-800-865-6799

CARE AND CLEANING

Your fixture is made from quality materials that will last an extended period of time with proper care - including periodically cleaning the surface of the fixture.

1. Use a mild, non-abrasive cleaner. Do not use any solvents or harsh cleaning agents.
2. Use a soft, non-abrasive cloth.
3. Lightly spray cleaner onto the cloth. Do not spray liquid cleaners directly onto LEDs, power cord, or any part of this product.
4. Lightly wipe down fixture with damp cloth. Allow product to dry completely before restoring power and using LED lights.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's warranty and the authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications. However, there is no guarantee that interference will or will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures: 1) Reorient or relocate the receiving antenna. 2) Increase the separation between the equipment and receiver. 3) Connect the equipment into an outlet on a different circuit from the receiver. 4) Consult the dealer or an experienced radio/TV technician for help.