 
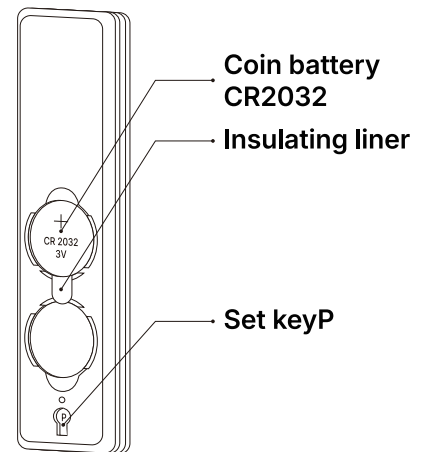 
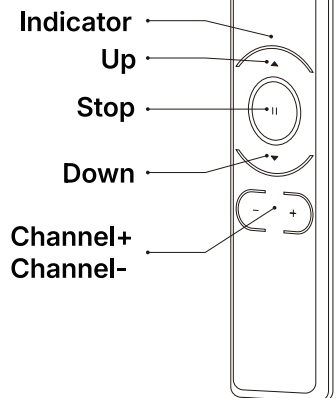 


RE101 Emitter User Manual


Please read this Manual carefully before using the product and keep it properly for future reference.

01 Product description

Package containing:
Emitter*1, Bracket*1, User Manual*1
Screw*2, Nut*2

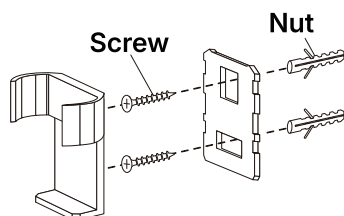


Attention: Remove the battery insulation before use

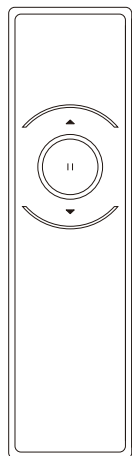


RE101

Single-Channel emitter

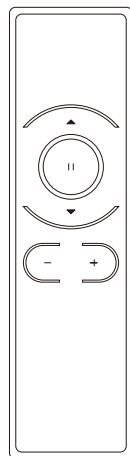

RE102 RE106

2/6 Channel emitter

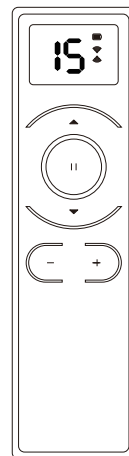

RE115

15 Channel emitter

02 Technical parameters

Product name: Hand-held emitter

Product model: RE101 RE102
RE106 RE115

Product size: 122*33*11.5mm

Input voltage: 3.0 V

Transmission distance:
Exterior conditions>150m
Interior conditions>35m

Operating frequency: 433.92MHz

Working temperature: -10%~55%

Working humidity:
10%~90%RH, no condensing

03 Features

1.RE115: The displayed number is the chosen channel

2.RE102/RE106: The indicator light is the chosen channel

3.RE115: LCD Version channel lock operation (example: if the emitter only needs 4 channels, then lock the 4th channel, the emitter will be able to use channels from 0 to 4): Switch the screen number to 4th channel, press + and - simultaneously to let the number on the screen flash 3 times, then release to finish the setting. Repeating this operation is also for canceling the channel lock function.

4.RE102/RE106: All indicator lights on means group control channel.

5.RE115: 0 channel is group control channel.

6.Group control channel: Take RE106 as an example, group control can control all the motors in 1, 2, 3, 4, 5, 6 channels.

04 Operation step

Keystroke	Time	Description
▲ + ▼	Long press 2 seconds	Feature settings
▲ + ▼	Once	Pairing
⏸	Long press 2 seconds	Switch direction/ setting confirmation
▲ + ⏸	Long press 2 seconds	Speed regulation+
▼ + ⏸	Long press 2 seconds	Speed regulation-

05 Warnings and precautions

1.For fear of shortening the life of the emitter, please avoid dampness and bumps in use. If the emitter range shortens or the emitter becomes insensitive, please replace the old battery with battery of the same model and recycle the replaced battery.

2.Please do not use battery of different types for fear of explosion.

06 The warranty type

Type	Content	Warranty time
The whole machine	Remote control	2 years