


Jewenwils

Outdoor Remote Control Countdown Timer

SKU: HODT12B
[Instruction Manual]

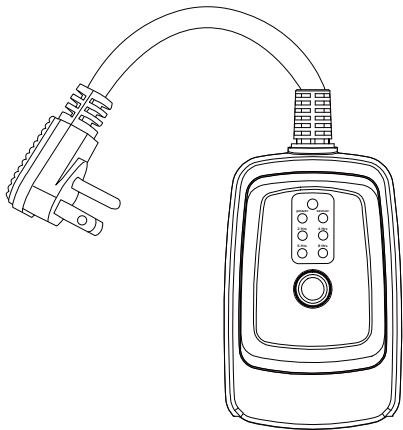


Please pay attention to the warning signs
Read the instructions with caution before operating
and keep it properly

CAUTION

- Suitable for use with outdoor appliances.
- For use ONLY with a three conductor GFCI protected outlet.
- Raintight when mounted vertically with receptacles facing downward.
- Do not immerse in water.
- DO NOT EXCEED RATED CAPACITY.
- The device must be mounted in a vertical position with the receptacle facing down ward and with the receptacle at least 2 FT above the ground level.
- Cord-connected Operating Control.
- Temperature limits of the SWITCH HEAD: -40-40°C.

Installation

1. Mount or hang the RECEIVER on the wall near a GFCI protected outlet (125V 60Hz) which the power supply cord of the RECEIVER will plug into.
2. Plug the cord of the device you wish to control remotely at the bottom of the RECEIVER.

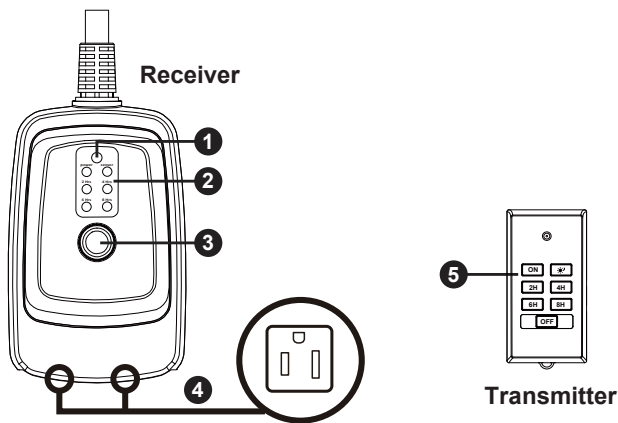

1. Sensor (☀️):
Sensor will turn receiver on at dusk and off at dawn.
2. Operating Mode:
Timer will turn ON, 2, 4, 6, or 8 hours after dusk.
3. Select button:
To select the function and repeatedly.
Power ON → Sensor (☀️) → 2H → 4H → 6H → 8H → OFF → ON
4. Outlets:
Plug the lights or devices to be controlled by the timer into one of the outlets.
5. Transmitter

Operating Instructions

Receiver & Transmitter operation modes:

ON: Power is ON to attached devices

Sensor (☀️/Dusk - Dawn): power will turn on at dusk and remain on until dawn

2 Hrs: Power will turn on at dusk and remain on for 2 hours

4 Hrs: Power will turn on at dusk and remain on for 4 hours

6 Hrs: Power will turn on at dusk and remain on for 6 hours

8 Hrs: Power will turn on at dusk and remain on for 8 hours

OFF: Power is OFF to attached devices

* Note for Transmitter: Control electrical outlet up to a distance of 100 feet.

* Note The timer has daily repeat after setting, in case of power failure, it will stop operating when the power goes out. Once power is restored, reset the desired operating mode as the operating instructions.

Helpful Tips

- When set to “ON”, the timer will provide continual power to attached devices until the timer is switched to “OFF”, or to any of the other operating modes.

- In the sensor (☀️ dusk-to-dawn) mode, temporary light sources like headlights, porch lights and other external light sources will not interfere with the photocell function unless the external light source is on for more than 15 minutes. In that case, the timer will shut off until darkness is restored. The improvement avoids the flickering.
- Once programming activates at dusk in the 2hr, 4hr, 6hr, or 8hr mode, the program cycle will complete before the timer resets. Headlights, porch lights, street lamps and other external lighting sources will not interfere with the active timer program.


Battery Handling and Usage

- Install the battery observing the positive (+) side up as indicated inside the battery compartment.
- Never throw batteries into a fire. Do not expose batteries to fire or other heat sources.
- Battery contains mercury. Do not put in trash. Recycle or manage as hazardous waste.

Battery Replacement

- Remove the battery compartment cover away from the remote (see diagram below)
- Remove the old battery and place a new Type 3V (CR2032) lithium battery into the battery compartment.
- Ensure the battery is installed correctly with the positive (+) side up.
- Replace the battery compartment cover.
- Dispose or recycle spent/discharged batteries in compliance with all applicable laws. For detailed information, contact your local solid waste authority.

Caution: Failure to properly align the battery polarity can cause personal injury and/or property damage.

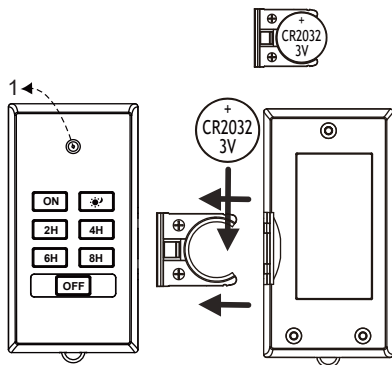

WARNING:

Do not ingest the battery, Chemical Burn Hazard (The remote control supplied with) This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Specifications:

DO NOT ATTACH A DEVICE THAT EXCEEDS THE UNIT RATINGS:

125 V ac 60 Hz,

15 A Resistive,

15 A General Use,

1000 W Tungsten,

500 VA Electronic Ballast, 1/2HP.

120 V ac, 60 Hz, 8.3 A Ballast

RECEIVER MODEL: TM-110

TRANSMITTER MODEL: TR-034-7

FCC ID: PAGTR-033-7

Safety Information

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

One Year Limited Warranty

Supported by our professional R&D team and QC team, we provide One Year Warranty for materials and workmanship from the purchase date. Please note that the warranty does not cover damage caused by personal misuse or improper installation.

Please attach your Order ID and Name so that our dedicated customer service team can help you better.

