


Jewenwils

Outdoor Digital Countdown Timer

SKU: HODT12C
[Instruction Manual]

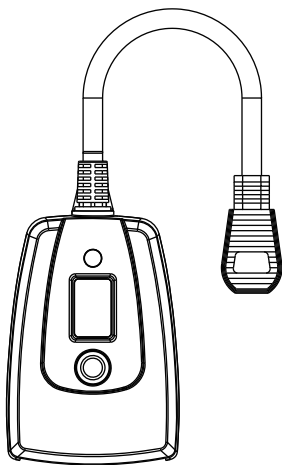


Please pay attention to the warning signs
Read the instructions with caution before operating
and keep it properly

Warning: To reduce the risk of fire, electric shock or personal injury, please strictly follow the instructions.

1. The timer must be mounted in a vertical position with the receptacles facing downward and at least 2ft above the ground level when in outdoor use.
2. Do not connect any devices which may exceed the maximum ratings of this timer.
3. Do not immerse in water.
4. Children are not allowed to use the timer without supervision.
5. Do not disassemble or repair the product, but only by authorized service personnel.
- 6 Please always unplug and store indoors when not in use.

Button Layout

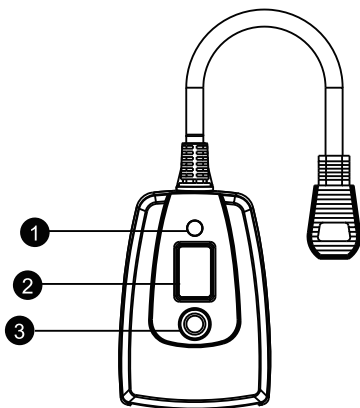

1.Light Sensor

Sensor will turn timer on at dusk and off at dawn.

2.Display

Indicates current operating mode.

3.Select Button

To select and switch the operating mode

Operating Instructions

Plug the timer into a standard outlet, and then press the button on the timer to select one of the following settings:

| SELECT | DESCRIPTION |
|----------|--|
| F | No Power |
| O | Power Constantly on |
| 1 to 9 | On at dusk. Set off time for 1-9 hours. * |
| d | On automatically at dusk and off at dawn |
| 1. to 9. | On immediately. Set off time for 1-9 hours.* |

* Cycle repeat every 24 hours

* Once activates at dusk in the specific mode, the program cycle will be completed. Any light sources won't interfere with the program cycle.

Specifications

Input Voltage: 125VAC, 60Hz

Cord : SJTW 14/3C

Max Power Rating: 15A Resistive

1000W Tungsten

500VA Electronic Ballast

120Vac 60Hz 8.3A Ballast

1/2HP

Safety Information

Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for a

Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause interference, and(2) this device must accept any interference, including interference that may cause undesired operation of the device.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

One Year Limited Warranty

Supported by our professional R&D team and QC team, we provide One Year Warranty for materials and workmanship from the purchase date. Please note that the warranty does not cover damage caused by personal misuse or improper installation.

Please attach your Order ID and Name so that our dedicated customer service team can help you better.

