 


Jewenwils

Outdoor Mechanical Pin Timer

SKU: HOMT11B
[Instruction Manual]

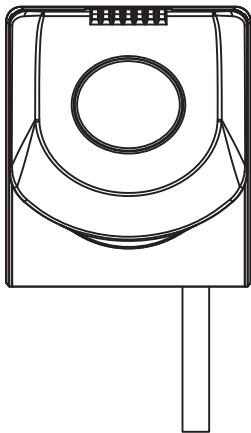

 
Please pay attention to the warning signs
Read the instructions with caution before operating
and keep it properly

WARNING:

To reduce the risk of fire, electric shock or personal injury, please strictly follow the instructions.

- 1.The timer must be mounted in a vertical position with the outlet facing downward and at least 2ft above the ground level.
- 2.Do not connect any devices which may exceed the maximum ratings of this timer. 3.Do not immerse in water.
- 4.Children are not allowed to use the timer without supervision.
- 5.Do not disassemble or repair the product, but only by authorized service personnel.
- 6.Please always unplug and store indoors when not in use.
7. Cord-connected Operating control.

Button Layout

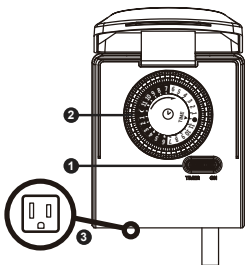

1.Side Switch

The side switch is used to set the timer function: Always ON or Timer Control.

2. Timer Dial

 
- Day time :7:00 AM-6:00 PM/ Night time : 7:00PM- 6:00 AM
- Each pin represents 30 minutes: 2 pins= 1 hour
- Pin in down position means ON
- Pin in up position means OFF

3.Outlet

Plug the lights or devices to be controlled by the timer into the outlet.

Operating Instructions

1. Set the current timer: Turning dial clockwise until the arrow indicates to current time.
2. Begin with all pins pulled up. Push the pins down for the periods of time you want the timer to be ON. Pins in down position represents ON and up position represents OFF, shown as picture.

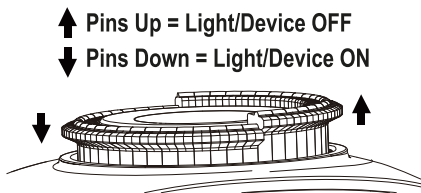

Note: Pins indicated by the arrow can not be pressed down, rotate the dial to make itwork.

3. Push the “ON /TIMER” switch to “TIMER” position and plug the timer into the wall socket. You may override operation of the timer by setting the switch to “ON” position. The power supply will always be ON. Be sure to set switch back to the “TIMER” for proper timer function.
4. Plug your electrical device directly into the timer. Make sure the device is in ON state so the timer can control it to work properly.
5. If blackout, reset the timer as indicated above.

Specifications:

Input Voltage: 125VAC, 60Hz

Max Power Rating: 15A General 15A Resistive

1875W Tungsten 500 VA Electronic Ballast 1/2HP

Cord: SJTW 14/3C

One Year Limited Warranty

Supported by our professional R&D team and QC team, we provide One Year Warranty for materials and workmanship from the purchase date. Please note that the warranty does not cover damage caused by personal misuse or improper installation.

Please attach your Order ID and Name so that our dedicated customer service team can help you better.

