


Jewenwils

Outdoor Remote Control Outlet

[Instruction Manual]

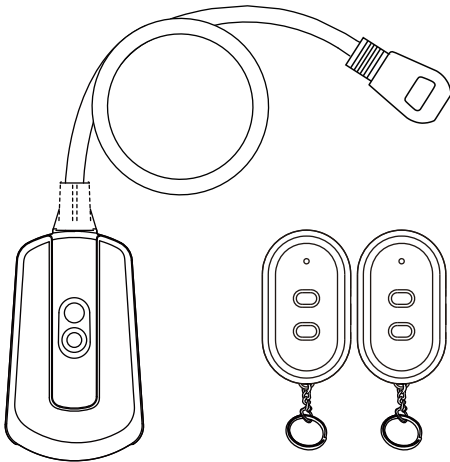

Please pay attention to the warning signs
Read the instructions with caution before operating
and keep it properly


V20713

Warning:

To reduce the risk of fire, electric shock or personal injury, please strictly follow the instructions.

1. The outlet must be mounted in a vertical position with the outlet facing downward at least 2ft above ground level.
2. Do not connect any devices which may exceed the maximum ratings of this remote outlet.
3. Do not immerse in water.
4. Do not disassemble or repair the product, and only allow authorized service personnel to do that.
5. Always unplug and store indoors when not in use.
6. Used batteries should be disposed of safely and in accordance with environmental protection standards.
7. Children are not allowed to use remote outlets without adult supervision.
8. To prevent suffocation and choking, keep children away from packaging materials.

Product Layout

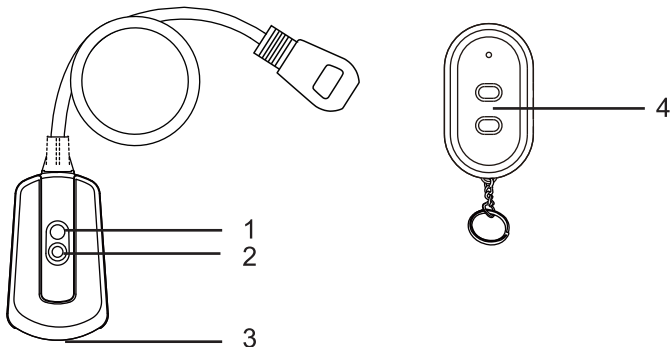

1. Power Indicator Light

The power indicator light shows that the receiver is on.

2. Manual ON/OFF Switch

Turn on/off by the receiver.

3. 3-Prong Outlet

4. Transmitter

ON:When the on button is pressed, it will override the receiver's current program to on function.

OFF:When the off button is pressed, it will override the receiver's current program to off function.

Remote indicator light: The LED light indicates that the ON or OF button is being pressed.

Operating Instructions

1. Remove the isolation tab in the battery compartment on the transmitter.
2. Plug the receiver to a standard outlet, Make sure the outlet supplying receiver is powered. Plug your device into the socket on the receiver.
3. To control the connected device, press the ON/OFF button on the transmitter.

Notes: The receiver must be located within 100 feet of the remote transmitter. Actual functional range may be affected by the following factors: weather, radio frequency, low remote battery and obstructions between the transmitter and receiver.

Battery Replacement

If you find the receiver works abnormally or the indicator on the remote control becomes dim, please replace the battery.

- Open the battery compartment and remove the old battery.
- Install a new CR2032 battery, making sure the polarity + 1- of the battery is correct.
- Close the battery compartment.

Caution: Failure to properly align the battery polarity can cause personal injury and/or property damage.

Warning

- Keep battery away from children and pets.
 - Follow the battery manufacturer's safety and usage instructions.
Remove a spent or discharged battery from the product.
 - Remove the battery when not using the product for an extended period.
 - Do not expose battery to fire or other heat sources.
 - Do not dispose of battery in trash. Recycle or manage it as hazardous waste.
- Do not ingest the battery, Chemical Burn Hazard (The remote control supplied with) This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Troubleshooting

In the case that one receiver is unresponsive to the remote control, please follow the steps below to resolve the issue:

1. Make sure the receiver and appliance are properly connected and powered on.
2. Replace the remote battery with a new CR2032 battery.
3. The remote transmitter may be too far away to control the receiver.
4. Make sure not to exceed the maximum load.

Specifications

- Input Voltage: 125VAC, 60Hz
- Max Power Rating: 15A, 1875W Resistive, 1000W Tungsten, 1/2HP
- Transmission Frequency: 433.92MHz
- Remote Control Range : 100 Feet (Free Area)
- Remote Battery: CR2032, 3V
- RECEIVER MODEL: RC-042
- TRANSMITTER MODEL: TR-026A
- FCC ID: PAGTR-026A

Safety Information

Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device*

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

One Year Limited Warranty

Supported by our professional R&D team and QC team, we provide One Year Warranty for materials and workmanship from the purchase date. Please note that the warranty does not cover damage caused by personal misuse or improper installation.

Please attach your Order ID and Name so that our dedicated customer service team can help you better.

