 


Jewenwils

Mechanical Yard Stake Timer

SKU: HOYS22M
[Instruction Manual]

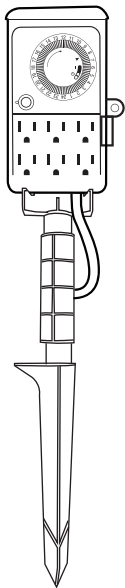

Please pay attention to the warning signs
Read the instructions with caution before operating
and keep it properly

WARNING:

 
To reduce the risk of fire, electric shock or personal injury, please strictly follow the instructions.

1. Do not connect any devices which exceed the maximum ratings of the timer.
2. Do not immerse in water.
3. Children are not allowed to use the timer without supervision.
4. Do not disassemble or repair the product, but only by authorized service personnel.
5. Always unplug and store indoors when not in use.
6. To prevent children suffocation and choking, keep them away from packaging materials.

Caution:


1. Risk of Fire. Not for permanent installation. Use only with outdoor equipment, Christmas-tree, or other seasonal decorative-lighting products having a total of 15 Ampere maximum. Do not install or use this product for more than a 90-day period.
2. If using Christmas tree or decorative - lighting products that are not marked with an ampere rating, connect no more than 140 screw-base lamps (C7 or C9) or 12 strings with midget (push-in) lamps to this cord set.
3. Cord sets shall be plugged into a GFCI - protected receptacle.
4. If using an outdoor-use cord set for an extended period of time (greater than 90 days) please consider hard wiring a permanent outdoor-use receptacle rated for year-round use in the area that power is needed. Please contact a licensed electrician for proper installation of permanent wiring.
5. After completion of installation, the connector shall be maintained a minimum of 6 inches above ground.

Product Layout

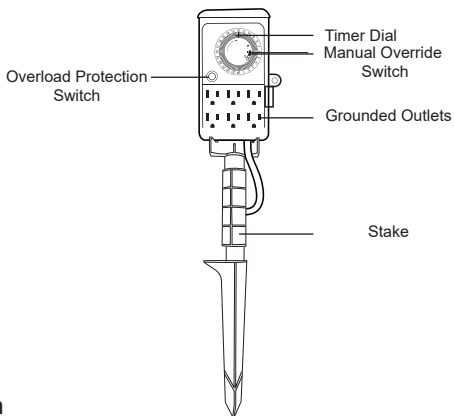

Installation

 Rotate the Stake, Then align four tabs on stake with four holes on back of timer. Push tabs down, then up, until they lock into place. Shown as Figure.

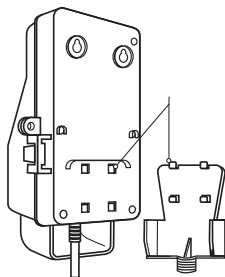

Tips: If the ground is too hard to insert the stake, digging a hole that matches the stake with a hard object will be perfect.

Operating Instructions

1. Set the current timer: Turning dial clockwise until the arrow indicates to current time.
2. Begin with all pins inner ring. Push the pins out for the periods of time you want the timer to be ON. Pins in outer ring represents ON and inner ring represents OFF.

Note: Pins indicated by the arrow can not be push out, rotate the dial to make it work

3. Push the manual override switch to “ ” position and plug the timer into the wall socket. You may override operation of the timer by setting the switch to “ ” position. The power supply will always be ON. Be sure to set switch back to the “ ” for proper timer function.
4. Plug your electrical device directly into the timer. Make sure the device is in ON state so the timer can control it to work properly.
5. If blackout, reset the time as indicated above.

Specifications:

- Input Voltage: 120VAC 60HZ
- Cord: SJTW 14/3
- Max.Current: 15A Resistive 600W Tungsten 1/2 HP

One Year Limited Warranty

Supported by our professional R&D team and QC team, we provide One Year Warranty for materials and workmanship from the purchase date. Please note that the warranty does not cover damage caused by personal misuse or improper installation.

Please attach your Order ID and Name so that our dedicated customer service team can help you better.