

## DATASHEET

GDCACOVER/ GDCABOIL / GDCACOOK / GDCADISH / GDCADRY  
 GDCAFAN / GDCAFRID / GDCAHOB / GDCAMICRO / GDCAOVEN  
 GDCAWASH

Grid Interchangeable Rocker Switch Covers

[www.thrion.co.uk](http://www.thrion.co.uk)



|             |                                      |                              |                                   |                                   |                                       |                           |
|-------------|--------------------------------------|------------------------------|-----------------------------------|-----------------------------------|---------------------------------------|---------------------------|
| PART CODE   | GDCABLANK                            | GDCABOIL                     | GDCACOOK                          | GDCADISH                          | GDCADRY                               | GDCAFAN                   |
| DESCRIPTION | Blank Switch Cover                   | Switch Cover marked "BOILER" | Switch Cover marked "COOKER HOOD" | Switch Cover marked "DISH WASHER" | Switch Cover marked "TUMBLE DRYER"    | Switch Cover marked "FAN" |
| PART CODE   | GDCAFRID                             | GDCAHOB                      | GDCAMICRO                         | GDCAOVEN                          | GDCAWASH                              |                           |
| DESCRIPTION | Switch Cover marked "FRIDGE FREEZER" | Switch Cover marked "HOB"    | Switch Cover marked "MICRO WAVE"  | Switch Cover marked "OVEN"        | Switch Cover marked "WASHING MACHINE" |                           |