

## DATASHEET

GDCACOVER/ GDCABOIL / GDCACOOK / GDCADISH / GDCADRY  
 GDCAFAN / GDCAFRID / GDCAHOB / GDCAMICRO / GDCAOVEN  
 GDCAWASH

Grid Interchangeable Rocker Switch Covers

[www.thrion.co.uk](http://www.thrion.co.uk)



PART CODE	GDCABLANK	GDCABOIL	GDCACOOK	GDCADISH	GDCADRY	GDCAFAN
DESCRIPTION	Blank Switch Cover	Switch Cover marked "BOILER"	Switch Cover marked "COOKER HOOD"	Switch Cover marked "DISH WASHER"	Switch Cover marked "TUMBLE DRYER"	Switch Cover marked "FAN"
PART CODE	GDCAFRID	GDCAHOB	GDCAMICRO	GDCAOVEN	GDCAWASH	
DESCRIPTION	Switch Cover marked "FRIDGE FREEZER"	Switch Cover marked "HOB"	Switch Cover marked "MICRO WAVE"	Switch Cover marked "OVEN"	Switch Cover marked "WASHING MACHINE"	