

DATASHEET

GDCACOVER/ GDCABOIL / GDCACOOK / GDCADISH / GDCADRY
 GDCAFAN / GDCAFRID / GDCAHOB / GDCAMICRO / GDCAOVEN
 GDCAWASH

Grid Interchangeable Rocker Switch Covers

www.thrion.co.uk



| | | | | | | |
|-------------|--------------------------------------|------------------------------|-----------------------------------|-----------------------------------|---------------------------------------|---------------------------|
| PART CODE | GDCABLANK | GDCABOIL | GDCACOOK | GDCADISH | GDCADRY | GDCAFAN |
| DESCRIPTION | Blank Switch Cover | Switch Cover marked "BOILER" | Switch Cover marked "COOKER HOOD" | Switch Cover marked "DISH WASHER" | Switch Cover marked "TUMBLE DRYER" | Switch Cover marked "FAN" |
| PART CODE | GDCAFRID | GDCAHOB | GDCAMICRO | GDCAOVEN | GDCAWASH | |
| DESCRIPTION | Switch Cover marked "FRIDGE FREEZER" | Switch Cover marked "HOB" | Switch Cover marked "MICRO WAVE" | Switch Cover marked "OVEN" | Switch Cover marked "WASHING MACHINE" | |