

Alka Flow -Alkaline Benchttop Water Filter System & Alkaliser

For good performance of your Alka Flow water filter and alkaliser, the following needs to be considered :

Regular flushing of the system is required: about once a week or every fortnight OPEN the flushing valve for about 2-3 minutes (using the drainage port with the inline valve) draining the water into a container and giving it to plants or draining it into the sink. The frequency depends on the quality of the source water and the indoor temperatures. In hot summer this may need to be done more often. When the water quality out of the Alka Flow starts smelling a little then it was left too long !

Flushing of newly installed filters or at the beginning of a new machine: Once the replacement filters are installed or with a new machine, let the Alka Flow flush for about 3-5 minutes before consuming the water.

Life indicator and batteries: There are batteries included to run the Filter life indicator.

When first operating the indicator, press on two buttons at the same time for 3 seconds, then the indicator starts working.

For reset: Press the single button for 3 seconds.

**Do you prefer video
Instruction ?**

Scan Code for a brief video on
how to change the Filters



Alka Flow -Alkaline Benchtop Water Filter System & Alkaliser

How to connect or disconnect the tubings from the connectors/ports:

- a) **Remove tubing** from the connector: press the white Top-hat towards the connector (close that 1mm gap and pull out the tubing at the same time
- b) **Connecting the tubing** with a connector or port: push the tubing into the port about 18-20mm. Then it is connected and sealed at the same time

See manual for more information and diagrams

Operation note: Do not leave water pressure on unit when not in use