

Cleaning Cartridge Instructions

Cleaning Cartridge Instructions:

Remove #2 filter from Ioniser.

- 1) Insert cleaning cartridge.
- 2) Press the "on" button to run water on the "pure" water level for about 20 seconds or until you see white foam.
- 3) Press the "off" button to turn off water.
- 4) Let foam clean plates for about five minutes.
- 5) Run water for about five minutes until there is no more white foam.
- 6) Replace cleaning cartridge with your #2 filter.

The cleaning cartridge is one time use only

PLEASE NOTE:

There is no filter chip required as the program runs on the purified menu.

**This clean cartridge is suitable for the following machines:
KYK 25000/ KYK 30000/ KYK Generation II/ EOS Platinum/
EOS Revelation II**