

HOMAY CHI - Replacement Filter

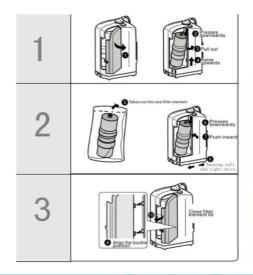


Image 2



Turn off water supply.

Image 1

- Open Ilter compartment door, see image 1: Looking from the front, the latch to open the Iter door is placed on the right hand side.
 Swing door open to the back, then remove door temporarily.
 Remove the current Iter, by pushing the Iter down and pulling it out.
- 3. Reset the counter by pushing the Filter life reset button. (see image 2)A beep sound indicates that the counter is reset. In the display the counter is now set to the beginning. (Please note: the new generation Homay filters per 5000 liters capacity or 18 months, with a maximum of 24 months lifespan. The same applies to prelters or Bio-remineraliser).
- 4. Place new lter by aligning it with the lter bottom base of the ionizer rst, push the cartridge down, align it with the top outlet. Once in place turn lter to make sure that it is properly sealed within the ports. Replace lter door.
- 5. Flush the Water ionizer for 10 minutes. The water is now suitable for drinking.