

FRINGE TWISTER

ASSEMBLY & USE

Your Fringe Twister was packed with a rubber band holding the crank arms in the handle. Do not remove the rubber band until you finish assembly. If it's broken or missing, hold the handle in a horizontal position and slide all 3 crank arms into their holes.

1. Screw a clip onto each crank arm, tightening until the threads of the arm are no longer visible. You can align the clips in the same orientation if you wish, as long as the crank arm threads aren't exposed.



 
Find out more at schachtspindle.com

2. Slide the 1/4-20 x 2-1/4" Phillips truss head machine screw through the round end of the knob, then attach this screw with a #2 Phillips screwdriver.

3. Remove the rubber band. You're ready to twist some fringe! See the other side for use instructions.




Visit our YouTube channel for Fringe Twister videos:
youtube.com/user/schachtspindle

Schacht Spindle Company
 6101 Ben Place Boulder, CO 80301
 303.442.3212

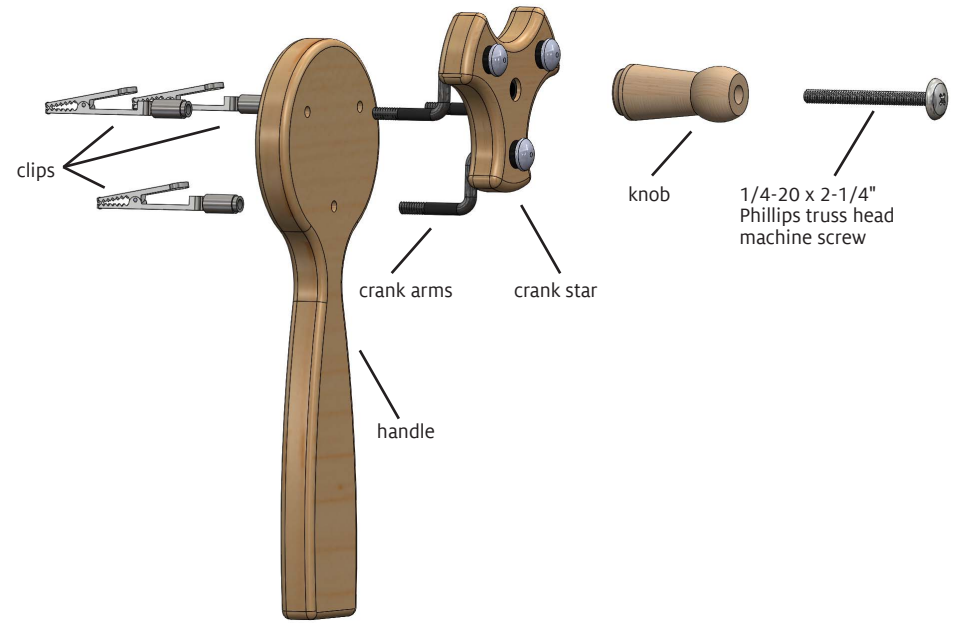

© 2021 Schacht Spindle Company, Inc.

   10.21

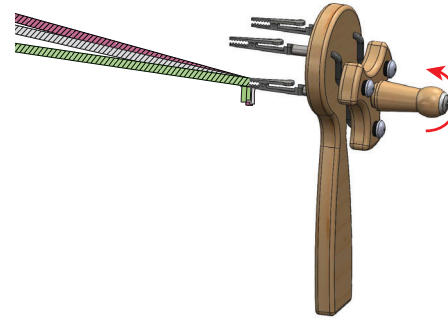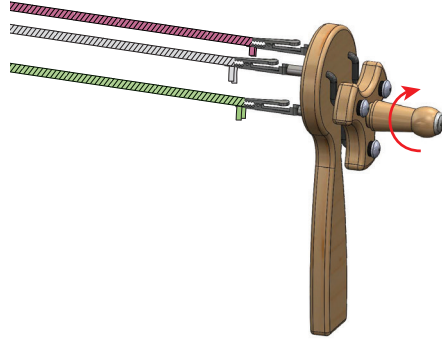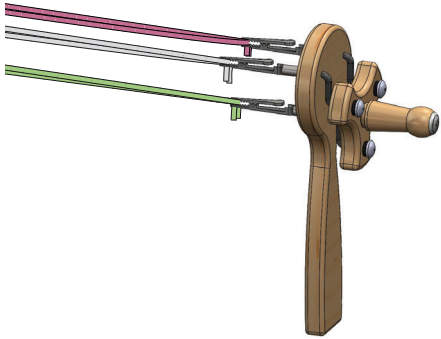

1. Decide on the look you want for your project. Twisted fringe requires at least 2 yarn ends per clip, which twist around each other to form a ply. You can use as many yarn ends as you want in a ply, and you can use 2 or 3 plies for the fringe. Clip the yarn ends to 2 clips (2-ply fringe) or 3 clips (3-ply fringe). Here we show 2 yarn ends in a 3-ply fringe.

2. Turn the handle to the right to twist the plies separately. When the yarns kink back on themselves, they have enough twist. (For consistent fringe, count the rotations and use the same number each time you repeat this step.) Remove the plies from the clips and keep hold of them so they do not untwist.

3. Now twist the plies together in the opposite direction: clip all the groups in one clip and turn the handle to the left. The plies will twist around each other; keep turning the handle until you like the look of the fringe. (For consistent fringe, count the rotations and use the same number each time you repeat this step.)

4. Remove the yarn from the clip and tie an overhand knot near the end. When you let go, the fringe will stay twisted above the knot. You can trim the yarn ends to an even length below the knot.