

Operating Instructions SX1000

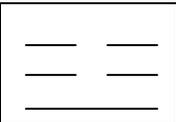
Before operating disassemble, clean and reassemble

Note:

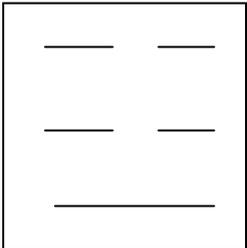
The **SX1000** is completely automatic, *whether you are making soft serve, milkshakes or other beverages*. Look at the product number code printed on the front of the package and press the **UP** or **DOWN** button until you match the number on the mix packaging to the number in the display.

The **SX1000** automatically compensates for the ambient room temperature and adjusts the freezing time for the product number selected.

These instructions might seem complicated at first, but once you actually perform the tasks, they will become quite simple.

1. Plug the power cord into a 15 amp 120V outlet.
2. The **ON/OFF** switch is located on the left side of the machine as you face it. Press the switch to **ON**, *there will be a 3 second delay before you hear the fan come on.*
3. The display panel will display 
4. This display is the **WASH MODE**.
5. The default mode when the machine is turned on is the **WASH MODE**.

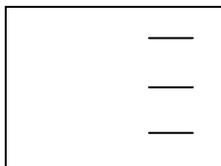
SETTING THE DISPLAY NUMBERS

1. The **UP** or **DOWN** buttons increase or decrease in increments of **01** up to **30**.
2. Pressing the **UP** button when the display is showing **30** or the **DOWN** button when the display is showing **00** will change the display to 

3. This display indicates that the **SX1000** is in the **WASH MODE**.
4. To change from the **WASH MODE** use the **UP** or **DOWN** buttons.

WASH MODE

1. Press the **START/STOP** button
2. The display will change to **03** and start flashing, the heating element and stirring motor will be turned on for 3 minutes and the display will count down from **03** to **01** to **00**.
3. At the end of the heating cycle, a buzzer will sound for 15 seconds and the display will change to



4. Press the **START/STOP** button again. The display will then display **01** and start flashing indicating the **RINSE MODE**. The stirring motor will turn on for 1 minute while the display counts down from **01** to **00**.
5. At the end of the rinse cycle, a buzzer will sound for 15 seconds and the display will remain at **00**.

FREEZE MODE

1. Press the **UP** or **DOWN** button to match the number on front of the package of mix.
2. Pour the liquid mix into the **SX1000**.
3. Press the **START/STOP** button. This will start the freezing process and will turn on the compressor as well as the stirring motor. The display will count down in 1 minute intervals from the number displayed on the display, *which was calculated based upon product code number entered and ambient room temperature*, until the display is **00**.
4. A buzzer will sound for 15 seconds indicating the product is **READY** for dispensing.
5. When the product is **READY**, you will have either 2 or 3 options. You can either **DISPENSE** the product or do **NOTHING**. If you do **NOTHING**, the **SX1000** will automatically go into the **KEEP FRESH MODE**. If the product seems a little too soft for you, press and hold the **START/STOP** button for 2 seconds. The display will change from **00** to **02** and will be flashing. The refrigeration will turn on and the stirring motor will be turned on for 2 minutes as the display changes from **02** to **01** to **00**.

KEEP FRESH MODE

1. **KEEP FRESH MODE** keeps the finished product ready for dispensing for several hours. The **SX1000** automatically goes into this mode to keep the product fresh. If the product code on the package was greater than **>10**, the refrigeration comes on for 1 minute and then turns off for 5 minutes. If the product code is less than or equal to **<= 10** the refrigeration comes on for 30 seconds and then turns off for 5 minutes.

DISPENSE MODE

1. Place your hand in front of the **IR sensor** located just below the dispense head. Activating the **IR sensor** will place the program into the **DISPENSE MODE** and will turn on the stirring motor and also start the refrigeration. The dispense lever can be pulled down to dispense the finished product. After the product has been dispensed and the dispense handle has been pushed to its original upright position, removing your hand from in front of the **IR sensor** deactivates the **IR sensor** and the **SX1000** automatically goes into the **KEEP FRESH MODE**.

CANCEL MODE

1. To cancel any **MODE** whether the **SX1000** is in **WASH MODE, RINSE MODE, FREEZE MODE, ADD INGREDIENTS MODE or DISPENSE MODE**, press the **START/STOP** button. The **SX1000** will immediately stop that **MODE** and the display will display **00** continuously.

Go to www.icecreamdepot.com and register your product by filling in the warranty card online.

On www.icecreamdepot.com you can also sign up for auto fill and for specials on ingredients for your **SX1000**.