

# GET STARTED

## Welcome! Unbox your smile

Your digital guide to the Kiddy & Travel Models

### 1. In the box

- ✦ Handle + brush head\*
- ✦ Toothpaste\*
- ✦ Travel case\*
- ✦ USB charging cable
- ✦ Instruction manual

\*depends on model/kit



### 2. How to use the brush

- ✦ Firmly press the brush head down until it stops. A slight gap ( $\leq 1\text{mm}$ ) between the brush head and handle is normal. This gap ensures optimal sonic vibration performance.
- ✦ Hold the bristles at 45° angle towards your gum line, then press the power button to get started. Want to change modes? Just tap the button.
- ✦ Take it slow and go tooth by tooth, no heavy pressure needed. Every 30 sec. the brush will pause to guide you. After 2 min. it'll switch off automatically.
- ✦ Once you're done, rinse the head and leave it standing upright, in a dry, airy spot.

**Don't press hard, vibrations do the cleaning.**



### 3. Cleaning & care

#### After each use

- ✦ Rinse the brush head.
- ✦ Wipe clean and dry power button.
- ✦ Store the brush in ventilated, dry place.

#### Every 2 weeks

- ✦ Remove brush head, rinse connector pin/socket to prevent limescale.
- ✦ Dry fully before reattaching the brush head again.

### 4. Keep it fresh & clean

- ✦ Stay fresh. Replace your brush head every 8-12 weeks for the best results. Worn bristles clean less effectively, can irritate gums and may harbour bacteria. A fresh brush head keeps your teeth cleaner and your smile healthier.

HELLO  
**BRUSH**  
**MODES**

**Sensitive:** Soft vibrations for sensitive teeth.

**Clean:** General brushing mode. Remove plaque completely.

**Massage:** Made for tongue and gums. A gentle experience for sensitive teeth.

# KIDDY TRAVEL



**Battery**  
up to 50 days

**3 Modes**  
Sensitive  
Clean  
Massage

**Technical**  
IPX7  
±85gr  
3.7V 600mAh  
Li-ion

## Safety

- For oral care only. Not a toy.
- Not suitable for children under 3 years.
- Children until 8 may use under adult supervision.
- Consult a doctor before use if you have a pacemaker or an implanted medical device.
- Do not use while charging
- Do not open or disassemble the handle or battery.
- Stop using if damaged.
- Do not expose battery to heat, fire, or sunlight. Battery is non-replaceable; recycle responsibly.
- Replace brush head every 2-3 months.
- Only use Boombrush heads for best results
- Do not dispose in household waste. Recycle batteries & electronics.
- Use only certified 5V USB adapters. No fast chargers. Laptop or other USB ports are fine.

- Covers defects in materials and workmanship.
- Excludes wear & tear, misuse, damage, or use of non-Boombrush heads.
- Proof of purchase required.

## Troubleshooting

- Flashing LED = low battery → recharge.
- No power after storage = charge until >3.3V.
- Handle stops when charging = normal.
- Strange vibration/sound = replace head and ensure it's seated correctly.

## Service

Do you have any questions or comments about your experience with BOOM.? Our customer service will respond within 24 hours on working days.

+31 6 41755774  
service@boombrush.com

## Warranty

- 2 years EU legal warranty on all models.
- Lifetime warranty when subscribed to Boombrush Repeat.

