

9" Multimedia Digital Photo Frame

Instructional Manual



Table of Contents

Frame Features	04
Remote Control Close-up	06
Package Contents	07
Getting Started	07
Operating Instructions	
Viewing Photos	08
Transferring Files from your PC / Mac to the Frame's Internal Memory.....	09
Photo Function	
Photo Set-up	10
Video Function	
Video Set-up	12
Music Function	
Music Set-up	13
Motion Function	
Motion Set-up	14
System Function	
System Set-up	15

Table of Contents

Calendar Function

Calendar Set-up	16
-----------------------	----

Delete Function

How to Delete File from the Internal Memory	17
---	----


Technical Support	18
-------------------------	----

Radio and TV Interference Statement	19
---	----

Warranty	20
----------------	----


Frame Features

- 1 9" IPS LCD Screen
 - 2 Black Matte Frame
 - 3 Motion Sensor
 - 4 Power ON / OFF Button
 - 5 Reset Button
 - 6 MicroUSB Port
 - 7 microSD Card Slot
 - 8 Power Adapter Port
 - 9 Wall Hang Holes
 - 10 Speakers
 - 11 Security Lock
 - 12 Frame Stand
- A** Insert a microSD memory card to easily access and share your favorite pictures, video and music.
- B** Transfer and store files quickly and easily to the frame's 16GB built-in memory

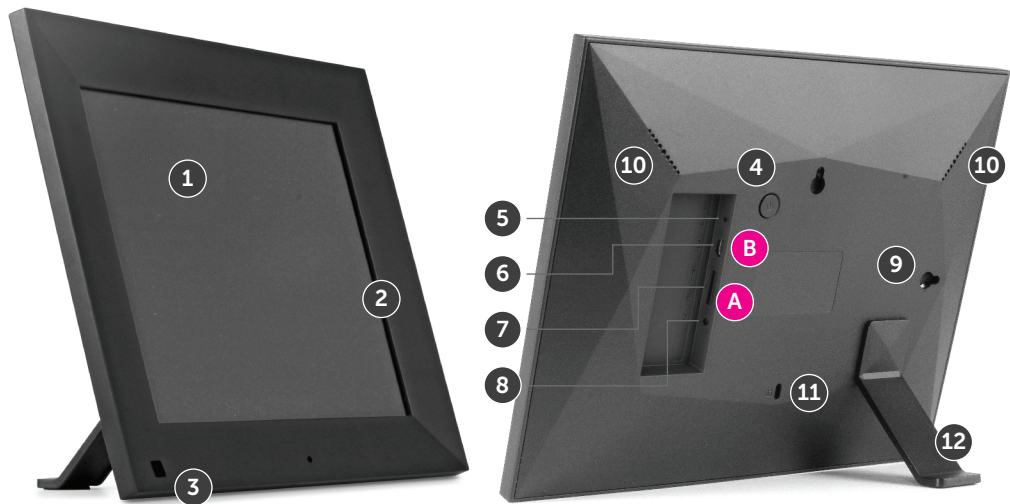

Remote Control Close-Up

1. **BGM** - Start slideshow with background music
(If there are music files on the same memory media)
2. **Power**
3. **Menu** - Takes you to the main menu
4. **Up, Down, Left, Right Arrows** - Use arrow keys to navigate your way through various menus
5. **OK**
6. **Setup** - Takes you to the setup menu
7. **Volume + / Volume -**
8. **Advance to Previous music/video**
9. **Advance to Next music/video**
10. **Mute**
11. **Return**
12. **Play / Pause**
13. **Zoom**
14. **Rotate**

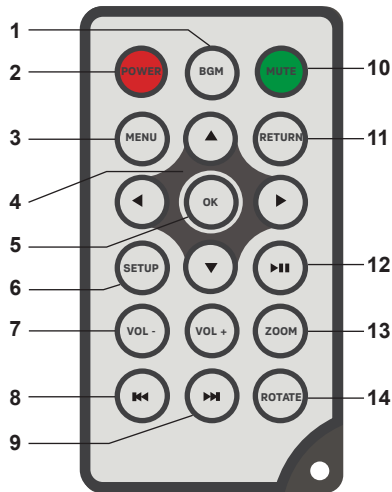


Package Contents

Your order has been carefully packaged and inspected. The following accessories should be included in your package. Please inspect the contents of the package to ensure that you have received all items and that nothing has been damaged. If you discover a problem, please contact us immediately for assistance.

- Power Adapter
- Remote Control
- USB 2.0 Cable
- Frame Stand

Getting Started

Plug in the power adapter and press the  to power on the photo frame.

Operating Instructions

Viewing Photos

- Please insert your microSD memory card at this time.



A Insert the memory card into the card slot as shown

- The frame will start slideshow automatically when the card is inserted.
- The slideshow can be stopped by pressing the “▶||” button on the remote. You can then press the “◀” or “▶” button to see the next or previous picture.


Operating Instructions

Transferring Files from your PC / Mac to the Frame's Internal Memory

- A USB cable is included with your digital frame to connect it to your PC/ MAC. Connect the small connector to your digital frame and the larger connector to your PC / MAC.
- Once connected, the frame will display a USB connector on the screen. On a PC, the frame's internal memory will appear as a removable drive when viewed in My Computer. On a Mac, the frame will appear as a drive icon on the desktop.
- Copy your photo, video and music files from your PC / MAC into the icon representing the frame's internal memory. When finished disconnect the USB cable from the PC or MAC. (Note: For a Mac, eject the drive icon before disconnecting the USB cable.)
- The frame will return to normal operation once it is disconnected from your PC / MAC.

Photo Function

Photo Setup

From the main menu, press the “◀” or “▶” buttons to select the  and press “OK” or “▶||” button to confirm. Press “OK” or “▶||” button again to access the “Photo Setup” menu.

You will see the following options: Display Mode, Music, Display Ratio, Slide Speed, Slideshow Repeat, Play Random Slideshow, Slideshow Effect and Slide Mode.

Use the “▲” or “▼” button to cursor through the menu. To make any changes to the setup option highlighted, press the “◀” or “▶” button to select the desired option.


Once your selection has been made, press the “▲” or “▼” button to move on to the next menu option.

Press the “Return” button to return to the Setup menu. Press the “Return” button again to return to the Main menu.

Photo Function


To select pictures from either the microSD card or internal memory, press the “return” button from the Main menu. Use “◀” or “▶” button to select desired media and press the “OK” button or “▶||” button to confirm.

Main Menu:

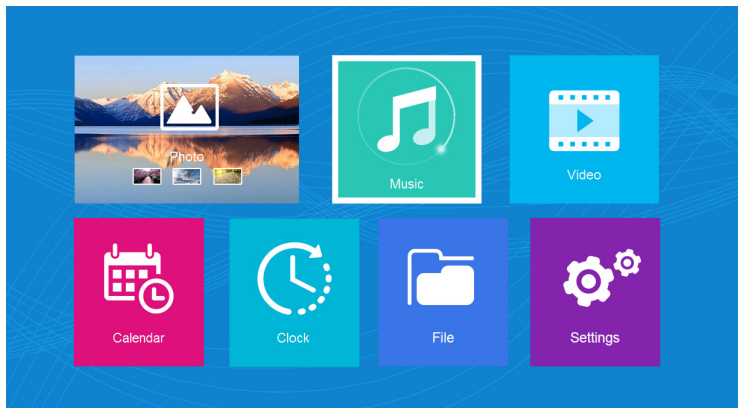

Video Function

Video Setup

From the main menu, press the “◀” or “▶” buttons to select the  and press “OK” or “▶||” button to confirm. Use the “▲” or “▼” button to cursor to “Video Setup” menu. Press “OK” or “▶||” button again to access the “Video Setup” menu.

You will see the following options: Play Mode and Display Ratio.


Use the “▲” or “▼” button to cursor through the menu. To make any changes to the setup option highlighted, press the “◀” or “▶” button to select the desired option.

Once your selection has been made, press the “▲” or “▼” button to move on to the next menu option.

Press the “Return” button to return to the Setup menu. Press the “Return” button again to return to the Main menu.

Music Function

Music Setup

From the main menu, press the “◀” or “▶” buttons to select the  and press “OK” or “▶||” button to confirm. Use the “▲” or “▼” button to cursor to “Music Setup” menu. Press “OK” or “▶||” button again to access the “Music Setup” menu.

You will see the following options: Play Mode and Volume.


Use the “▲” or “▼” button to cursor through the menu. To make any changes to the setup option highlighted, press the “◀” or “▶” button to select the desired option.

Once your selection has been made, press the “▲” or “▼” button to move on to the next menu option.

Press the “Return” button to return to the Setup menu. Press the “Return” button again to return to the Main menu.

Motion Function

Motion setup

From the main menu, press the “◀” or “▶” buttons to select the  and press “OK” or “▶||” button to confirm. Use the “▲” or “▼” button to cursor to “Motion Sensor” menu. Press “OK” or “▶||” button again to access the “Motion Sensor” menu.

You will see the following options: Motion Sensor and Motion Sensor Time.


Use the “▲” or “▼” button to cursor through the menu. To make any changes to the setup option highlighted, press the “◀” or “▶” button to select the desired option.

Once your selection has been made, press the “▲” or “▼” button to move on to the next menu option.

Press the “Return” button to return to the Setup menu. Press the “Return” button again to return to the Main menu.

System Function

System Setup

From the main menu, press the “◀” or “▶” buttons to select the  and press “OK” or “▶||” button to confirm. Use the “▲” or “▼” button to cursor to “System Setup” menu. Press the “▶||” button again to access the “System Setup” menu.

You will see the following options: Language, Start Up Mode, Brightness, Contrast, Saturation, Hue, Auto Power On, Auto On Time, Auto Power Off, Auto Off Time, Auto Power Frequency, Eco, No Activity Standby, Reset Setting.

Use the “▲” or “▼” button to cursor through the menu. To make any changes to the setup option highlighted, press the “◀” or “▶” button to select the desired option.


Once your selection has been made, press the “▲” or “▼” button to move on to the next menu option.

To make changes to the Auto Power Off/Power On option, once it is highlighted, press “OK” or “▶||” button to bring up the submenu to change the time. Use the “◀” or “▶” to highlight either hour or minutes and use “▲” and “▼” to set the desired time. Once the desired time is shown, press “▶||” button to confirm or to cancel.

Press the “Return” button to return to the Setup menu. Press the “Return” button again to return to the Main menu.

Calendar Function

Calendar Setup

From the main menu, press the “◀” or “▶” buttons to select the  and press “OK” or “▶||” button to confirm. Use the “▲” or “▼” button to cursor to “Calendar Setup” menu. Press “OK” or “▶||” button again to access the “Calendar Setup” menu.


You will see the following options: Date, Set Time Format, Clock Time, Alarm Status, Alarm Time and Alarm Frequency.

Use the “▲” or “▼” button to cursor through the menu. To make changes to Date and Clock Time option, once it is highlighted, press “OK” and “▶||” button to bring up the submenu to change the date or time. Use the “◀” or “▶” to highlight and use “▲” and “▼” to set the desired number. Once the desired date or time is shown, press “OK” or “▶||” button to confirm or to cancel

Press the “Return” button to return to the Setup menu. Press the “Return” button again to return to the Main menu.

Delete Function

How to Delete File from the Internal Memory

From the main menu, press the “◀” or “▶” buttons to select the  and press “OK” or “▶||” button to confirm. Use the “▲” or “▼” button to select the file you want to delete and press “▶” button.

In the pop up menu please select “Delete” and press the “OK” button. Select “Yes” to delete the file.

Technical Support

We are committed to providing the best customer service support. If you need assistance with your Aluratek product, please contact the Aluratek Technical Support department prior to returning this device. Reach out to us in any of the following ways:

E-mail: **support@aluratek.com**

Web: **aluratek.com/helpdesk**

Local (Irvine, CA): **714-586-8730**

Toll free: **1-866-580-1978**

Radio and TV Interference Statement

WARNING!!! This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by whatever measures may be required to correct the interference.

Warranty

Aluratek warrants this product against defect in material or workmanship for **1 Year** from the date of purchase.

This warranty becomes invalid if the factory-supplied serial number or “warranty void” sticker has been removed or altered on the product.

This warranty does not cover:

- A) Cosmetic damage or damage due to acts of God
- B) Accident, misuse, abuse, negligence or modification of any part of the product.
- C) Damage due to improper operation or maintenance, connection to improper equipment, or attempted repair by anyone other than Aluratek.
- D) Products sold AS IS or WITH FAULTS.

IN NO EVENT SHALL ALURATEK'S LIABILITY EXCEED THE PRICE PAID FOR THE PRODUCT FROM DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, IT'S ACCOMPANYING SOFTWARE, OR IT'S DOCUMENTATION.

Aluratek makes no warranty or representation, expressed, implied, or statutory, with respect to it's products, contents or use of this documentation and all accompanying software, and specifically disclaims it's quality, performance, merchantability, or fitness for any particular purpose. Aluratek reserves the right to revise or update it's product, software or documentation without obligation to notify any individual or entity.







