HEPA H13 with PM2.5 Monitor Air Purifier

Quick Start Guide



model AMAP01F

qsg Q10607 Copyright © 2022 Aluratek, Inc. All Rights Reserved.

Operation

Purifier Instructions



For Sleep mode, the fan speed will change to slow with the display turned off except the sleep icon. To exit sleep mode, just touch the screen and change the fan speed to other settings.

Reset

When the filter reminder icon is lit, please change the filter. Once the filter is replaced, during standby mode, press and hold the filter button to reset the filter life counter.

Power OFF

To power off the purifier, press the power button, the display will turn off and the power button will light up in red.

Package Contents

Your order has been carefully packaged and inspected. The following accessories should be included in your package. Please inspect the contents of the package to ensure that you have received all items and that nothing has been damaged. If you discover a problem, please contact us immediately for assistance.



Operation


Filter maintenance


This purifier uses a Hepa Carbon filter. It is suggested to be replaced every two months.

After a run time of 1500 hours, the purifier's replacement filter icon will light up.

- Place the filter in a ventilated place
- Do not expose to excessive sunlight
- Do not wash the filter with water
- Unplug the power plug before replacing the filter, cleaning and maintenance
- Do not operate with the filter removed as this may cause equipment failure
- Unplug the power cord when the purifier is idle for a long period of time

Product Highlights

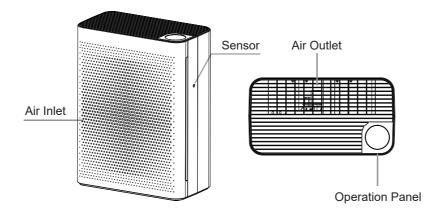

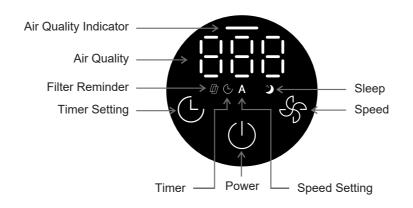


Radio and TV Interference Statement


WARNING!!! This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by whatever measures may be required to correct the interference.

Operation

Filter Installation

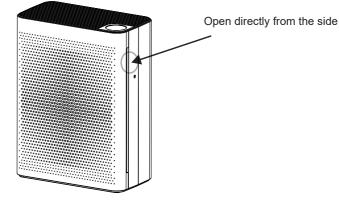

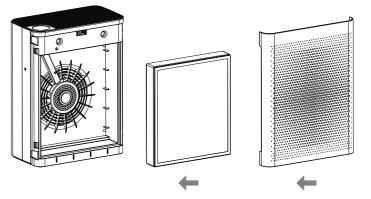

- 1. Remove the air inlet cover
- 2. Remove the filter
- 3. Remove the plastic bag from the filter and reinsert
- 4. Replace the air inlet cover

To power on the purifier, press the power button, the display will light up and the purifier will enter auto mode.

Timer

When the purifier is on, you can press the timer button to set the timer between 1-8 hours. You can verify the timer is set when you see the timer icon lit on the display. The timer can be cancelled by press and hold the timer button for about 3 seconds.

Speed

You can change the speed of the fan by pressing the fan icon to change between auto (A), slow (1), medium (2), fast (4) and sleep (SLE).

Technical Support and Warranty

If you need further assistance, please contact the Aluratek support department for troubleshooting prior to returning this device.

E-mail: support@aluratek.com Web: www.aluratek.com/helpdesk Local (Irvine, CA): 714-586-8730 Toll free: 1-866-580-1978

Aluratek warrants this product against defect in material or workmanship for 1 YEAR from the date of purchase.

For more information, please visit: https://aluratek.com/warranty-return-policy

You can register your product online at: https://aluratek.com/product-registration

Operation

Purifier Instructions

After the purifier is plugged in to a wall outlet, you will hear a single beep with the display lights up for a second, then it will go to standby mode where the display will be off with the power button light up in red.

Air Quality indicator: **Green** means **good** air quality

Yellow means moderate air quality

Red means bad air quality.

Power