

17.3" WiFi Digital Photo Frame with Touchscreen LCD Display

 
Quick Start Guide



aluratek.com model AWDMPF117F
qsg Q10448 Copyright © 2017 Aluratek, Inc. All Rights Reserved.

Operating Instructions

4. Please input the UN serial number. You can find the 10 digit UN serial number under Settings > Device Info in the main menu of the frame.
5. Tap on Bind. Once the process is complete, you can verify it under when you tap on "Device Manager" A popup message will also be shown on the frame.



Radio and TV Interference Statement

WARNING!!! This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by whatever measures may be required to correct the interference.

Getting Started

 
 
1. Screw in the frame stand
2. Plug in the power adapter
3. The first time you power on AWDMPF117F, it will take 3-5 minutes to get to the Wi-Fi setting menu (the Aluratek logo will stay on the screen). After the initial set up, it will take less than 30 seconds if you power off and on the frame again.

Operating Instructions

6. Congratulations!
Aluratek WiFi Frame app is now linked to the frame.

To post picture from the Aluratek WiFi Frame app to the frame, please follow below steps.

- A. Tap on "Gallery".
- B. Select the picture or video that you want to send to the frame.

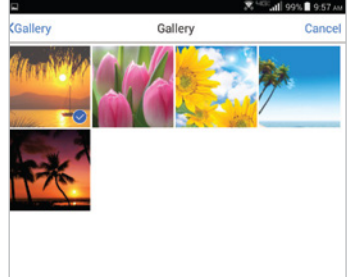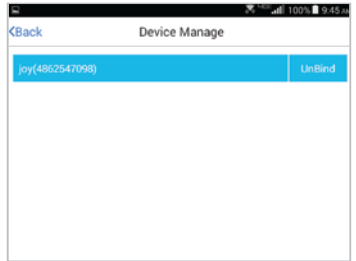

Warranty

Aluratek warrants this product against defect in material or workmanship for **1 YEAR** from the date of purchase.

This warranty becomes invalid if the factory-supplied serial number or "warranty void" sticker has been removed or altered on the product.

- This warranty does not cover:
- A) Cosmetic damage or damage due to acts of God
 - B) Accident, misuse, abuse, negligence or modification of any part of the product.
 - C) Damage due to improper operation or maintenance, connection to improper equipment, or attempted repair by anyone other than Aluratek.
 - D) Products sold AS IS or WITH FAULTS.

IN NO EVENT SHALL ALURATEK'S LIABILITY EXCEED THE PRICE PAID FOR THE PRODUCT FROM DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, IT'S ACCOMPANYING SOFTWARE, OR IT'S DOCUMENTATION.

Aluratek makes no warranty or representation, expressed, implied, or statutory, with respect to it's products, contents or use of this documentation and all accompanying software, and specifically disclaims it's quality, performance, merchantability, or fitness for any particular purpose. Aluratek reserves the right to revise or update it's product, software or documentation without obligation to notify any individual or entity.

Operating Instructions

Step 1: Connecting to a wireless network

AWDMPF117F scans for available Wi-Fi networks and displays the names of those it finds when it is powered on when it is powered on. Secured networks are indicated with a Lock icon. If AWDMPF117F finds a network that you connected to previously, it connects to it automatically. If not:

1. Touch the Network you want to connect to
2. Use the keyboard to enter the Password
3. Touch Connect
4. Touch > to continue to next step

 
Operating Instructions

C. Tap on "Confirm" on the bottom of the screen to confirm the picture selection.

D. Select the Photo quality of either SD or HD.

E. You can also add text to the picture by tapping on the photo and type in the text.

F. Tap on "Send" to send the picture/pictures to the frame. You will see a status bar on the main menu to see the progress. You may also check by tapping "Message".

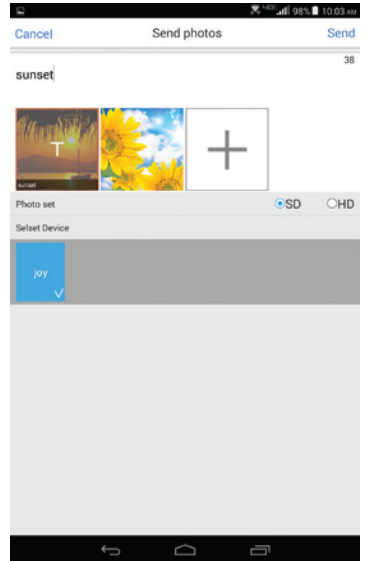

Operating Instructions

Step 2: Link your frame to your Aluratek WiFi Frame app

How to link the frame to Aluratek WiFi Frame app so that you can send picture/video directly from your tablet or smart phone.

1. You can either scan the QR Code on the frame or search for "Aluratek WiFi Frame" in either Google Play or iTunes store.
2. Once it is downloaded, please start the app by tapping "Aluratek WiFi Frame".
3. Tap on "Bind Device".



Technical Support

If you need further assistance, please contact the Aluratek support department for troubleshooting prior to returning this device.

E-mail: support@aluratek.com
Web: www.aluratek.com/helpdesk
Local (Irvine, CA): 714-586-8730
Toll free: 1-866-580-1978