

保固登錄

親愛的顧客，感謝您的選購。請在拆封後先確認產品使用無故障與瑕疵，並掃 QR 碼或手動輸入網址 <https://supr.link/UegTI> 完成序號登錄，啟動原廠保固服務。



掃碼登錄序號

 
 
聯繫客服

如遭遇產品瑕疵或於使用期間發生異常，請加入官方 Line@ 聯繫客服人員，並提供細節照片與聲音檔案以利狀況排除。



LINE ID @tts8521n

連接與使用

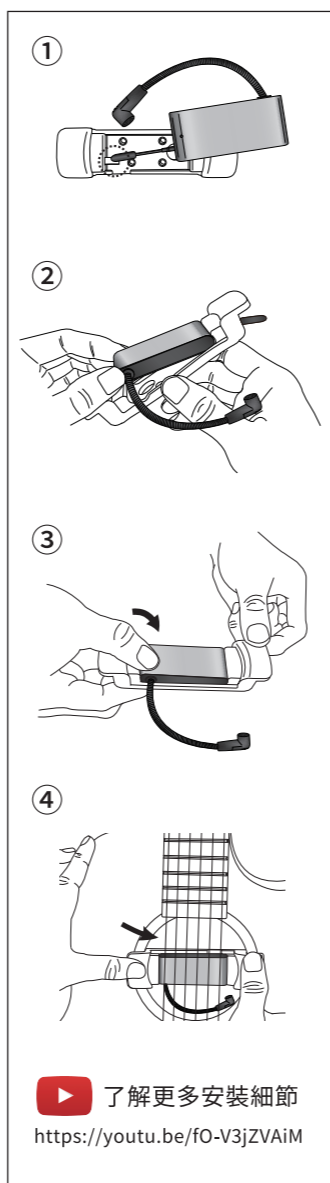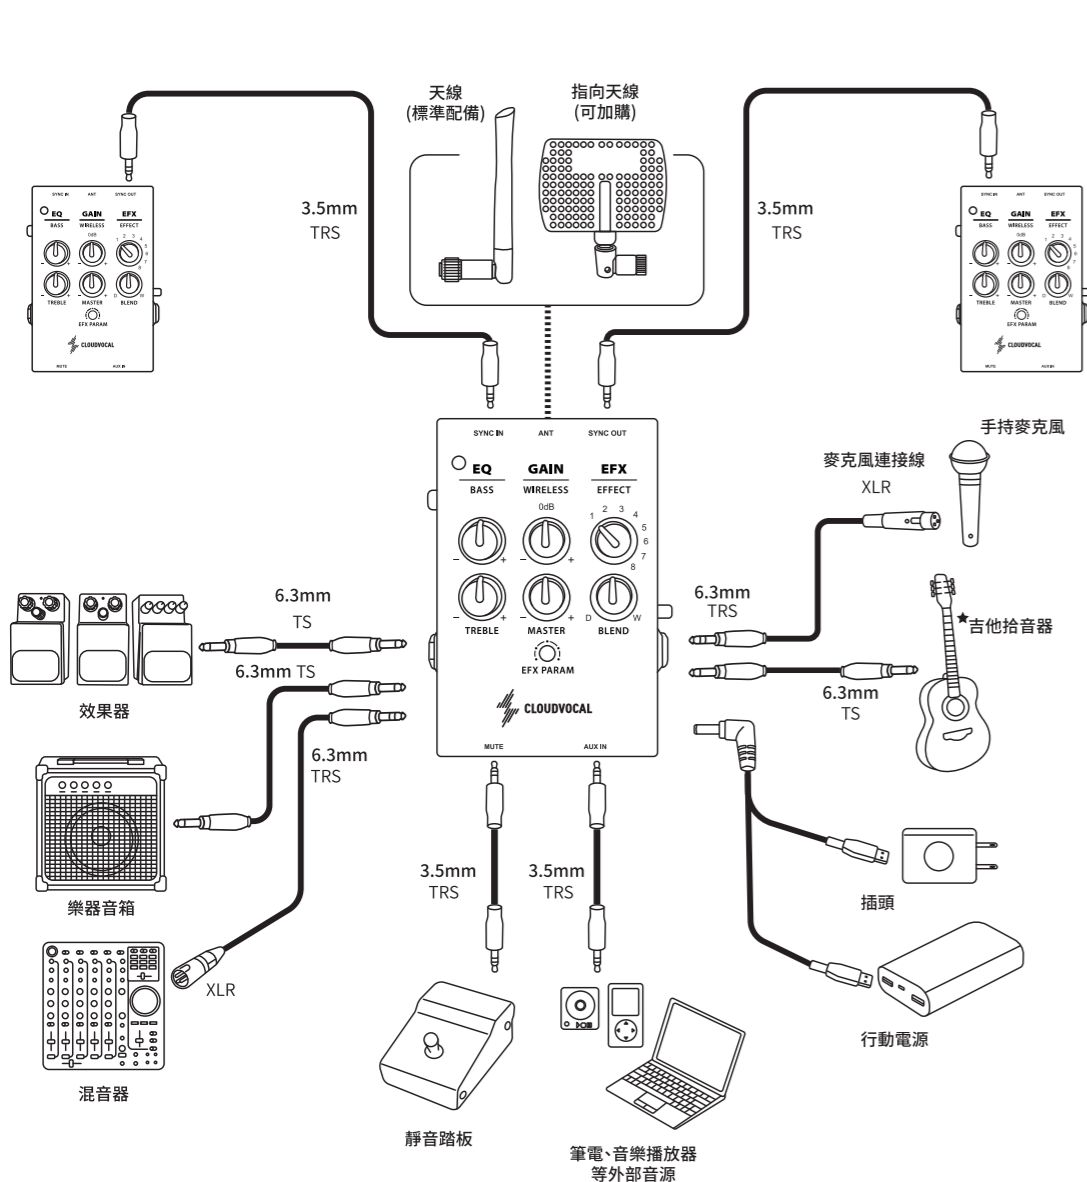

八段效果說明

<p>1. 房間殘響 (Room reverb)</p> <ul style="list-style-type: none"> 當 Effect 旋鈕為 1 時，會加入模擬房間般的聲音殘響。 可透過旋轉 EFX PARAM 調整殘響的持續時間與空間感。 	
<p>2. 大廳殘響 (Hall reverb)</p> <ul style="list-style-type: none"> 當 Effect 旋鈕為 2 時，會加入模擬大廳堂般的聲音殘響。 可透過旋轉 EFX PARAM 調整殘響的持續時間與空間感。 	
<p>3. 場館殘響 (Arena reverb)</p> <ul style="list-style-type: none"> 當 Effect 旋鈕為 3 時，會加入大型場館般的聲音殘響。 可透過旋轉 EFX PARAM 調整殘響的持續時間與空間感。 	
<p>4. 延遲 (Delay)</p> <ul style="list-style-type: none"> 當 Effect 旋鈕為 4 時，會讓聲音延遲一段時間後回放。 可透過旋轉 EFX PARAM 調整延遲的回放間隔。 	
<p>5. 延遲 + 殘響 (Delay + Reverb)</p> <ul style="list-style-type: none"> 當 Effect 旋鈕為 5 時，會讓聲音延遲一段時間後回放並加入殘響。 可透過旋轉 EFX PARAM 調整延遲的回放間隔與殘響程度。 	
<p>6. 星芒 (Shimmer)</p> <ul style="list-style-type: none"> 當 Effect 旋鈕為 6 時，會讓聲音加入帶有八度和聲的殘響。 可透過旋轉 EFX PARAM 調整殘響程度。 	
<p>7. 合唱 (Chorus)</p> <ul style="list-style-type: none"> 當 Effect 旋鈕為 7 時，會產生兩個聲音一起合奏的感覺。 可透過旋轉 EFX PARAM 調整兩個聲音時間重疊的感覺。 	
<p>8. 鑲邊濾波 (Flanger)</p> <ul style="list-style-type: none"> 當 Effect 旋鈕為 8 時，會產生聲音旋轉變化的效果。 可透過旋轉 EFX PARAM 調整聲音旋轉的程度。 	

ISOLO GT-10 | Quick Start Guide

Warranty Registration

 
 
Thanks for your support. Once you make sure that your product is intact and is functioning normally, please scan the QR code or visit <https://supr.link/ICgE9> to register and activate warranty.

If you encounter any problem, please contact us via: service@cloudvocal.com. Make sure to include:

1. Order #
2. Product serial #
3. Detail of your problem in your email.



How to connect

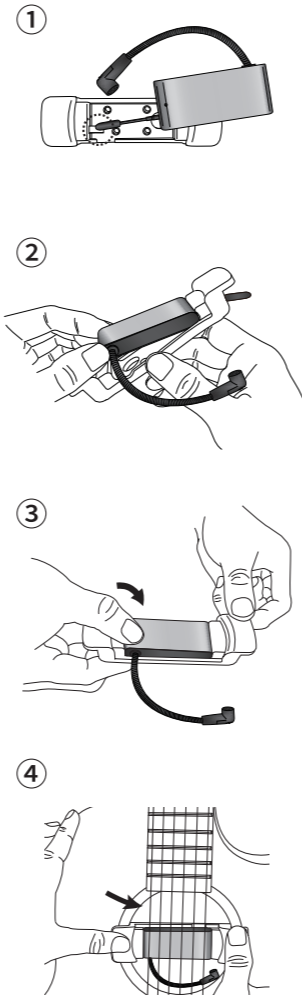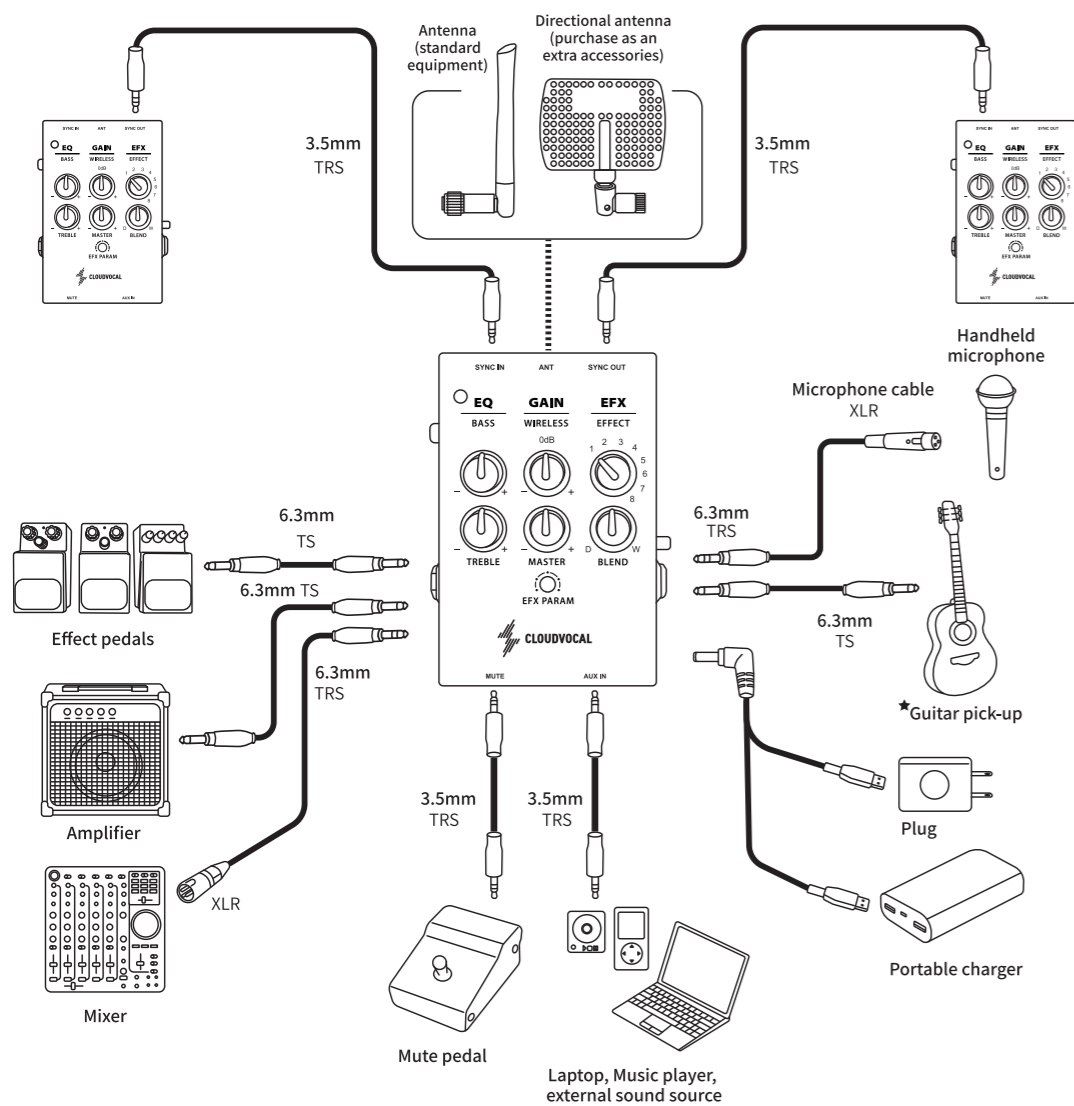


[For more instructions](https://youtu.be/oOwcXEL5u3M)
<https://youtu.be/oOwcXEL5u3M>

about the 8 effects


1. Room reverb

 - When effect knob is on 1, you can get a room like reverb.
- EFX PARAM is for adjusting reverb decay in the space.

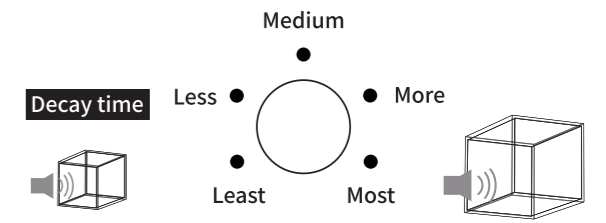


2. Hall reverb

 - When effect knob is on 2, you can get a hall like reverb.
- EFX PARAM is for adjusting reverb decay.

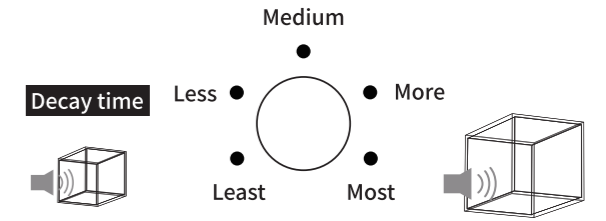


3. Arena reverb

 - When effect knob is on 3, you can get an arena like reverb.
- EFX PARAM is for adjusting reverb decay.

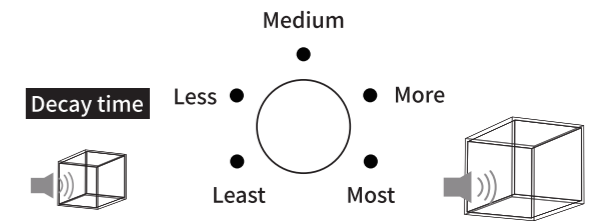


4. Delay

 - When effect knob is on 4, you will have your sound played back after sometime.
- EFX PARAM is for adjusting delay repeat time.

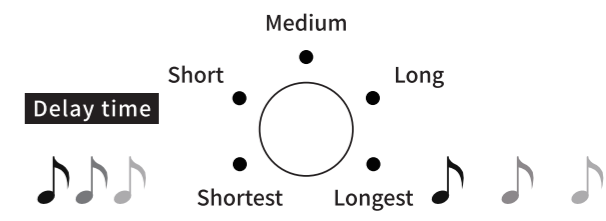


5. Delay & Reverb

 - When effect knob is on 5, you can get both delay & reverb effects.
- EFX PARAM is for adjusting delay time and reverb intensity.

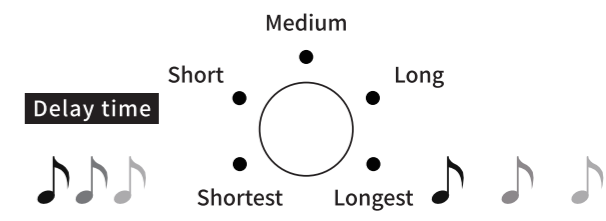


6. Shimmer

 - When effect knob is on 6, your note will be followed by a reverb and an octave higher in the background.
- EFX PARAM is for adjusting shimmer level.

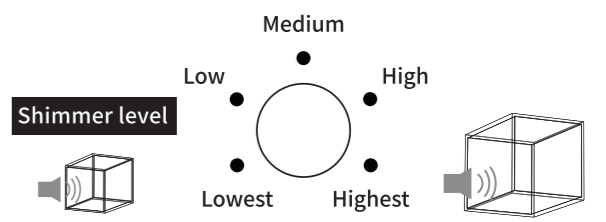

7. Chorus

 - When effect knob is on 7, you get chorus effect.
- EFX PARAM is for adjusting the rate of chorus.

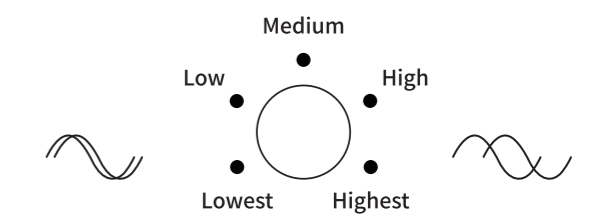

8. Flanger

- When effect knob is on 8, you get flanger effect.
- EFX PARAM is for adjusting the rate of flanger.

