

110V UNIT

Be protected in minutes

FireAvert is plug-n-play ready. Simply plug into the chosen appliance and sync it to the closest smoke alarm. FireAvert is activated by the smoke alarm, cutting power to the appliance when the smoke alarm is sounding. FireAvert helps mitigate your risk of having a fire. **See video below.**



Features

- · No batteries and maintenance free.
- No professional install needed.
- Fits behind almost all appliances.
- Reusable with a 25 year expected life.
- Resets at the electrical panel.
- Audible indication of sync with smoke alarm.
- Light indicates number of times activated.
- Sound detection of smoke alarm from up to 60 feet away.





110 V Appliances FA-E01-5-15



SEE HOW EASY IT IS TO INSTALL

Installation Process

FireAvert is plug-n-play ready. Simply plug into the back of the stove and sync it to the closest smoke alarm. FireAvert is activated by the smoke alarm, cutting power to the stove and oven when the smoke alarm is sounding. To reset the stove after it cuts off power simply flip the stove breaker off and then back on again. This will enable your stove to begin working again.



110V UNIT

| Electrical Specifications | | |
|---------------------------|---|--|
| Operating Voltage | 120v | |
| Amperage | 15 amps 60Hz | |
| Plug Configuration | NEMA 5-15 R/P | |
| Pole | 2 | |
| Wire | 3 wire grounding | |
| Fire Rating | Housing ABS fire retardant - UL94(5Va,V-0,V-1,V-2,HB) | |

| Physical Specifications | | | |
|-----------------------------|--|--|--|
| Dimensions | 3 ¾ inches (9.52 cm) x 2 inches (5.08 cm) x 3 ¾ inches (9.52 cm) - (LxWxH) | | |
| Weight | .9 LB (0.408 Kg) | | |
| Metal Valve Weight | .9 LB (0.408 Kg) | | |
| Color | Black | | |
| Operating Temperature Range | 32°F to 90°F (0°C to 33°C) | | |
| Operating Humidity Range | 0 to 80% RH non-compensating | | |
| Mounting | None required. Plugs directly into NEMA 5-15R outlet for electrical | | |
| Environmental | RY PB Free | | |

| LED Modes | | | |
|-----------------|-----------------|------------------------|-------------------------------|
| LED Mode | Green LED | Red LED | Speaker |
| Power Up | Solid Green LED | Intermittent Red Flash | Extended Chirping followed by |
| | | | Intermittent Chirping |
| Syncing | Solid Green LED | Blinks Red | Off Once Synced |
| Standby | Solid Greed LED | Off | Off |
| Protection Mode | Off | Solid | Off |
| | | | |

Warranty

CLICK HERE to download the FireAvert Warranty