

• Skip forward – Press + button for next song.

• Skip backward – Press – button for previous song.

• Volume up – Long press the + button to turn the volume up.

• Volume Down – Long press the – button to turn the volume down.

6. MODE

FM MODE

• Short press the M button to enter FM mode.

• Searching Frequency – Short press the power button to search the frequency.

• Switch Radio Channel – Short press +/- button to change the channel.

Bluetooth Mode

• Short press the M button to enter Bluetooth mode.

AUX MODE

• When headphone is connected to aux cable, it will automatically enter AUX mode.

SD CARD MODE

• When you have inserted SD card in headphone, it will automatically enter SD card mode.

7. Call Setup

• Redial – Double press power button to redial last number.

• Receive Call – Short press power button to accept a call.

• Reject call – Long press power button to reject a call.

8. Wear Your HOPPUP SONIC





CONNECT WITH US BY SCANNING THIS QR CODE



follow us

@hoppup India



GET STARTED


SAFETY INSTRUCTIONS

- The headphones should be stored in a dry place. Avoid contact with water, moisture & dust. It may affect the performance.
- To ensure a smooth connection, keep the headphones and your device within 10m.
- Avoid Dropping.
- Do not disassemble.
- Do not submerge in water.
- Avoid extreme temperature.
- Do not use the device outdoors during a thunderstorm.
- Use original or certified cables.
- Do not use any corrosive cleaner/oil to clean.

HEARING SAFETY

- To avoid hearing damage, do not listen for extended periods at high volume.
- Do not turn the volume so high that you're unable to hear your surroundings.
- You should use the caution or temporarily discontinue use in potentially hazardous situation.

WHAT'S INCLUDED



Headphones

Charging cable

Aux Wire

USING YOUR HOPPUP SONIC

1. POWER ON

- Long press the power button for 3 seconds to turn it ON.

2. POWER OFF

- Long press the power button for 3 seconds to turn it OFF.

3. CHARGE

- When connected to a charger, the red LED will be ON steadily.
- When the product is fully charged, the red LED will be OFF.
- Please use the USB cable supplied in the box to charge the case.

4. BLUETOOTH PAIRING

- After turning ON the headphone, headphone will automatically start pairing process.
- You can search for "HOPPUP SONIC" in your device' Bluetooth settings to confirm the pairing. Pairing process usually takes up to 3 seconds and then the headphone's LED will turn off automatically.

5. MUSIC

- Play Music – Press power button once to play the music.
- Pause Music – Press power button once to pause the music.

